

RF1058-20

Instruction Manual for Adjustable Base Remote Control

Model: RF1058-20

1. INTRODUCTION

This manual provides detailed instructions for the RF1058-20 replacement remote control, designed for compatibility with Leggett & Platt Performance and Mattress Firm 600 Series adjustable bed frames. This remote is a pre-owned, tested unit. To ensure proper functionality, verify that the buttons and their labels on this remote precisely match your original remote control.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert three (3) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.



Figure 1: Rear view of the RF1058-20 remote control with the battery compartment closed.



Figure 2: Rear view of the RF1058-20 remote control with the battery compartment open, revealing three AAA battery slots.



Figure 3: Detailed view of the battery compartment cover, displaying model number RF1058-20, regulatory information, and battery type (3x AAA/LR03 1.5V). Regulatory marking: E116103 0214.

2.2 Pairing (If Required)

Most replacement remotes for Leggett & Platt adjustable bases are pre-programmed. If your bed does not respond after battery installation, follow these general pairing steps. Specific pairing instructions may vary slightly by bed model; refer to your bed frame's original manual for precise details if these steps are unsuccessful:

1. Ensure the bed frame is plugged into a working power outlet.
2. Locate the pairing button on the control box under your bed frame. This button is often small and recessed.
3. Press and hold the pairing button on the control box for approximately 3-5 seconds until a light on the control box begins to flash.
4. Immediately press and hold the **FLAT** button on your new remote control for 3-5 seconds.
5. Release the button. The light on the control box should stop flashing, indicating successful pairing.
6. Test the remote by pressing various function buttons.

3. OPERATING INSTRUCTIONS

The RF1058-20 remote control features a variety of buttons for adjusting your bed frame. Familiarize yourself with each function:



Figure 4: Front view of the RF1058-20 remote control with all function buttons.

- **HEAD UP / HEAD DOWN:** Adjusts the head section of the bed upwards or downwards.
- **FOOT UP / FOOT DOWN:** Adjusts the foot section of the bed upwards or downwards.
- **SNORE:** Activates a gentle head elevation to help reduce snoring.
- **ZGRAV (Zero Gravity):** Positions the bed to a zero-gravity setting, elevating the head and foot to promote circulation and relieve pressure.
- **LIGHT:** Toggles the under-bed lighting on or off (if your bed frame is equipped with this feature).
- **LOCK / UNLOCK:** Locks or unlocks the remote control to prevent accidental adjustments.
- **ON/OFF:** Powers the bed frame on or off.
- **M1, M2, M3, M4 (Memory Presets):** Allows you to save and recall your favorite bed positions. To save a position, adjust the bed to your desired setting, then press and hold the desired memory button (M1-M4) until the bed briefly moves or a light flashes. To recall a saved position, simply press the corresponding memory button.
- **FLAT:** Returns the bed to a completely flat position.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always use fresh AAA batteries. Refer to Section 2.1 for battery installation instructions.

4.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

4.3 Storage

Store the remote in a dry place away from extreme temperatures and direct sunlight. If storing for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote Not Responding:**
 - Check if the batteries are correctly installed and not depleted. Replace if necessary.
 - Ensure the bed frame is properly plugged into a working power outlet.
 - Verify that the remote is not in 'LOCK' mode. Press the LOCK/UNLOCK button to toggle.
 - Attempt to re-pair the remote control with the bed frame (refer to Section 2.2).
- **Bed Only Moves Partially or Jerkily:**
 - Check for any obstructions under the bed frame that might be impeding movement.
 - Ensure the power cord is securely connected to both the wall outlet and the bed frame's control box.
- **Remote Buttons Feel Sticky or Unresponsive:**
 - Clean the remote control as described in Section 4.2.

6. SPECIFICATIONS

- **Model Number:** RF1058-20
- **Product Dimensions:** 7 x 2 x 0.5 inches
- **Item Weight:** 4 ounces
- **Batteries Required:** 3 AAA batteries
- **Manufacturer:** Leggett & Platt (for compatible bed frames)
- **Compatible Devices:** Leggett & Platt Performance/Mattress Firm 600 Series Bed Frames
- **Special Features:** Ergonomic, Lightweight
- **Color:** Black/White
- **Max Number of Supported Devices:** 1

7. WARRANTY & SUPPORT

As a pre-owned replacement part, this remote control may not carry a direct manufacturer's warranty from Leggett & Platt. Please refer to the seller's return policy or any specific warranty information provided at the time of purchase.

For technical assistance or warranty support related to this specific remote control, please contact:

Warranty Support: 844.628.8376

When contacting support, please have your remote control model number (RF1058-20) and purchase details available.

