

GarveeHome Dresser002

GarveeHome Rattan 5 Drawer Dresser Instruction Manual

Model: Dresser002

[Overview](#) [Safety Information](#) [Setup & Assembly](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The GarveeHome Rattan 5 Drawer Dresser is designed to provide functional storage with a natural aesthetic. Featuring five deep drawers and a wide top, this dresser is suitable for various rooms including bedrooms, living rooms, hallways, and kids' rooms. The natural rattan doors are hand-woven, offering a unique expression and enhancing air circulation, which helps in damp-proofing.

Key features include:

- **Unique Natural Rattan Design:** Hand-woven rattan doors for a distinctive look and improved airiness.
- **Ample Storage:** Five deep, smooth-running drawers and a wide top surface for practical organization.
- **Versatile Placement:** Ideal for various home settings, accommodating clothes, toys, and other essentials.
- **Enhanced Stability:** Equipped with four thick metal legs and internal horizontal reinforcement bars for durability and stability.
- **Easy Assembly:** Comes with all necessary parts, tools, and a detailed instruction manual for straightforward installation.



Image 1.1: The GarveeHome Rattan 5 Drawer Dresser in Natural finish, showcasing its design and five drawers.

2. SAFETY INFORMATION

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Always install the anti-tipping device provided with the dresser.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Place the heaviest items in the lowest drawers.
- Do not open more than one drawer at a time.
- Do not place heavy objects on top of the dresser unless it is securely anchored.

Read all instructions carefully before assembly and use. Keep this manual for future reference.



Image 2.1: Illustration of the anti-tipping device and its importance in preventing furniture tip-over incidents.

3. SETUP & ASSEMBLY

3.1 Package Contents

Before beginning assembly, ensure all parts listed below are present. If any parts are missing or damaged, contact customer support immediately.

- Dresser panels (top, bottom, sides, back)
- Drawer components (fronts with rattan, sides, backs, bottoms)
- Metal drawer slides
- Golden metal handles
- Support legs
- Hardware pack (screws, dowels, cam locks, etc.)

- Anti-tipping device
- Assembly tools (e.g., Allen wrench, screwdriver)
- Instruction manual

3.2 Assembly Steps

Assembly is designed to be straightforward. Follow the detailed step-by-step instructions provided in the included manual. A general overview of the process is as follows:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify all parts against the parts list in your manual.
2. **Assemble the Main Frame:** Connect the side panels to the top and bottom panels using the provided hardware. Ensure all connections are secure.
3. **Install Back Panel:** Attach the back panel to the main frame for added stability.
4. **Assemble Drawers:** Construct each of the five drawers. Attach the rattan front panels, side panels, back panels, and bottom panels. Install the golden metal handles onto the drawer fronts.
5. **Install Drawer Slides:** Attach the metal drawer slides to both the dresser frame and the assembled drawers. Ensure they are aligned correctly for smooth operation.
6. **Attach Support Legs:** Securely fasten the four thick metal support legs to the bottom of the dresser.
7. **Install Anti-Tipping Device:** This is a critical safety step. Follow the specific instructions in your manual to securely attach the anti-tipping device to the dresser and to a wall stud.

It is recommended to have two people for assembly to ensure safety and ease of construction.



Image 3.1: Detailed dimensions of the dresser (31.5"D x 16.1"W x 47.2"H) and individual drawers (29.5"W x 11.8"D x 4.7"H).

4. OPERATION

4.1 Using the Drawers

The dresser features five deep, smooth-running drawers designed for easy access and storage. To open a drawer, gently pull the golden metal handle. To close, push the drawer firmly until it is fully seated within the frame.

- Avoid forcing drawers open or closed.
- Distribute weight evenly within drawers to prevent strain on the slides.
- For safety, avoid opening multiple drawers simultaneously, especially the top ones, to maintain stability.



Image 4.1: The dresser with several drawers partially open, demonstrating storage capacity for clothing and other items.

5. MAINTENANCE

5.1 Cleaning

- **Wood Surfaces:** Wipe with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish. Dry immediately with a clean cloth.

- **Rattan Surfaces:** Gently dust with a soft brush or vacuum with a brush attachment. For spills, blot immediately with a clean, dry cloth. Avoid excessive moisture.

5.2 General Care

- Periodically check all screws and hardware to ensure they remain tight. Retighten as necessary.
- Avoid placing the dresser in direct sunlight or near heat sources to prevent warping or fading of the wood and rattan.
- Use coasters or protective pads under items placed on the dresser top to prevent scratches or water marks.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not slide smoothly or are misaligned.	Incorrect installation of drawer slides.	Review the assembly instructions for drawer and slide installation.
	Loose hardware on drawer slides or frame.	Ensure all screws on drawer slides and frame connections are tightened.
	Drawer components assembled incorrectly.	Disassemble and reassemble the problematic drawer, ensuring all parts are correctly oriented.
Dresser feels wobbly or unstable.	Loose connections in the main frame.	Check and tighten all assembly hardware for the main frame.
	Uneven floor surface.	Ensure the dresser is placed on a level surface. Use shims if necessary.
	Anti-tipping device not installed or improperly secured.	Verify the anti-tipping device is correctly installed and anchored to a wall stud.
Missing parts or damaged components upon arrival.	Manufacturing or shipping error.	Contact GarveeHome customer support immediately for replacement parts.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	GarveeHome
Model Name	Dresser002
Product Dimensions (D x W x H)	31.5" x 16.1" x 47.2"
Number of Drawers	5
Material	Rattan, Thickened MDF Board
Finish Type	Unfinished (Natural Wood Look)
Color	Natural
Item Weight	87 pounds
Included Components	Dresser, Drawers, Assembly Hardware, Anti-Tipping Device

Feature	Detail
UPC	820567023270



Image 7.1: Close-up of the thickened MDF board material used in the dresser construction.

8. WARRANTY & SUPPORT

8.1 Customer Support

For any questions regarding product assembly, missing parts, or general inquiries, please contact GarveeHome customer support. We are committed to resolving all your problems within 24 hours. You can typically find contact information on the packaging or through the retailer where the product was purchased.

8.2 Return Policy

This product is eligible for a 30-day return policy through Amazon. Please refer to Amazon's return policy for detailed information on eligibility and procedures.

© 2026 GarveeHome. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question