

Qoosea 01F

Qoosea MP3 Player Model 01F User Manual

Your guide to operating the Qoosea MP3 Player

1. INTRODUCTION

Thank you for choosing the Qoosea MP3 Player Model 01F. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read this manual thoroughly before use to ensure proper functionality and to maximize your listening experience.

2. PRODUCT OVERVIEW

2.1 Package Contents

The following items are included in your product package:

- Qoosea MP3 Player (Model 01F)
- USB Charging Cable
- Instruction Manual (Japanese)
- 32GB MicroSD Card (pre-installed or included separately)



Image: The Qoosea MP3 Player, USB charging cable, instruction manual, and 32GB microSD card, illustrating the complete package contents.

2.2 Device Layout

The Qoosea MP3 Player features a compact design with an intuitive button layout for easy navigation. It includes a 1.8-inch LCD screen, a central navigation pad, and a 3.5mm headphone jack.

録って・読んで・繰り返す

MP3プレーヤー1台で学習が完結



録



聴



読む

Image: Front view of the Qoosea MP3 Player Model 01F, showcasing its compact design and screen.

2.3 Portability

Weighing approximately 30g and featuring an anti-slip ergonomic design, the player is highly portable and comfortable to hold. A lanyard hole is included for secure carrying.



Image: The compact Qoosea MP3 Player fits easily inside a standard pencil case, highlighting its portability and lightweight

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB charging cable to the device's charging port and a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge provides over 20 hours of continuous playback.

3.2 Powering On/Off

- To power on: Press and hold the power button until the screen lights up.
- To power off: Press and hold the power button until the power-off prompt appears, then confirm.

3.3 Inserting a MicroSD Card

The device supports up to 128GB microSDXC cards for expanded storage. Locate the microSD card slot on the side of the player. Gently insert the microSD card with the gold contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

Use the central navigation pad to move through menus and select options. The 'Up', 'Down', 'Left', and 'Right' buttons navigate, and the central button confirms selections. The 'Back' button (usually on the side or a dedicated button) returns to the previous screen.

4.2 Music Playback

From the main menu, select 'Music'. You can browse by artist, album, genre, or all songs. The player supports FLAC, WAV, and MP3 formats, delivering high-fidelity lossless audio.

4.3 Bluetooth Connection

The player features Bluetooth 5.3 for stable wireless connections. To pair with Bluetooth headphones or speakers:

1. Go to 'Settings' and select 'Bluetooth'.
2. Turn Bluetooth 'On'.
3. The player will search for available devices. Select your device from the list to pair.

4.4 FM Radio

The device supports the Japanese FM band (76.00-90.00MHz). To use the FM radio:

1. Select 'FM Radio' from the main menu.
2. Use the auto-tuning function to scan and save up to 30 preset stations.
3. Navigate through saved stations using the navigation buttons.

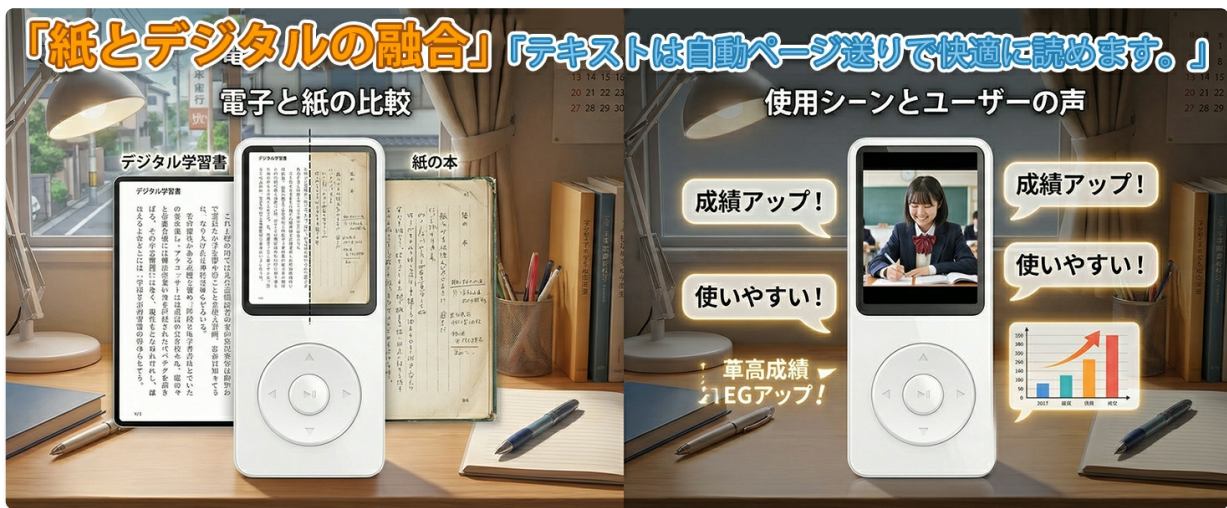


Image: The Qoosea MP3 Player screen showing the FM radio interface, tuned to 76.5 MHz.

4.5 Voice Recording

The built-in voice recorder allows you to capture audio in high-quality WAV format, suitable for meetings, lectures, or personal notes.

1. Select 'Record' from the main menu.
2. Press the appropriate button to start recording.
3. Press again to stop and save the recording.



Image: The Qoosea MP3 Player demonstrating its recording function, useful for capturing lectures or notes.

4.6 E-book Reader

The player supports e-book reading with UTF-8 compatibility and automatic page turning. Transfer your text files to the device to read on the go.



Image: The Goosea MP3 Player displaying text on its screen, illustrating its e-book reading capability with automatic page turning.

4.7 Repeat Playback for Learning

Utilize the repeat playback function for language learning or reviewing difficult audio sections.



Image: The Goosea MP3 Player screen showing the repeat playback function, ideal for focused learning and review.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid exposing the device to excessive moisture.

5.2 Storage

Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to about 50% to prolong its lifespan.

5.3 Battery Care

To maintain optimal battery performance, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for long periods.

6. TROUBLESHOOTING

6.1 Device Will Not Turn On

- Ensure the battery is charged. Connect the player to a power source and try again.
- If the device is unresponsive, try performing a reset (refer to the full Japanese manual for specific reset instructions if available, or hold the power button for 10-15 seconds).

6.2 Bluetooth Connection Issues

- Ensure both the MP3 player and the Bluetooth device are in pairing mode and within range.
- Turn Bluetooth off and on again on both devices.
- Delete previous pairings and try to pair again.

6.3 Short Battery Life

- Ensure the device is fully charged before use.
- Reduce screen brightness.
- Close unused applications or features running in the background.
- Note that actual battery life can vary based on usage patterns, volume levels, and features like Bluetooth or speaker use.

6.4 Cannot Play Music Files

- Verify that the music files are in a supported format (FLAC, WAV, MP3).
- Ensure the files are correctly transferred to the device or microSD card.
- Check if the volume is turned up.

7. SPECIFICATIONS

Feature	Detail
Brand	Qoosea
Model Number	01F
Memory Storage Capacity	32 GB (expandable up to 128 GB via microSDXC)
Screen Size	1.8 inches
Color	White
Connectivity	Bluetooth 5.3, 3.5mm Headphone Jack, USB
Supported Audio Formats	FLAC, WAV, MP3
Battery Life	Up to 20 hours (playback)
Special Features	FM Radio (76.00-90.00MHz), Voice Recorder, Built-in Speaker, E-book Reader

Weight	Approx. 30g
Country of Origin	China

8. WARRANTY AND SUPPORT

8.1 Product Warranty

This Qoosea MP3 Player Model 01F comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact your retailer or the manufacturer's customer support. Refer to the contact information provided with your purchase documentation or visit the official Qoosea website for support details.