

NUSTE CLB-6006

NUSTE CLB-6006 Portable Tire Inflator Instruction Manual

Model: CLB-6006 | Brand: NUSTE

INTRODUCTION

Thank you for choosing the NUSTE CLB-6006 Portable Tire Inflator. This device is designed to provide efficient and convenient inflation for various items, including car tires, motorcycle tires, bicycle tires, and sports balls. Featuring a powerful 150PSI output, auto shut-off, a digital pressure gauge, and an integrated LED light, this cordless air pump is an essential tool for roadside emergencies, routine maintenance, and recreational activities. Please read this manual thoroughly before use to ensure safe and optimal performance.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Keep the device away from children.
- Do not operate the inflator in wet conditions or near flammable liquids or gases.
- Ensure the air hose is securely connected before starting inflation.
- Do not overinflate. Always refer to the recommended pressure for your specific item (tire, ball, etc.).
- Monitor the inflation process to prevent damage.
- If the device overheats, turn it off and allow it to cool down before further use.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Store the inflator in a cool, dry place when not in use.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x NUSTE Portable Tire Inflator
- 1 x Air Hose

- 1 x Presta Valve
- 1 x Ball Needle
- 2 x Air Nozzles
- 1 x Type-C Charging Cable
- 1 x User Manual

PRODUCT OVERVIEW

The NUSTE CLB-6006 Portable Tire Inflator is equipped with several features designed for convenience and efficiency.

Fast Inflation

This inflator delivers a powerful 150PSI output, capable of inflating a standard car tire (195/55/R15) from 30 to 36 PSI in approximately 1 minute. Its robust battery supports inflating up to 4 car tires on a single charge.



Image: The NUSTE inflator connected to a car tire, showing a digital display indicating fast inflation within 1 minute.

Smart Modes and Auto Shut-Off

The device features 4 intuitive preset modes for cars, motorcycles, bicycles, and sports balls, plus a custom mode. The advanced digital display shows real-time pressure, and the auto shut-off function stops inflation automatically once the preset pressure is reached, preventing over-inflation.

SAFE AUTO STOP



Image: The NUSTE inflator connected to a bicycle tire, highlighting the auto shut-off feature with preset PSI levels for different vehicle types.

ACCURATE REAL-TIME TIRE PRESSURE

5 inflation modes

Real-time tire pressure



Preset tire pressure

4 units

Image: A close-up of the NUSTE inflator's digital screen showing real-time tire pressure and preset pressure, with icons for 5 inflation modes.

Cordless, Compact, and Portable Design

Designed for portability, this inflator is compact and cordless, making it easy to store in a glove compartment, backpack, or cycling kit. The integrated high-capacity battery ensures you can use it anywhere without needing an external power source.

COMPACT AND PORTABLE



Image: A hand holding the NUSTE inflator, showing its compact and portable design against a background of a car and bicycles.

3-in-1 LED Light & Emergency Ready

The built-in multi-mode LED light offers three functions: steady illumination for dark environments, a flashing strobe for roadside visibility, and an SOS signal for emergencies. The device also features a USB-A port for charging other devices, making it a versatile emergency tool.

3 LED LIGHT MODES



Image: The NUSTE inflator demonstrating its three LED light modes: normal, flashing, and SOS, useful for emergencies.

SETUP

1. Charging the Inflator

Before first use, fully charge the NUSTE Portable Tire Inflator using the provided Type-C charging cable. Connect the Type-C end to the inflator's charging port and the USB-A end to a compatible USB power adapter (not included) or a computer USB port. The battery indicator on the digital display will show the charging status.



Image: The NUSTE inflator connected via USB-A to a smartphone, demonstrating its capability to act as an emergency power bank.

2. Attaching the Air Hose and Nozzle

1. Screw the air hose securely onto the inflator's air outlet port.
2. Select the appropriate nozzle for the item you wish to inflate.
 - **Standard Nozzle:** For car, motorcycle, and most bicycle tires (Schrader valve).
 - **Presta Valve Adapter:** For bicycles with Presta valves.
 - **Ball Needle:** For sports balls.
 - **Air Nozzles (2x):** For inflatable toys, swimming rings, etc.
3. Attach the selected nozzle to the free end of the air hose.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press and hold the power button (usually the central button on the control panel) for 3 seconds to turn the inflator on or off. The digital display will illuminate.

2. Selecting Inflation Mode

After powering on, press the mode button (often labeled with an 'M' or an icon representing different vehicles/items) to cycle through the preset modes: Car, Motorcycle, Bicycle, Ball, and Custom. The corresponding icon will appear on the display.

UNIVERSAL COMPATIBILITY



Cars

26-50 PSI



Motorcycles

26-45 PSI



Bicycles

30-145 PSI



Balls

4-16 PSI



Custom

3-150 PSI



Image: The NUSTE inflator displaying its universal compatibility with cars, motorcycles, bicycles, and balls, along with their respective recommended pressure ranges.

3. Setting Target Pressure

Once a mode is selected, the preset pressure for that mode will be displayed. Use the '+' and '-' buttons to adjust the target pressure to your desired value. Refer to your vehicle's manual or the item's specifications for recommended pressure.

4. Connecting to Item and Starting Inflation

1. Connect the attached nozzle firmly to the valve stem of the item you wish to inflate. Ensure a tight seal to prevent air leakage.
2. The display will show the current pressure of the item.
3. Press the power button once to start inflation. The inflator will begin pumping air, and the real-time pressure will be displayed.
4. The inflator will automatically stop once the preset target pressure is reached.
5. Carefully disconnect the nozzle from the valve stem.



Image: A four-step visual guide demonstrating how to use the inflator: connect nozzle, power on, select mode/preset pressure, and start inflation until auto-stop.

5. Changing Pressure Units

While the inflator is on, short press the unit button (often labeled 'UNIT' or with an icon) to cycle through available pressure units: PSI, KPA, BAR, and KG/CM².

6. Using the LED Light

Short press the light button (often indicated by a light bulb icon) to cycle through the three LED light modes: Normal illumination, Flashing strobe, and SOS signal. Press again to turn off the light.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the inflator with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the device and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the inflator at least once every three months, even if not in regular use. Avoid fully discharging the battery frequently.
- **Hose and Nozzles:** Inspect the air hose and nozzles regularly for any signs of wear or damage. Replace if necessary to ensure proper function and prevent air leaks.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Inflator does not turn on.	Battery is depleted.	Charge the inflator fully using the provided Type-C cable.
Inflator starts but no air comes out.	Air hose or nozzle is not securely attached. Air hose is blocked.	Ensure the air hose is tightly screwed onto the inflator and the nozzle is firmly connected to the valve. Check for any kinks or blockages in the hose.
Inflation is slow or pressure reading is inaccurate.	Air leakage from connections. Low battery.	Check all connections for leaks. Ensure the battery is sufficiently charged.
Inflator stops before reaching target pressure.	Battery is low. Overheat protection activated.	Recharge the battery. If the device feels hot, allow it to cool down for 10-15 minutes before resuming use.
Digital display is not working.	Device is off or battery is dead. Malfunction.	Ensure the device is powered on and charged. If the issue persists, contact customer support.

SPECIFICATIONS

Model Number	CLB-6006
Brand	NUSTE
Maximum Pressure	150 PSI
Material	ABS Plastic
Item Weight	0.56 Kilograms (1.23 pounds)
Package Dimensions	6.1 x 3.39 x 3.19 inches
Batteries	2 x 12V batteries (internal, required)
Charging Port	Type-C
Output Port	USB-A (for emergency charging)

WARRANTY AND SUPPORT

NUSTE products are manufactured to high-quality standards. For warranty information, technical support, or any questions regarding your NUSTE CLB-6006 Portable Tire Inflator, please refer to the contact information provided on the product packaging or visit the official NUSTE website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question