

[Manuals.plus](#) /

> [Restmo](#) /

> RESTMO Heavy Duty Pulsating Sprinkler (Model O-LS-13-GN) Instruction Manual

## Restmo O-LS-13-GN

# RESTMO Heavy Duty Pulsating Sprinkler (Model O-LS-13-GN)

Instruction Manual

## INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the safe and efficient use of your RESTMO Heavy Duty Pulsating Sprinkler, Model O-LS-13-GN. This high-performance sprinkler is designed for watering large lawns, gardens, and yards, offering extensive coverage and precise control. Please read this manual thoroughly before initial setup and operation to ensure optimal performance and longevity of your product.



Image: RESTMO Pulsating Sprinkler demonstrating 360-degree rotation and even watering coverage.

## PRODUCT FEATURES

- **Massive 7,600 Sq. Ft. Coverage:** Delivers ultra-wide coverage at 60 PSI, ideal for large areas.
- **Even-Watering Technology:** Unique vertical-axis press lever and gear system ensures uniform water

distribution.

- **Full 360° Rotation Adjustment:** Two easy-turn adjustment tabs allow precise control over watering rotation from 0° to 360°.
- **Convenient Distance Slide Control:** Top-mounted slider for easy adjustment of spray range.
- **Stable & Durable Construction:** Built with a sturdy metal base and high-impact plastic nozzle for stability and long-lasting performance.

## SETUP

The RESTMO Pulsating Sprinkler is designed for quick and easy assembly. Follow these steps to prepare your sprinkler for use:

1. **Assemble the Sprinkler:** The sprinkler head and base are designed for easy assembly. Simply screw the sprinkler head onto the base until it is secure.
2. **Connect to Water Source:** Attach your garden hose to the quick-connect inlet located on the base of the sprinkler. Ensure the connection is tight to prevent leaks.
3. **Placement:** Position the sprinkler on a stable, level surface in the area you intend to water.



Image: Close-up view of the quick connect mechanism on the sprinkler base, ready for hose attachment.

Your browser does not support the video tag.

Video: Official RESTMO product video demonstrating the quick connect feature and initial operation of the pulsating sprinkler.

## OPERATING INSTRUCTIONS

---

Once the sprinkler is set up, you can begin watering:

1. **Turn on Water:** Slowly turn on the water supply from your spigot. Ensure the water pressure is at least 30 PSI for the sprinkler to function correctly and achieve its stated coverage.
2. **Observe Spray Pattern:** Allow the sprinkler to operate for a few moments to observe its initial spray pattern and coverage.
3. **Adjust as Needed:** Refer to the 'Adjustments' section to fine-tune the spray distance, rotation, and low-spray settings according to your specific watering needs.



Image: The RESTMO Pulsating Sprinkler in operation, showcasing its gear-driven motion for even water distribution across the lawn.

## ADJUSTMENTS

---

Your RESTMO sprinkler offers several adjustment options for customized watering:

## Distance Adjustment

Use the top-mounted distance slider to control how far the water sprays. Slide it forward to achieve the maximum distance (up to 7,600 sq. ft. at 60 PSI) and backward for shorter distances, allowing you to water specific areas precisely.

**Our Sprinkler**

**Ordinary Sprinkler**

**Ensures Smooth, Even Water Distribution Across Entire Area**

**360° Rotatable**

Flexible Coverage Up to 7600 sq.ft. for Large Area Watering




Image: A hand adjusting the distance slider on the sprinkler head to modify the water spray range.

## Rotation Adjustment

The two easy-turn adjustment tabs located on the base allow you to set the desired watering arc. You can adjust the rotation from 0° (fixed position) to a full 360° for complete circular coverage. Simply move the tabs to define the start and end points of the rotation.



**Vs**

**Gear-Driven Motion**



Image: Close-up of the 0-360 degree rotation tabs on the sprinkler base, used for setting the watering arc.

## Low-Spray Control

The low-spray lever allows for close-range watering, ensuring that areas immediately surrounding the sprinkler receive adequate moisture without excessive force. This helps prevent over-spraying and water waste.



## Low-Spray Control

Superior Close-Range Coverage Beyond Ordinary Sprinklers



Image: Illustration of the low-spray lever in action, providing gentle, close-range watering.

## MAINTENANCE

---

Proper maintenance will extend the life of your sprinkler:

- **Winter Storage:** Always drain the sprinkler completely when not in use, especially before winter. Freezing water can cause significant damage to internal components.
- **Water Quality:** Use only clean, cold water. Sediment or debris in the water can clog the nozzle or internal mechanisms.
- **Cleaning:** Periodically inspect the nozzle and the filter screen at the water inlet for any buildup or debris. Clean them gently with water and a soft brush if necessary.

## TROUBLESHOOTING

---

If you encounter issues with your sprinkler, consider the following common solutions:

- **Sprinkler Not Rotating or Uneven Coverage:**
  - Ensure your water pressure is at least 30 PSI. Insufficient pressure can prevent proper rotation and reduce spray distance.
  - Check that the rotation adjustment tabs are not set to a fixed position or obstructed.
  - Inspect the nozzle and water inlet filter for any clogs from debris or sediment.
- **Reduced Spray Distance:**
  - Verify the distance slider is set to the desired range.
  - Confirm adequate water pressure.
  - Check for nozzle clogs.
- **Leaks at Connection Points:**
  - Ensure all connections are tightened securely.
  - Check the rubber washer in the hose connection for proper seating and damage. Replace if necessary.

## SPECIFICATIONS

---

Feature	Specification
Brand	Restmo
Model Number	O-LS-13-GN
Material	Metal, Plastic
Coverage Area	Up to 7,600 Sq. Ft. (at 60 PSI)
Rotation Angle	0-360° Adjustable
Minimum Water Pressure	30 PSI
Item Dimensions (L x W x H)	8.8 x 5.4 x 3 inches

## WARRANTY AND SUPPORT

**Warranty:** RESTMO provides a one-year worry-free warranty for this product. For any warranty claims, please email your order ID to [support@restmo-link.com](mailto:support@restmo-link.com). Our dedicated support team will respond to your inquiry within 24 hours.

### Contact Support:

- **Email:** [support@restmo-link.com](mailto:support@restmo-link.com)
- **Phone (Toll-Free):** +1 866-876-6888
- **Phone (Direct):** +1 929-329-4398
- **Website:** [www.restmo.online](http://www.restmo.online)

For visual setup instructions and product demonstrations, you can search for 'RESTMO' on YouTube or scan the QR code provided on the product packaging to access instructional videos.