

Reemix SG-5655X

Reemix SG-5655X Vacuum Steamer for Clothes User Manual

Model: SG-5655X

INTRODUCTION

Thank you for choosing the Reemix SG-5655X Vacuum Steamer for Clothes. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new garment steamer. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the power supply matches the voltage specified on the appliance.
- Do not immerse the steamer, power cord, or plug in water or other liquids.
- Keep the steamer out of reach of children and pets.
- Never direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance.
- Unplug the steamer from the power outlet before filling or emptying the water tank, and before cleaning or storing.
- Do not operate the steamer if the cord or plug is damaged, or if the appliance malfunctions or has been dropped.
- Allow the steamer to cool completely before storing.
- Do not touch the air outlet when using the machine.



PRODUCT OVERVIEW

Components

- Handheld Garment Steamer Unit
- 440ML Detachable Water Tank
- Measuring Cup

- Fabric Brush Attachment
- User Manual (this document)

Key Features

- **One-Hand Operation with Vacuum Suction:** Designed to hold fabric taut, allowing for effortless vertical steaming without needing a second hand to pull clothes.
- **3-Level Adjustable Suction (up to 4500Pa):** Customize suction power for different fabric types and wrinkle severity.
- **3 Adjustable Steam Settings:** Select appropriate steam levels for delicate fabrics like silk to heavier materials like denim.
- **440ML Detachable Water Tank:** Provides 15-30 minutes of continuous steaming, sufficient for 7-10 garments per fill. Easy to detach for refilling.
- **Fast & Uniform Results:** Combines vacuum and steam to penetrate fibers deeply, smoothing creases quickly. Features a 360° airflow design to prevent hot spots.
- **Lightweight & Portable Design:** Compact and easy to store or travel with. Constructed with a durable ABS shell and stainless steel nozzle.
- **Automatic Shut-off:** For enhanced safety, the steamer automatically powers off after 10 minutes of inactivity.
- **LED Display:** Provides clear indication of selected suction and steam levels.

Three-Level Adjustable Suction Power

Max 4500PA is recommended

III

~ 2000PA

≈ 3400PA

≈ 4500PA



Image: The Reemix Vacuum Steamer highlighting its three-level adjustable suction power, ranging from 2000Pa to 4500Pa.

Vacuum and Steam

III

Our vacuum steamer fuses suction & steam—no board needed!
Vacuum holds fabric taut, steam smoothes wrinkles.
Glide vertically, one-hand ease.



Image: The Reemix Vacuum Steamer in use, illustrating its combined vacuum and steam function for wrinkle removal.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:**
 - Detach the water tank from the main unit by pulling it downwards.
 - Open the rubber stopper on the water tank.
 - Using the provided measuring cup, fill the tank with distilled or demineralized water. Do not exceed the MAX fill line.
 - Close the rubber stopper securely and reattach the water tank to the main unit until it clicks into place.

Steam More with One Fill

|||



440ML Removable Water Tank

continuous steam time 15 to 30 min

7-10 Clothes/Fill

Image: Illustration of the 440ML removable water tank, showing how to fill it and indicating continuous steam time and clothes capacity per fill.

3. **Power Connection:** Plug the steamer into a suitable electrical outlet. The LED display will illuminate.

OPERATING INSTRUCTIONS

1. **Power On:** Press the power button on the handle. The steamer will begin to heat up, indicated by a flashing light. It will be ready for use when the light becomes solid (typically within 30-60 seconds).
2. **Select Steam Level:** Use the steam control button to cycle through the 3 available steam settings (low, medium, high)

to match your fabric type.

3. **Select Suction Level:** Use the suction control button to choose one of the 3 suction levels (low, medium, high, up to 4500Pa). The vacuum function helps hold the fabric taut against the steaming plate.
4. **Prepare Garment:** Hang the garment on a hanger or lay it flat on a clean, heat-resistant surface. The vacuum function is particularly effective for vertical steaming.
5. **Begin Steaming:** Hold the steamer with the nozzle facing the garment. Gently press the steam trigger to release steam. Glide the steamer over the fabric, allowing the vacuum to pull the fabric taut for efficient wrinkle removal.
6. **Fabric Brush (Optional):** For heavier fabrics or to remove lint, attach the fabric brush to the nozzle before steaming.
7. **After Use:** Once steaming is complete, release the steam trigger and press the power button to turn off the steamer. Unplug the appliance from the outlet.


Handheld Steam Engine with Adsorption Function

Automatically grips fabric, one-handed operation

III



Image: A user demonstrating one-handed operation of the Reemix Vacuum Steamer on a hanging dress, highlighting its ease of use.

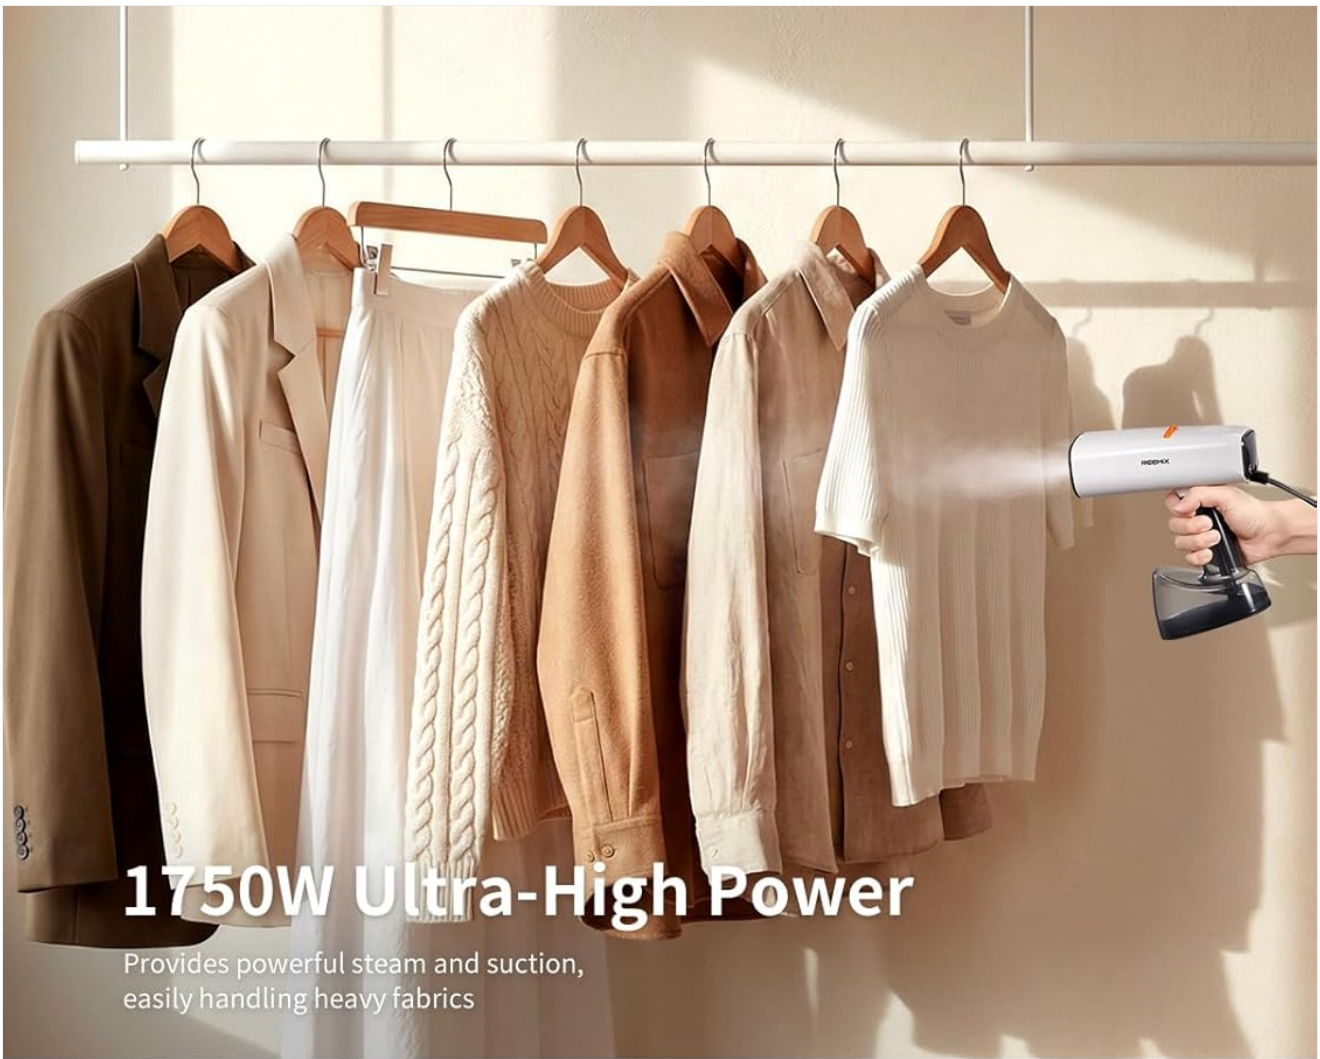

1750W Ultra-High Power

Provides powerful steam and suction,
easily handling heavy fabrics



Cotton



Linen




Silk



Nylon



Wool

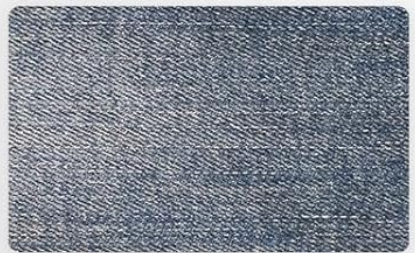

Denim

Image: The Reemix Vacuum Steamer shown to be effective on a range of fabrics including Cotton, Linen, Silk, Nylon, Wool, and Denim.

Iron and Wear Instantly

Perfect for your on-the-go life

|||



Image: A visual comparison of a wrinkled shirt (Before) and a smoothed shirt (After) using the Reemix Vacuum Steamer.

MAINTENANCE

Cleaning

- Always unplug the steamer and allow it to cool completely before cleaning.

- Empty any remaining water from the detachable tank.
- Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For mineral buildup in the nozzle, mix equal parts water and white vinegar. Fill the tank with this solution and run the steamer until the tank is empty. Repeat with clean water to rinse.

Storage

- Ensure the water tank is empty and the steamer is completely dry before storing.
- Store the steamer in a cool, dry place, away from direct sunlight and moisture.
- Wrap the power cord loosely around the base of the unit or use a cord tie.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty or low. Steamer not heated sufficiently. Mineral buildup in nozzle.	Refill water tank. Allow more time for preheating. Descale the steamer as per maintenance instructions.
Water leaking from nozzle	Water tank not properly seated. Overfilled water tank. Steamer not fully heated.	Ensure tank is securely attached. Do not exceed MAX fill line. Wait for the steamer to fully heat up before use.
Steamer not turning on	Not plugged in. Power outlet issue. Auto-shutoff activated.	Check power cord connection. Try a different outlet. Press the power button again to restart.
Suction not working effectively	Air outlet blocked. Incorrect suction level selected.	Ensure air outlet is clear. Adjust to a higher suction level.

SPECIFICATIONS

- **Brand:** Reemix
- **Model Number:** SG-5655X
- **Style:** Vacuum Garment Steamer
- **Color:** White
- **Power:** 1750W
- **Suction Power:** Up to 4500Pa (3 levels)
- **Water Tank Capacity:** 440 Milliliters
- **Continuous Steam Time:** 15-30 minutes
- **Included Components:** Brush, Handheld Garment Steamer, Measuring Cup, User Manual

WARRANTY AND SUPPORT

Reemix products are designed and manufactured to the highest quality standards. For information regarding warranty coverage or technical support, please refer to the warranty card included with your product or contact Reemix customer service through the retailer where the product was purchased.

Please retain your proof of purchase for warranty claims.

© 2026 Reemix. All rights reserved.