



Manuals.plus /

› Portronics /

› Portronics 30W Dash Wireless Bluetooth Portable Speaker with Dual Karaoke Mic User Manual

## Portronics POR-3334

# Portronics 30W Dash Wireless Bluetooth Portable Speaker with Dual Karaoke Mic User Manual

Model: POR-3334

## INTRODUCTION

---

Welcome to the Portronics 30W Dash Wireless Bluetooth Portable Speaker user manual. This guide provides detailed instructions for setting up, operating, maintaining, and troubleshooting your speaker, ensuring you get the most out of its features, including the dual wireless karaoke microphones, RGB LED lights, and versatile connectivity options.

## WHAT'S IN THE BOX

---

- Party Speaker (1 N)
- Charging Cable (1 N)
- Documentation (1 N)
- Wireless Karaoke Mic (2 N)

## PRODUCT OVERVIEW

---

Familiarize yourself with the components and controls of your Portronics Dash speaker.


Upto

5

Hours  
Playtime



The Portronics Dash speaker featuring its compact design, RGB LED ring, and integrated handle.

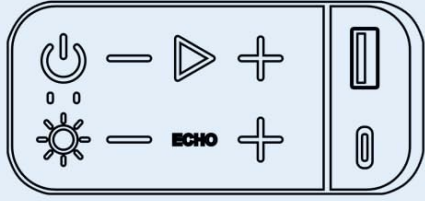

# Easy Control



PORTRONICS



# Easy Grab Handle



Detailed view of the speaker's top control panel, showing buttons for power, playback, RGB lights, and echo adjustment.



# Dual Wireless Karaoke Mic


With Voice Changer

The two wireless karaoke microphones included with the speaker, featuring power and volume controls.



# RGB Ring

## LED Lights

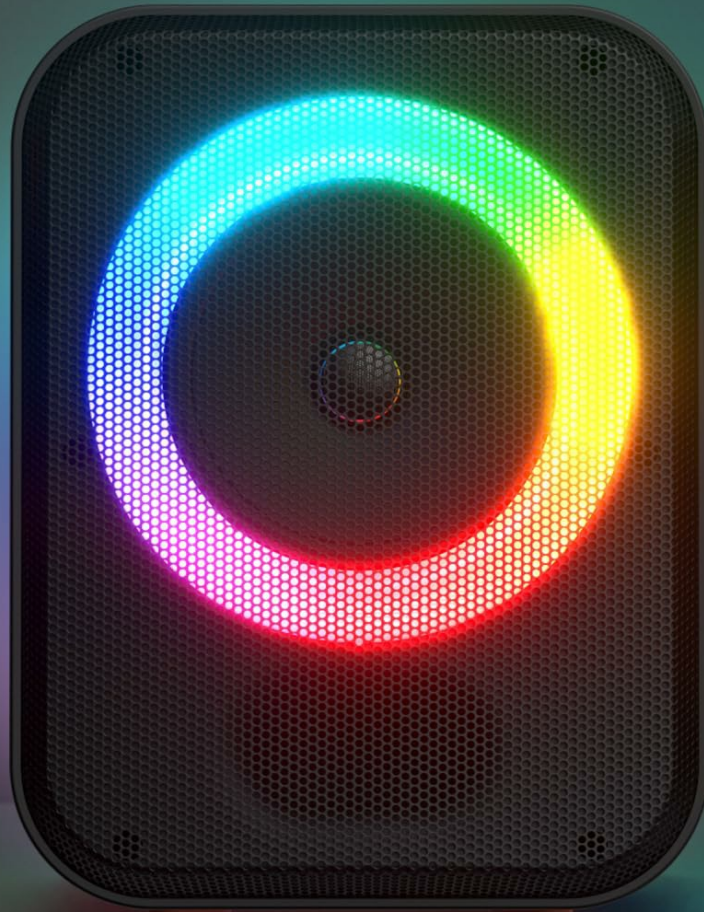

A close-up of the dynamic RGB LED light ring, which syncs with music.

# Bluetooth 5.4V

## Seamless Pairing



The speaker, microphones, and a smartphone, demonstrating seamless Bluetooth 5.4 pairing.

# Type C

Fast Charging



# Echo Control

The speaker highlighting its Type-C fast charging port and dedicated echo control feature.



The speaker with a visual representation of its up to 5 hours of playtime on a single charge.

## SETUP

---

### Charging the Speaker

Connect the provided Type-C charging cable to the speaker's Type-C port and a compatible USB power adapter (not included). The charging indicator will illuminate to show the charging status. A full charge provides up to 5 hours of playtime.

### Charging the Microphones

The wireless microphones are powered by internal rechargeable batteries. Connect them to a USB power source using their respective charging cables (if provided) or follow the specific charging instructions included with the microphones.

### Powering On/Off

Press and hold the **Power** button on the speaker's control panel to turn the device on or off. A sound prompt will indicate the power status.

## OPERATING INSTRUCTIONS

---

### Bluetooth Pairing

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. On your smartphone or other Bluetooth-enabled device, navigate to the Bluetooth settings.
3. Search for available devices and select "Portronics Dash" from the list.
4. A confirmation sound will indicate successful pairing. The LED light will become solid.

### Using Karaoke Microphones

1. Power on both wireless microphones. They are designed to automatically connect to the speaker.
2. Use the **Echo Control** buttons (**ECHO +** / **ECHO -**) on the speaker's control panel to adjust the echo effect for your vocals.
3. Some microphones may feature a voice changer function; refer to the microphone's specific instructions for activation and use.

### Playing Music from Other Sources

#### USB Drive

Insert a USB drive containing audio files into the USB port on the speaker. The speaker will automatically detect the drive and begin playing music.

#### TF Card

Insert a TF (microSD) card with audio files into the TF card slot. The speaker will automatically detect the card and play music.

#### AUX-In

Connect an external audio device (e.g., MP3 player, laptop) to the speaker's AUX-In port using a 3.5mm AUX cable. The speaker will automatically switch to AUX mode.

### RGB Light Control

Press the dedicated **RGB Light** button (often indicated by a light bulb icon) on the speaker's control panel to cycle through different light modes or to turn the lights off.

### Volume Control

Use the **Volume +** and **Volume -** buttons on the speaker's control panel to adjust the master volume level.

## MAINTENANCE

---

### Cleaning

Wipe the speaker and microphones with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and internal components.

### Storage

Store the device in a cool, dry place away from direct sunlight, high temperatures, and excessive humidity. When storing for extended periods, ensure the battery is partially charged (around 50%) to maintain battery health.

### Battery Care

To prolong the lifespan of the built-in rechargeable battery, fully charge the speaker before its first use. Recharge the battery regularly, even if the speaker is not in use for extended periods. Avoid completely discharging the battery frequently.

## TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the Type-C charging cable and try powering on again.
No sound from the speaker.	Check the volume level on both the speaker and the connected device. Ensure the correct input mode (Bluetooth, USB, AUX, TF) is selected.
Bluetooth pairing fails.	Ensure the speaker is in pairing mode. Turn off Bluetooth on other nearby devices to avoid interference. Move the speaker closer to your device.
Microphones are not working.	Ensure microphones are powered on and charged. Check their connection to the speaker. Adjust microphone volume and echo settings on the speaker.

## SPECIFICATIONS

Feature	Value
Brand	Portronics
Model Number	POR-3334
Speaker Maximum Output Power	30 Watts
Connectivity Technology	Bluetooth V5.4, TF Card, AUX-In, USB Drive, Type-C
Audio Output Mode	Stereo
Battery Average Life	5 Hours
Item Dimensions (D x W x H)	31D x 20W x 18.2H Centimeters
Item Weight	1567 Grams
Enclosure Material	ABS Plastic
Product Features	Dual Karaoke Mic, ECHO Control, RGB LED Light
Box Contents	Party Speaker 1 N, Charging Cable 1 N, Documentation 1 N, Wireless Karaoke Mic 2N

## WARRANTY AND SUPPORT

### Warranty Information

This Portronics Dash speaker comes with a **1-year warranty** from the date of purchase. Please retain your purchase receipt or invoice as proof of purchase for any warranty claims.

### Customer Support

For any assistance, technical support, or warranty-related inquiries, please contact Portronics customer service:

- Email: [help@portronics.com](mailto:help@portronics.com)

- Phone: +91 9555-245-245
- Manufacturer Address: Portronics Digital Pvt Ltd, First Floor Property No D 8 Upper Basement Sector 8 Noida Uttar Pradesh 201301