

[Manuals.plus](#) /

› [SHEYAY](#) /

› SHEYAY Wearable Panties Vibrator - 4-in-1 App Remote Control Thrusting Dildo User Manual

SHEYAY thrustingdildo1

SHEYAY Wearable Panties Vibrator User Manual

Model: thrustingdildo1

INTRODUCTION

Thank you for choosing the SHEYAY Wearable Panties Vibrator. This innovative 4-in-1 device combines a thrusting dildo, vibrating wand, wearable panty, and app remote control for versatile experiences. Designed for hands-free use, it features dual motors for both internal and external stimulation. This manual provides essential information for safe and effective use, setup, operation, and maintenance of your device.

SAFETY INFORMATION

- This product is intended for adult use only (18 years and older).
- Read all instructions before first use.
- Discontinue use immediately if you experience any discomfort, pain, or irritation.
- Consult a healthcare professional if you have any pre-existing medical conditions or concerns.
- Keep out of reach of children.
- Do not use if the product appears damaged or defective.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

PACKAGE CONTENTS

Your SHEYAY Wearable Panties Vibrator package should include:

- SHEYAY Wearable Panties Vibrator device
- Adjustable wearable panties
- USB charging cable (specific to this device)
- User Manual

The product is shipped in discreet packaging to ensure privacy.

SETUP

1. Initial Charging

Before first use, fully charge the device. Connect the provided USB charging cable to the device's magnetic charging port and a USB power source. The charging time is approximately 60 minutes for a full charge, providing 40-90 minutes of working time.



Image: Internal mechanism of the device, illustrating the thrusting action.

2. Attaching the Wearable Panties

The device is designed to be worn hands-free with the included adjustable panties. Follow these steps to attach the device:

1. Locate the attachment points on the device and the straps of the wearable panties.
2. Securely fasten the device to the panties using the provided clips or loops.
3. Adjust the elastic straps of the panties to ensure a comfortable and secure fit. The panties are designed to fit sizes S to ML.

Mini Rider Friction Fun MAX



Image: Illustration of the device attached to wearable panties, demonstrating adjustable fit for various sizes.

Your browser does not support the video tag.

Video: Demonstrates how to attach the wearable vibrator to the adjustable panties for a secure fit.

3. App Download and Pairing

For enhanced control and features, download the companion app. The app is compatible with mainstream systems and allows for customization of vibration patterns, long-distance control, and interactive experiences.

- Scan the QR code in the product packaging or search for the app name (e.g., "Nana goo" as mentioned in features) in your device's app store.
- Follow the in-app instructions to pair your device via Bluetooth.



Image: The app interface for remote control, showing various settings and connection options.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button on the device for a few seconds to turn it on or off.

2. Mode Selection

The device features two powerful, independent motors offering 5 vibration modes and 5 thrusting modes. These can be used simultaneously or separately.

- **Vibration Modes:** Short press the vibration button to cycle through the 5 distinct vibration patterns.
- **Thrusting Modes:** Short press the thrusting button to cycle through the 5 distinct thrusting patterns.
- **Combined Use:** Activate both vibration and thrusting modes simultaneously for a dual stimulation experience.

Full-Range Simulated Textures + Unstop Thrusting



Image: Diagram highlighting the dual motors and their function in providing both thrusting and vibrating sensations.

Your browser does not support the video tag.

Video: Demonstrates the wearable thrusting dildo in action, highlighting its app control capabilities.

APP CONTROL

The companion app offers advanced control and customization:

- **Customization:** Create and save your favorite vibration and thrusting patterns.
- **Long-Distance Control:** Connect with a partner remotely for shared experiences.
- **Voice Interaction:** The AI companion system allows for real-time voice interaction, adapting patterns to your cues.


Your browser does not support the video tag.

Video: Illustrates the wearable vibrator's use for both couples and solo play, emphasizing its versatility.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your device.

- **Cleaning:** The device is made from body-safe silicone and features an IPX7 waterproof design. Clean the device thoroughly with warm water and a mild, toy-safe soap before and after each use. Rinse thoroughly and pat dry with a lint-free cloth.
- **Storage:** Store the device in a clean, dry place away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.
- **Lubrication:** Use only water-based lubricants with this device to avoid damaging the silicone material.

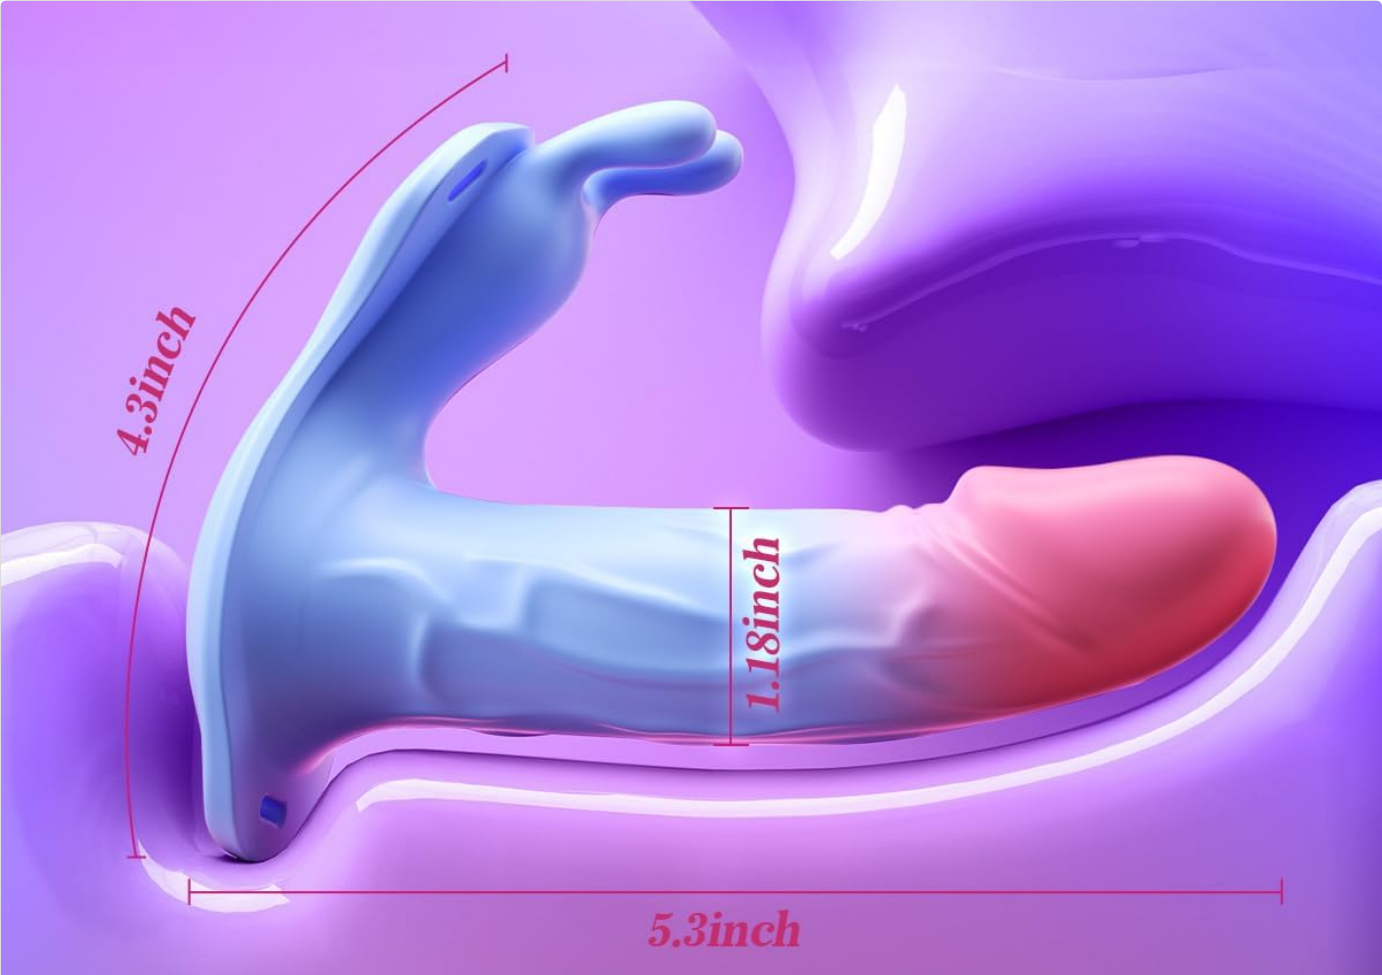

Hands free & Wearable Vibe



Waist(inch):22-34
Hips(inch):30-43



IPX7 Waterproof



Privacy Packaging

Image: Device dimensions, highlighting its IPX7 waterproof rating for easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully using the provided USB cable. Ensure the magnetic charger is properly connected.
Short battery life (e.g., 20 minutes).	Incomplete charge or battery degradation.	Ensure the device is fully charged for 60 minutes. If issues persist, contact customer support.
Device does not connect to the app.	Bluetooth not enabled, app not updated, or device not in pairing mode.	Ensure Bluetooth is enabled on your smartphone. Update the app to the latest version. Follow in-app instructions to put the device into pairing mode.
Discomfort during use.	Improper fit or lack of lubrication.	Adjust the wearable panties for a more comfortable fit. Use a generous amount of water-based lubricant. Discontinue use if discomfort persists.
Buttons are difficult to access during use.	Placement of the device.	Consider using the app for control, which offers more convenient access to modes and settings.

SPECIFICATIONS

- **Product Dimensions:** 4.3 x 1.18 x 5.3 inches
- **Weight:** 8.15 ounces
- **Model Number:** thrustingdildo1
- **Material:** Body-safe Silicone
- **Color:** Pink Blue
- **Battery:** 1 x 9V battery (included)
- **Charging Time:** Approximately 60 minutes
- **Working Time:** 40-90 minutes
- **Waterproof Rating:** IPX7
- **Noise Level:** Vibration mode below 40 dB, Thrusting mode below 50 dB

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official SHEYAY website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GDTQN2SX>

More documents and user manuals: <https://manuals.plus/>