

[Manuals.plus](#) /

› [IBELL](#) /

› IBELL AERO FRY 550 Digital Air Fryer User Manual

## IBELL AEROFRY550

# IBELL AERO FRY 550 Digital Air Fryer User Manual

Model: AEROFRY550

## INTRODUCTION

Thank you for choosing the IBELL AERO FRY 550 Digital Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods by using rapid hot air circulation. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your air fryer. Please read it thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the air fryer is placed on a stable, heat-resistant surface.
- Do not block any air vents.

## PRODUCT OVERVIEW

The IBELL AERO FRY 550 Digital Air Fryer is designed for versatile cooking with minimal oil. Key components and features include:

- **Main Unit:** The primary housing of the air fryer.
- **Detachable Fryer Basket:** Non-stick basket for holding food during cooking.
- **Digital Touch Control Panel:** Intuitive interface for setting temperature, time, and selecting presets.
- **Rapid Hot Air Technology:** Ensures fast and even cooking.
- **Adjustable Temperature Control:** Allows precise temperature settings for various recipes.
- **Timer Function:** For accurate cooking duration.
- **5.5 Litre Capacity:** Suitable for family-sized meals.
- **1350W Power:** For efficient heating.



Figure 1: Front view of the IBELL AERO FRY 550 Digital Air Fryer, showcasing the digital control panel and handle.



Figure 2: The air fryer highlighting its 1350W power and 5.5L capacity, with the basket pulled out containing food.

## SETUP

1. **Unpacking:** Carefully remove all packaging materials from the air fryer and its accessories. Ensure all components listed in the "What's in the Box" section are present.
2. **Initial Cleaning:** Before first use, clean the fryer basket and any removable parts with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Dry all parts thoroughly.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the back and sides of the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded wall outlet. The appliance is now ready for use.

## OPERATING INSTRUCTIONS

## Basic Operation

1. **Preparation:** Place the food you wish to cook into the detachable fryer basket. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the fryer basket back into the main unit until it clicks securely into place.
3. **Power On:** Plug the air fryer into a power outlet. The digital display will illuminate.
4. **Set Temperature and Time:**
  - Use the temperature control buttons (usually '+' and '-') to set the desired cooking temperature.
  - Use the timer control buttons (usually '+' and '-') to set the desired cooking time.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process. The air fryer will start heating and circulating hot air.
6. **Shaking Food (Optional):** For some foods, it is recommended to shake the basket halfway through the cooking time to ensure even cooking. Carefully pull out the basket, shake the contents, and reinsert it. The air fryer will resume cooking automatically.
7. **Completion:** Once the timer reaches zero, the air fryer will beep, indicating that cooking is complete. Carefully pull out the basket and remove the cooked food.



Figure 3: Demonstrating the one-touch operation and digital control panel for setting temperature and time.

## Using Preset Menus

The IBELL AERO FRY 550 comes with 8 preset menus for common dishes. These presets automatically set the optimal temperature and time for specific foods.

1. **Select Preset:** After placing food in the basket and inserting it, press the Menu button (or the icon corresponding to the desired food) on the digital control panel.
2. **Adjust (Optional):** You can manually adjust the temperature or time after selecting a preset if you prefer.
3. **Start Cooking:** Press the Start/Pause button to begin.

# Rapid Hot Air Technology

Cook faster. Cook evenly.



Figure 4: The digital display illustrating the 8 preset menu options with recommended cooking times and temperatures. The presets include options for Chicken, Steak, Fish, Cake, Egg Tart, French Fries, Shrimp, and Smoked Sausage, each with a suggested time and temperature.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Fryer Basket:** The detachable fryer basket is non-stick and dishwasher safe. For manual cleaning, wash with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
3. **Clean Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn food residue, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles. Ensure the

appliance is completely cool and unplugged.

6. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

## TROUBLESHOOTING

If you encounter issues with your IBELL AERO FRY 550, refer to the following common problems and solutions:

| Problem                                | Possible Cause                                                           | Solution                                                                                                                                     |
|----------------------------------------|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Air fryer does not turn on.            | Not plugged in; power outlet malfunction; appliance malfunction.         | Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support. |
| Food is not cooked evenly.             | Basket is overfilled; food not shaken; incorrect temperature/time.       | Do not overfill the basket. Shake the basket halfway through cooking. Adjust temperature and time as needed for specific foods.              |
| White smoke coming from the appliance. | Grease residue from previous use; excessive oil on food.                 | Clean the basket and interior thoroughly after each use. Remove excess oil from food before air frying.                                      |
| Food is not crispy.                    | Not enough cooking time; temperature too low; too much moisture in food. | Increase cooking time or temperature. Pat food dry before cooking. Ensure not to overcrowd the basket.                                       |

## SPECIFICATIONS

- Model Name:** AEROFRY550
- Capacity:** 5.5 Liters
- Wattage:** 1350 Watts
- Control Method:** Touch Control
- Special Features:** Digital Control, Easy-Clean Non-Stick Basket, Rapid Hot Air Technology, Temperature Control, Timer
- Product Dimensions:** 31D x 26W x 28.5H Centimeters
- Material:** Plastic
- Item Weight:** 4.25 Kilograms
- Nonstick Coating:** Yes
- Dishwasher Safe Parts:** Yes (Fryer Basket)
- Recommended Uses:** Bake, Fry, Roast
- Country of Origin:** India

## WARRANTY AND SUPPORT

The IBELL AERO FRY 550 Digital Air Fryer comes with a comprehensive warranty and dedicated customer support.

### Warranty Information

This product includes a **1 Year Standard Warranty**. Additionally, you can receive a **1 Year Additional Warranty** upon successful product registration. Registration should be completed within 30 days from the date of purchase to avail the extended warranty. The total warranty period can be up to 2 years.

# 8 Preset Menus

Cook every favourite dish perfectly at the touch of a button

|                                                                                                                                                                                                                |                                                                                                                                                                                                                    |                                                                                                                                                                                                                |                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><b>Chicken</b><br><br>16 Min    190°C    | <br><b>Steak</b><br><br>9 Min    180°C           | <br><b>Fish</b><br><br>8 Min    180°C      | <br><b>Cake</b><br><br>20 Min    180°C            |
| <br><b>Egg Tart</b><br><br>12 Min    170°C | <br><b>French Fries</b><br><br>20 Min    200°C | <br><b>Shrimp</b><br><br>10 Min    180°C | <br><b>Smoked Sausage</b><br><br>8 Min    180°C |

Figure 5: Warranty details badge for the IBELL AERO FRY 550.

## Customer Support

For any queries, assistance, or warranty claims, please contact IBELL Technologies:

**Manufacturer:** IBELL Technologies, Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105, India

**Phone:** 1800 2020 260

**Email:** [connect@ibellstore.com](mailto:connect@ibellstore.com)

© 2026 IBELL Technologies. All rights reserved.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**