

[Manuals.plus](#) /

› [BEISAR](#) /

› BEISAR 15.35" Anal Vibrator Butt Plug User Manual (Model B0H33YLYJ7)

BEISAR B0H33YLYJ7

BEISAR 15.35" Anal Vibrator Butt Plug User Manual

Model: B0H33YLYJ7

INTRODUCTION

Thank you for choosing the BEISAR 15.35" Anal Vibrator Butt Plug. This device is designed for personal pleasure and prostate massage, featuring alternating-sized beads, 10 vibration modes, and app control. Crafted from liquid silicone, it is waterproof and suitable for both men and women. This manual provides essential information for safe and effective use, maintenance, and care of your product.



Image: The BEISAR 15.35 inch Anal Vibrator Butt Plug, showcasing its overall design and size.

SAFETY INFORMATION

- Always clean the product thoroughly before and after each use.
- Use with a water-based lubricant only. Oil-based lubricants can damage silicone products.
- Discontinue use immediately if you experience any discomfort or pain.
- Keep out of reach of children.
- Do not use if the product appears damaged.

PACKAGE CONTENTS

- BEISAR 15.35" Anal Vibrator Butt Plug
- USB Charging Cable
- User Manual

SETUP

1. Initial Cleaning

Before first use, wash the product thoroughly with warm water and a mild, toy-safe soap. Rinse completely and allow to air dry.

2. Charging the Device

Locate the charging port on the device. Connect the provided USB charging cable to the device and plug the other end into a standard USB power adapter (not included) or a computer's USB port. The device takes approximately 120 minutes to fully charge, providing about 60 minutes of working time.

3. App Installation and Connection

This product supports app control for enhanced functionality. Download the companion application from your smartphone's app store. Follow the in-app instructions to pair your device via Bluetooth. The app allows for remote control and access to various vibration patterns.

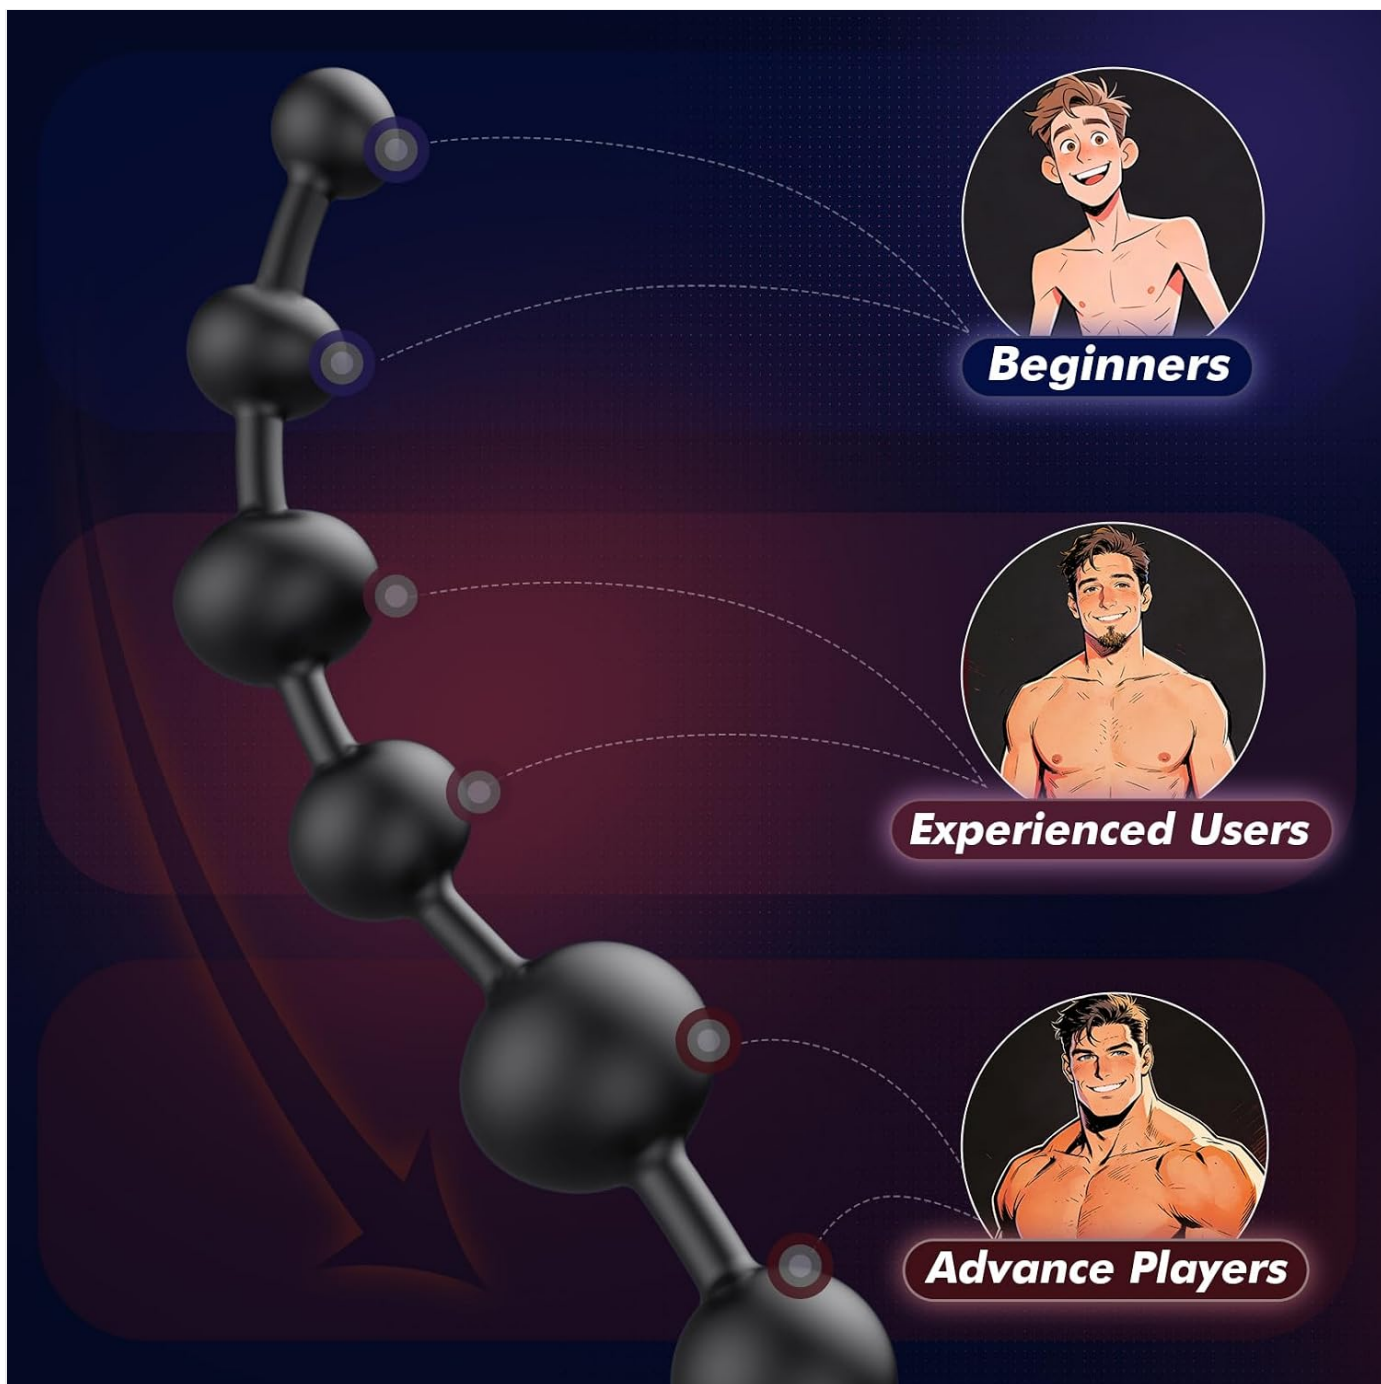 


Image: A smartphone displaying the control application interface, demonstrating app connectivity.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button on the device for a few seconds to turn it on or off.

2. Adjusting Vibration Modes

The device features 10 distinct vibration patterns. Short press the power button to cycle through these modes. Alternatively, use the connected smartphone application for more precise control and to explore additional functions.



Image: An illustration highlighting the dual motors and 10 vibration modes, emphasizing quiet operation.

3. Usage Guidelines

Apply a generous amount of water-based lubricant to the device and the area of application. The device features graduated beads, with a smaller tip for easier insertion. The sturdy ring handle provides a secure grip for controlled use.

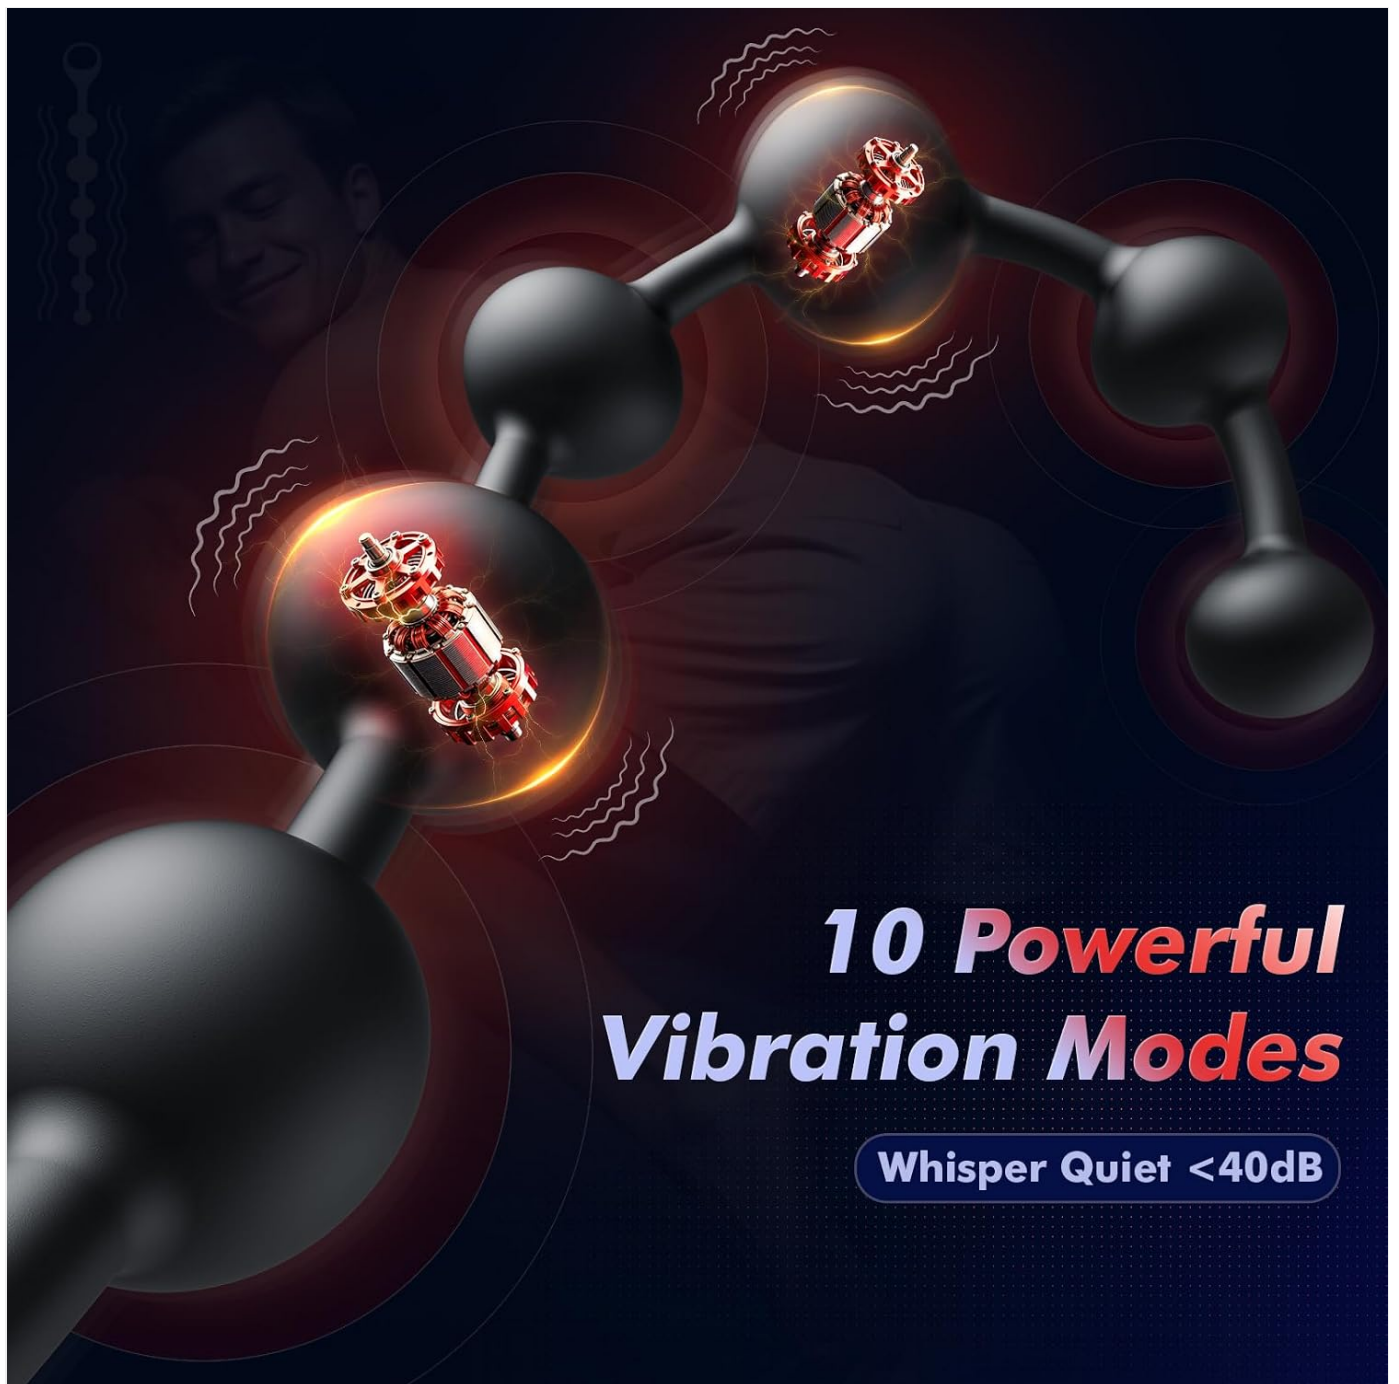 


Image: A visual representation of the product in use, illustrating the sensation of each bead.

Pleasure Starts with Design

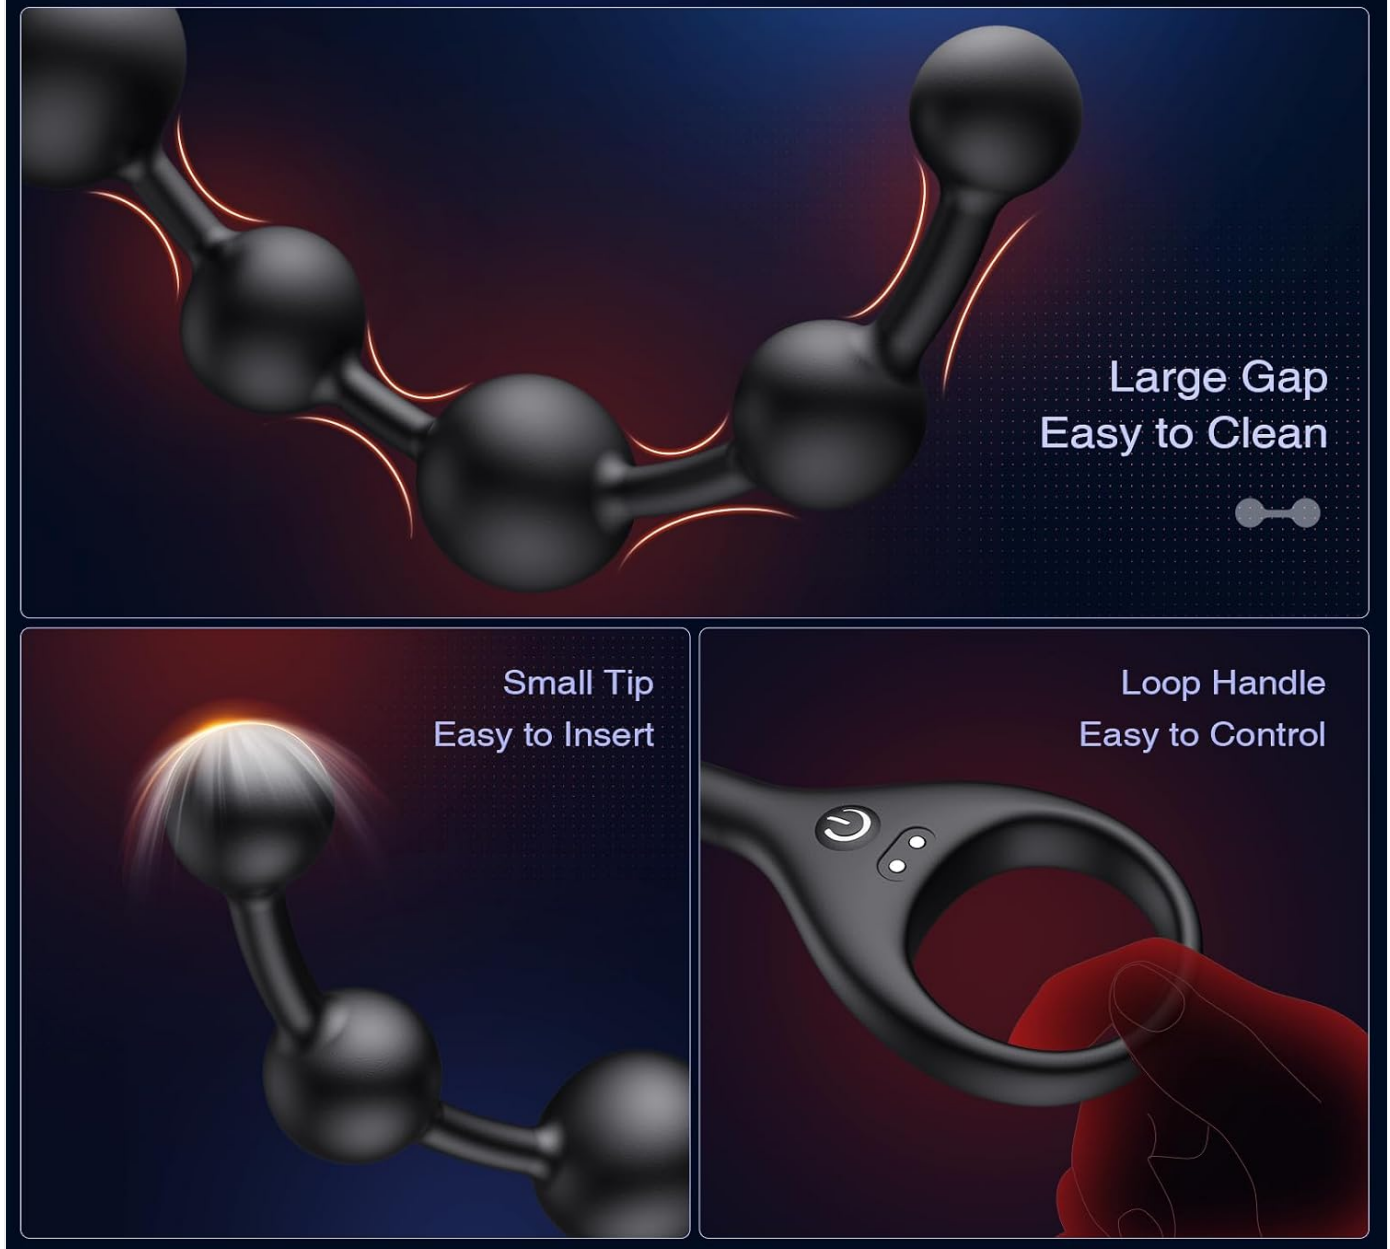 


Image: Illustrations demonstrating multiple ways to use the product.

MAINTENANCE

1. Cleaning

After each use, clean the product thoroughly with warm water and a mild, toy-safe soap. The silicone material is waterproof, allowing for easy rinsing. Ensure all residue is removed, especially from the gaps between the beads. Allow the device to air dry completely before storage.

Skin-Safe & Waterproof

Durable & Adjustable

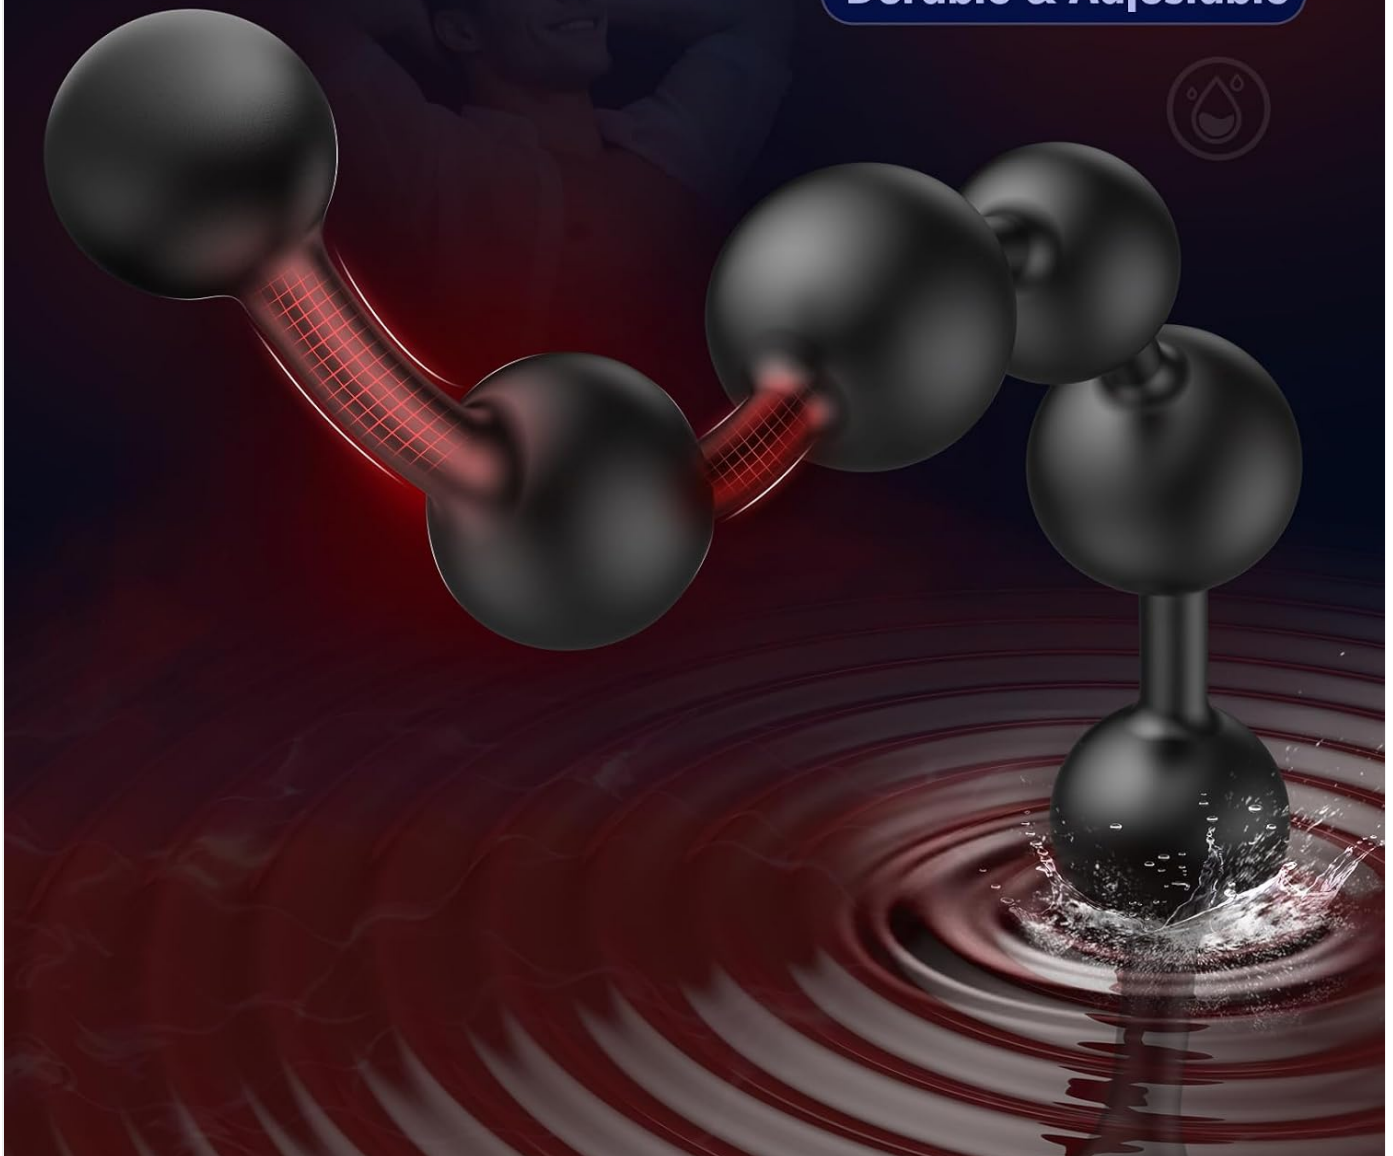 


Image: Detailed view of the product's design features, including easy-to-clean gaps and a control handle.

2. Storage

Store the device in a clean, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other silicone products to prevent material degradation.

TROUBLESHOOTING

- **Device Not Turning On:** Ensure the device is fully charged. Connect it to the USB charging cable and allow it to charge for 120 minutes.
- **Vibrations Are Weak or Inconsistent:** The battery may be low. Recharge the device. If the issue persists after charging, contact customer support.
- **App Connectivity Issues:**
 - Ensure Bluetooth is enabled on your smartphone.
 - Make sure the device is powered on and within range of your smartphone.

- Try restarting both the device and the app.
- If problems persist, try reinstalling the app.

- **Discomfort During Use:** Ensure sufficient water-based lubricant is used. If discomfort continues, discontinue use.

SPECIFICATIONS

Model	B0H33YLYJ7
Material	Liquid Silicone
Color	Ivory Black
Total Length	15.35 inches
Bead Sizes (approximate)	0.86in, 1.20in, 1.26in, 1.18in, 1.41in, 1.34in (graduated)
Vibration Modes	10
Noise Level	Below 45dB
Water Resistance	Waterproof
Charging Time	120 minutes
Working Time	Up to 60 minutes
Control Method	On-device button, Smartphone App

Pattern, Pleasure, Passion

All at your fingertips



Image: Detailed dimensions of the product, highlighting the alternating bead sizes.

WARRANTY AND SUPPORT

BEISAR offers 12 months of after-sales support for this product. Your privacy is our priority, and all inquiries are handled discreetly.

If you encounter any issues or have questions regarding your BEISAR Anal Vibrator Butt Plug, please do not hesitate to contact our professional service team. We are committed to resolving your problems as quickly as possible.

Contact information can typically be found on the product packaging or the official BEISAR website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GDX33QBZ>

More documents and user manuals: **<https://manuals.plus/>**