



[Manuals.plus](#) /

> [AECOJOY](#) /

> AECOJOY 10' x 12' Outdoor Wooden Gazebo Instruction Manual (Model 16555MS)

AECOJOY 16555MS

AECOJOY 10' x 12' Outdoor Wooden Gazebo Instruction Manual

Model: 16555MS | Brand: AECOJOY

1. IMPORTANT SAFETY INFORMATION

Always follow the provided installation instructions carefully. Ensure the gazebo is securely anchored to the ground to prevent it from tipping over in strong winds. Do not attempt to assemble or disassemble the gazebo during adverse weather conditions. Regularly inspect the gazebo for any signs of wear or damage and perform necessary maintenance to ensure its safety and longevity.

2. PRODUCT OVERVIEW

The AECOJOY 10' x 12' Outdoor Wooden Gazebo provides a robust and versatile outdoor shelter. Designed for stability, it can withstand winds up to 70 mph and supports over 20 inches of snow. Its hardtop roof offers complete shade and UV protection, while the waterproof design minimizes leaks. This gazebo can be installed as a freestanding unit or wall-mounted.

3. PACKAGE CONTENTS

Refer to the detailed packing list included with your product for a complete inventory of all components, hardware, and tools required for assembly. Verify all parts are present and undamaged before beginning installation.

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the AECOJOY Wooden Gazebo requires careful attention to detail. It is recommended to have at least two people for installation. Refer to the detailed manual included in your product packaging for step-by-step instructions and component identification. Ensure all parts are accounted for before beginning assembly.

4.1 Anchoring


Securely anchor the gazebo to the ground or an adjacent wall using appropriate hardware as instructed in the manual.

This is crucial for ensuring stability, especially in windy conditions. The product is designed for both freestanding and wall-mounted configurations.




Figure 1: Gazebo Dimensions. This diagram illustrates the key dimensions of the 10x12 wooden lean-to gazebo, including length, width, and height measurements for various structural points. The overall dimensions are approximately 142.5 inches long, 111 inches wide, and 96.5 inches high.

WHERE DO YOU PLAN TO PLACE IT?

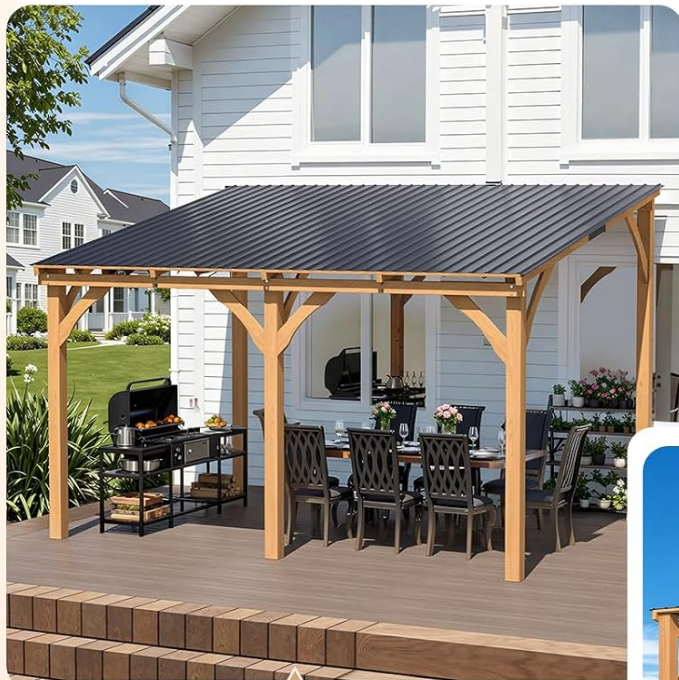

Wall-mounted Gazebo

More than just a wall-mounted lean-to gazebo that requires no external screws for wall attachment, it can also stand freely without damaging the ground.

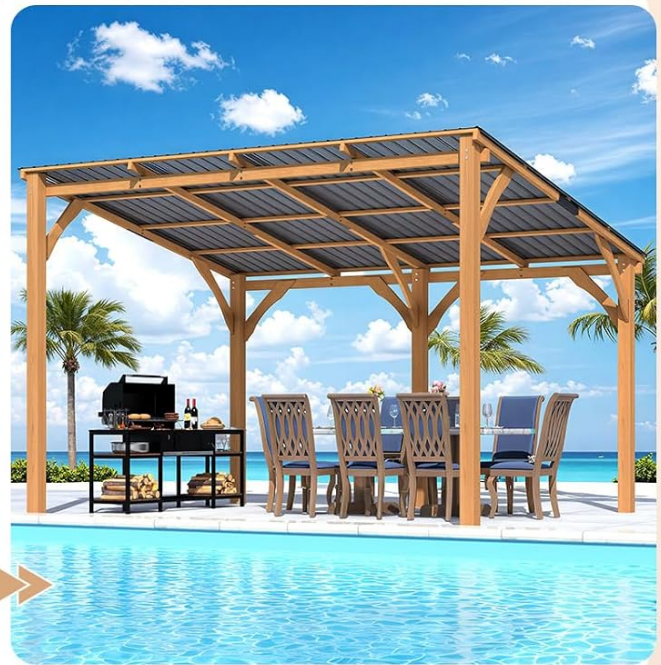

Freestanding Gazebo

Figure 2: Placement Options. This image demonstrates the two primary installation options for the gazebo: a wall-mounted configuration, where it attaches to an existing structure, and a freestanding configuration, suitable for open areas like a poolside.

5. OPERATING INSTRUCTIONS

The gazebo is designed to provide shade and protection from various weather conditions. The hardtop roof offers full shade and UV protection during summer. In winter, the structure is engineered to support over 20 inches of snow and withstand winds up to 70 mph. Timely clearing of heavy snow accumulation is recommended to maintain structural integrity.

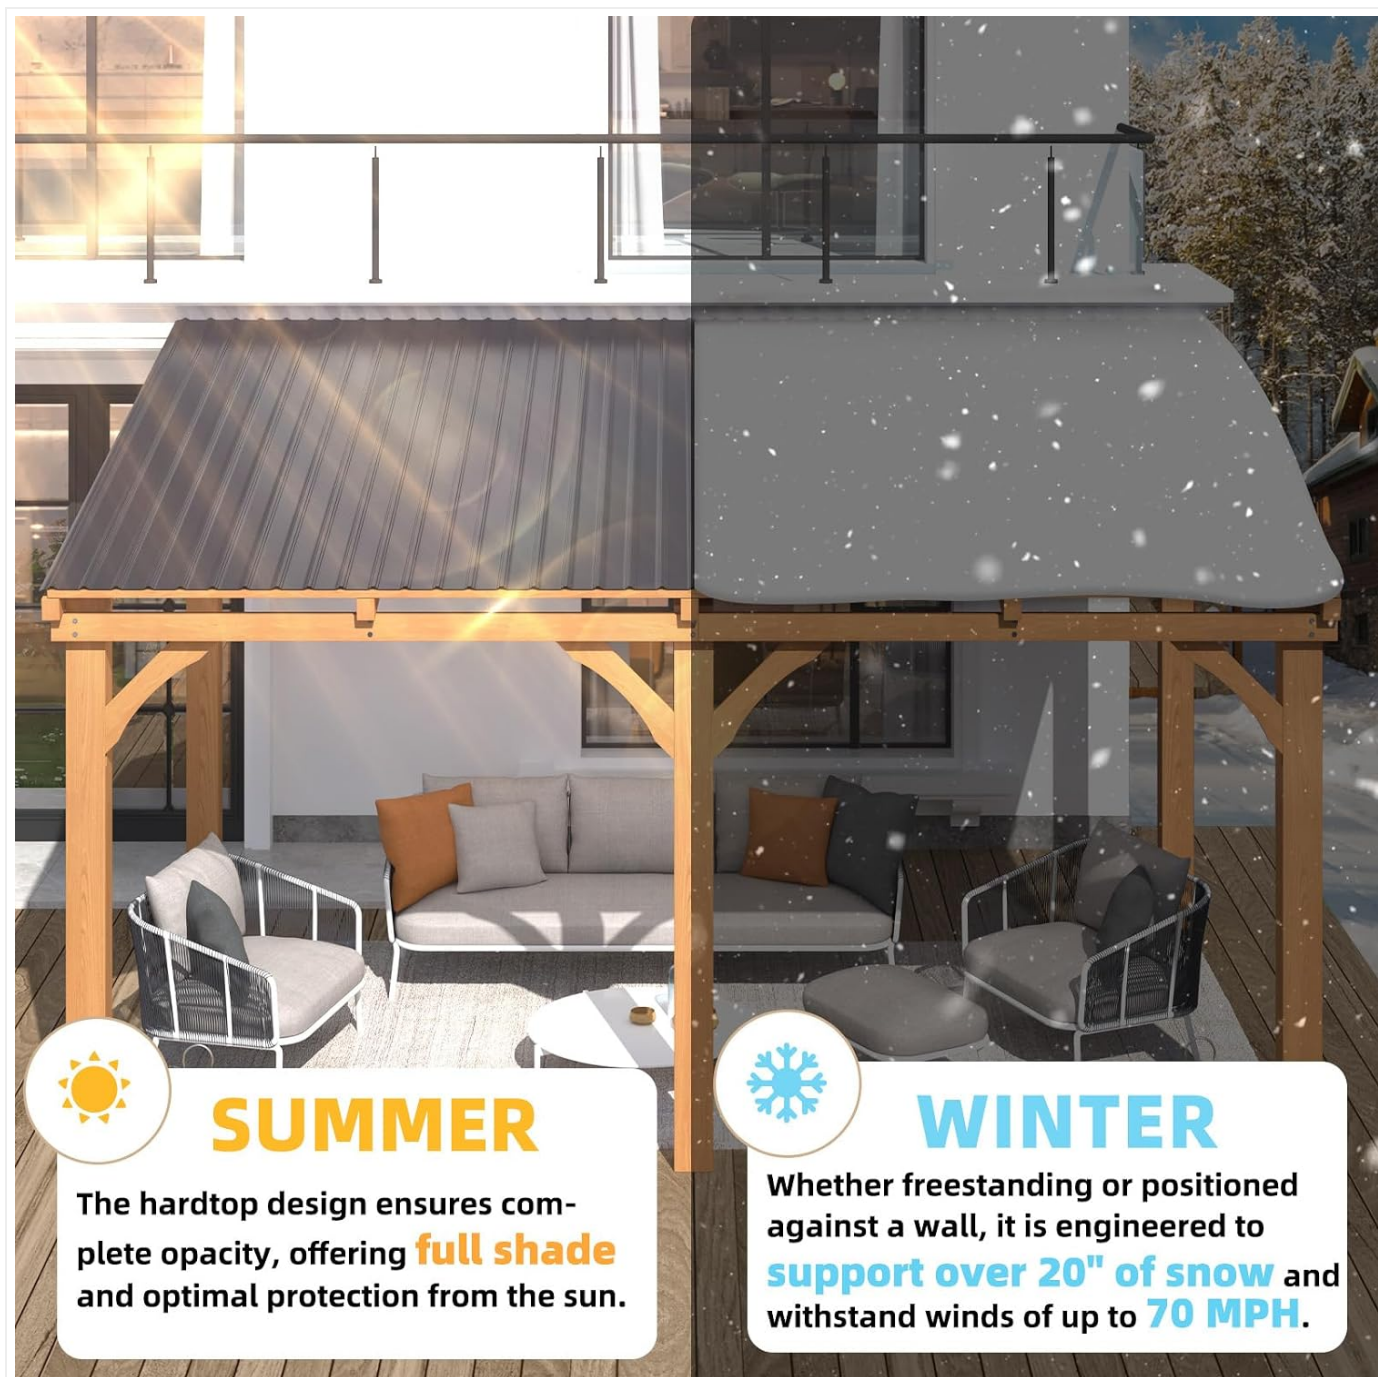


Figure 3: Seasonal Performance. This image highlights the gazebo's year-round utility, showing its hardtop design providing full shade in summer and its ability to support over 20 inches of snow and withstand 70 MPH winds in winter.



Figure 4: Waterproof Design. This diagram details the waterproofing features, showing how hardtop panels sit flush against the wall, the wall-side wooden frame provides stable support, and the sloped design directs rainwater flow to prevent leaks.

6. MAINTENANCE

Regularly inspect all connections and fasteners to ensure they remain tight. Check for any signs of wear, rust, or damage to the wooden frame or roof panels. Clean the roof panels periodically to remove debris and maintain optimal water drainage. In areas with heavy snowfall, clear accumulated snow from the roof promptly to prevent excessive load and potential damage.

7. TROUBLESHOOTING

7.1 Leaks

If leaks occur, ensure all roof panels are correctly installed and sealed according to the manual. Verify that the sloped design is effective in directing water away. Check for any gaps between panels or where the gazebo meets a wall (if wall-

mounted).

7.2 Stability Concerns

Confirm that the gazebo is securely anchored to the ground or wall using appropriate hardware. Re-tighten any loose bolts or screws. Ensure the ground surface is level and stable.

7.3 Assembly Difficulties

If encountering issues during assembly, refer to the detailed instruction manual. Ensure all components are correctly identified and oriented. Do not overtighten fasteners until instructed, as this can hinder alignment of subsequent parts.

7.4 Incorrect Dimensions

Verify the product dimensions against your planned installation space before assembly. If discrepancies are found, contact customer support for guidance.

8. SPECIFICATIONS

Brand	AECOJOY
Material	Alloy Steel, Wood
Style	Heavy Duty
Product Dimensions	142.5"L x 111"W x 96.5"H
Item Weight	272 Pounds
Frame Material	Wood
Water Resistance Level	Waterproof
Shape	Rectangular
Ultraviolet Light Protection	UPF
Assembly Required	Yes
Color	Wood
Model Number	16555MS

9. WARRANTY AND SUPPORT

AECOJOY offers comprehensive support for your gazebo. This includes maintenance and replacement services. A professional support team is available 24/7 to assist with installation, usage, and any other concerns you may have. For assistance, please refer to the contact information provided in your product packaging or visit the official [AECOJOY Store](#).

