

OLIXIS OLJCTC-BK-3

OLIXIS Collapsible Wagon Cart (Model OLJCTC-BK-3) Instruction Manual

Brand: OLIXIS | Model: OLJCTC-BK-3

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation and maintenance of your OLIXIS Collapsible Wagon Cart. Designed for versatility, this heavy-duty utility wagon features an extended cargo platform, a foldable design for compact storage, and all-terrain wheels for various surfaces. It is suitable for transporting items during camping, shopping, sports events, beach trips, and gardening tasks.

Key features include:

- **Extended Storage Space:** 48-inch cargo platform for large items.
- **Foldable Design:** One-click folding mechanism for quick setup and compact storage.
- **All-Terrain Wide Wheels:** Designed for smooth navigation on diverse surfaces like sand, grass, and gravel, with 360-degree swivel and braking devices.
- **Strong Load-Bearing Capacity:** Reinforced steel frame and sturdy connectors support up to 440 pounds.
- **Easy to Clean:** Made from high-density 600D Oxford cloth, resistant to wear, tear, and water splashing.

SETUP INSTRUCTIONS

1. Unfolding the Wagon

The wagon comes pre-assembled in a folded state. To unfold:

1. Place the folded wagon on a flat, stable surface.
2. Gently pull the sides of the wagon outwards until the frame extends fully.
3. Press down firmly on the center of the wagon's base until it locks into place, creating a stable cargo area.

3-SECOND STORAGE



No longer Cumbersome



Image: The wagon transitioning from a compact folded state to an expanded, ready-to-use configuration, highlighting the quick unfolding process.

2. Attaching the Wheels (if detached)

The wheels are designed for easy attachment. Identify the two types of wheels: those with a square-shaped post and those with a round-shaped post. The square-post wheels are typically for the rear, and the round-post wheels are for the front (swivel wheels).

1. Locate the corresponding slots on the wagon frame.
2. Align the wheel post with the slot and push firmly until it clicks into place. Ensure the locking mechanism engages securely.
3. For the front swivel wheels, ensure the locking brakes are disengaged during attachment.

Your browser does not support the video tag.

Video: Demonstrates the process of attaching the wheels and handle to the wagon frame. Note the distinct square and round posts for different wheel types.

3. Attaching the Handle

The handle is designed to slide into a designated slot at the front of the wagon. Ensure it is fully inserted and secured.

Multi-Functional Design



Image: The wagon's handle, illustrating its adjustable height and angle features, along with integrated cup holders.

OPERATING INSTRUCTIONS

1. Adjusting the Handle

The wagon features an adjustable handle for comfortable pulling. Locate the adjustment mechanism on the handle shaft (usually a button or lever). Press it to extend or retract the handle to your desired length. The handle also allows for angle adjustment to suit different pulling positions.



Collapsible Wagon Cart

Make your travelling easier and more convenient



High Capacity



All-Terrain Wheels



Adjustable Handle



Stable Frame Structure



Image: Detailed view of the handle's height adjustment (from 20.1" to 42.5") and angle adjustment (up to 90 degrees).

2. Using the All-Terrain Wheels

The wide, all-terrain wheels are designed for stability and smooth movement across various surfaces. The front wheels feature a 360-degree swivel for easy maneuverability. To secure the wagon in place, engage the braking devices located on the front wheels by pressing down on the red levers. Disengage them to resume movement.

All-Terrain Wheels

It allows you to navigate rough terrain with ease.



Image: Close-up of the all-terrain wheels, highlighting features such as shock absorption, 360-degree swivel, noise reduction, lockable brakes, and wear resistance. Shows suitability for gravel, mud, asphalt, and grass.

3. Utilizing Storage Features

The wagon includes two cup holders at the front for beverages and a side mesh pocket for smaller items. The main cargo area offers substantial space for larger loads.

Multi-Functional Design



Image: The wagon's handle, illustrating its adjustable height and angle features, along with integrated cup holders.

4. Folding for Storage

To fold the wagon for compact storage:

1. Ensure the wagon is empty.
2. Locate the pull tab in the center of the wagon's base.
3. Pull the tab upwards firmly. The wagon frame will begin to collapse inwards.
4. Continue to push the sides together until the wagon is fully folded.
5. Secure the folded wagon with the equipped cover or strap for convenient carrying and dust protection.

3-SECOND STORAGE



No longer Cumbersome



Image: The wagon transitioning from an expanded state to a compact folded state, illustrating the quick 3-second storage process.

MAINTENANCE

Cleaning the Wagon

The wagon body is constructed from high-density 600D Oxford cloth, which is waterproof and tear-resistant. For cleaning:

- Wipe down the fabric with a damp cloth to remove dirt or spills.
- For heavier soiling, the fabric can be rinsed with water. Ensure it is thoroughly dried before folding and storing to prevent mildew.
- Inspect the frame and wheels periodically for any debris and clean as necessary to maintain smooth operation.

Rugged Materials for Longer Lifespan



Heavy Duty Steel Frame

High Load-Bearing ☒

M Removable ☒



Thickened 600D Oxford Fabric

- ☒ Waterproof
- ☒ Tear-Resistant



Image: Close-up of the wagon's thickened 600D Oxford fabric, emphasizing its waterproof and tear-resistant qualities, alongside the heavy-duty steel frame.

TROUBLESHOOTING

If you encounter any issues with your OLIXIS Collapsible Wagon Cart, please refer to the following common solutions:

- **Wagon not unfolding/folding smoothly:** Ensure the central pull tab is fully engaged/disengaged and that no items are obstructing the frame's movement. Check for debris in the folding mechanisms.
- **Wheels not swiveling/rolling freely:** Verify that the wheel brakes are disengaged. Inspect wheels for any trapped debris or damage.
- **Handle not adjusting:** Check the adjustment button/lever for proper engagement. Ensure no foreign objects are lodged in the handle's telescopic mechanism.

For persistent issues, please contact OLIXIS customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	49"D x 23.8"W x 42.5"H
Brand	OLIXIS
Material	Alloy Steel, Aluminum, Rubber
Color	Basic Black
Special Features	Adjustable Handle, Durable, Easy Assembly, Foldable, Heavy Duty
Recommended Uses	Indoor, Outdoor
Item Weight	29.32 Pounds
Weight Limit	440 Pounds
Assembly Required	No (minimal setup for wheels/handle)
Item Model Number	OLJCTC-BK-3
UPC	715569365797

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact OLIXIS customer service directly through their official website or the retailer where the product was purchased. Please have your model number (OLJCTC-BK-3) and proof of purchase available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question