

Enya Cyber-G Guitar Model

Enya CYBER-G Smart Guitar Instruction Manual

Model: Cyber-G Guitar Model (Black) | Brand: Enya Musical

1. INTRODUCTION

The Enya CYBER-G Smart Guitar is an innovative musical instrument designed for both beginners and experienced musicians. It features silicone strings for comfortable play, 24 built-in tones, a travel-friendly design, and interactive app integration for enhanced learning and performance. This manual provides essential information for setting up, operating, and maintaining your CYBER-G Smart Guitar.

2. PRODUCT FEATURES

- **24 Built-in Tones:** Switch between various instrument sounds, from acoustic guitars to flutes and organs, expanding your creative possibilities.
- **Silicone Strings:** Designed for a soft touch and comfortable playability, reducing finger strain, ideal for beginners or those with hand sensitivity.
- **Interchangeable Modules:** Easily switch between string, keyboard, and pick modules to adapt to different playing styles and musical needs.
- **Smart Learning Modes:** Progress through Auto Mode (strum-only), Semi-Assist Rhythm, and Classic Guitar Play Mode, guided by the interactive app.
- **Portable Design:** The compact, foldable design allows for easy transport and setup, enabling you to play anywhere, anytime.
- **Integrated Speaker and Drum System:** Features a built-in speaker for direct sound output and a drum system for rhythm accompaniment.



Figure 2.1: The Enya CYBER-G Smart Guitar with visual representations of its 24 built-in tones, including guitar, bass, electric piano, trumpet, and more.

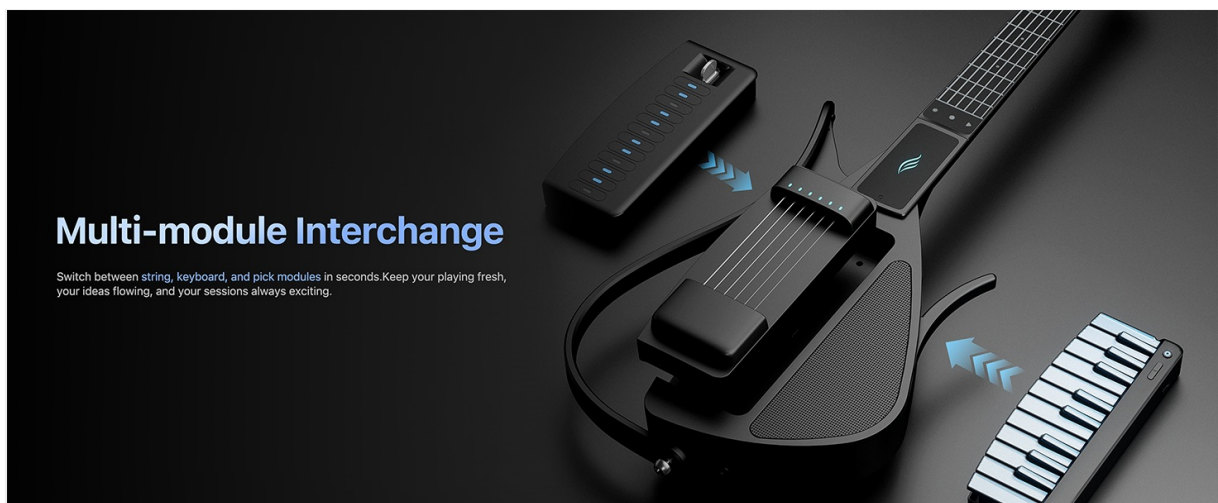 


Figure 2.2: The CYBER-G Smart Guitar demonstrating its multi-module interchangeability, showing how different playing modules (string, keyboard, pick) can be attached.

3. PACKAGE CONTENTS

Upon unboxing your Enya CYBER-G Smart Guitar, please ensure all components are present:

- Enya CYBER-G Smart Guitar (Main Body and Neck)
- Built-in Speaker
- Drum System
- USB Charging Cable
- User Manual

Your browser does not support the video tag.

Video 3.1: An unboxing video demonstrating the contents of the Enya CYBER-G Smart Guitar package, including the guitar, accessories, and packaging.

4. SETUP

4.1 Assembly

The Enya CYBER-G features a detachable neck for portability. To assemble, align the neck with the main body

and gently push until it clicks securely into place. To disassemble, press the release button (if present) and pull the neck away from the body.

Your browser does not support the video tag.

Video 4.1: A demonstration of assembling and disassembling the Enya CYBER-G Smart Guitar's detachable neck, highlighting its portability and ease of setup.

4.2 Charging

Connect the provided USB charging cable to the USB port on the guitar and to a compatible power source. The indicator lights will show charging status. Ensure the guitar is fully charged before extended use.

4.3 App Connection

Download the official Enya CYBER-G app from your device's app store. Enable Bluetooth on your device and follow the in-app instructions to pair your smart guitar. The app unlocks interactive features, additional sounds, and learning tools.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

The CYBER-G Smart Guitar features intuitive controls:

- **Knob:** Rotate to change the key or instrument sound.
- **FUNC Button:** Long press to power ON/OFF. Short press to switch presets. Rotate to adjust volume.
- **USB Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For private practice.

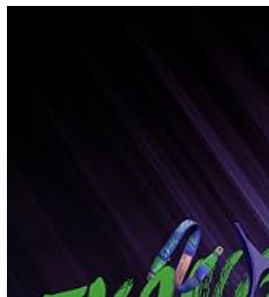 


Figure 5.1: Detail of the knob control on the Enya CYBER-G Smart Guitar, used for changing key or instrument sound.



Figure 5.2: The FUNC button and volume control on the Enya CYBER-G Smart Guitar, used for power, preset switching, and volume adjustment.

5.2 Playing Modes

The CYBER-G offers various modes to suit different skill levels:

- **Auto Mode:** Ideal for beginners, allowing you to strum and play without complex fretting.

- **Semi-Assist Rhythm:** Helps synchronize strumming and chord changes, aiding in developing rhythm and coordination.
- **Classic Guitar Play Mode:** For advanced players, offering full control over individual notes and chords.

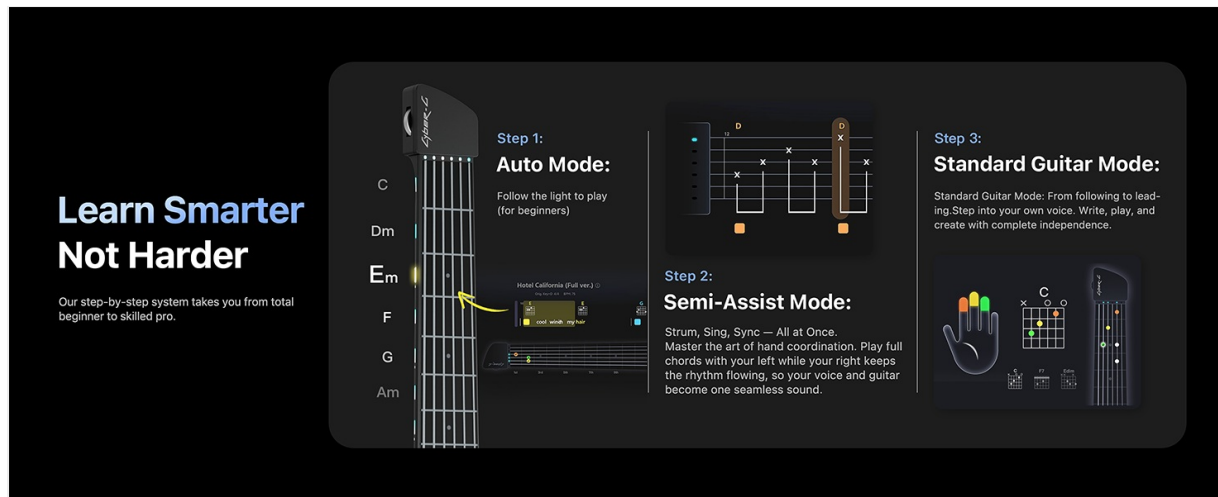 


Figure 5.3: Visual representation of the Enya CYBER-G's learning modes, including Auto Mode, Semi-Assist Mode, and Standard Guitar Mode, designed for progressive learning.

5.3 Changing Tones

Access the 24 built-in tones by rotating the Knob or through the connected app. Experiment with different sounds to find the perfect fit for your music.

Your browser does not support the video tag.

Video 5.1: A demonstration of the 24 instrument sounds available on the Enya CYBER-G Smart Guitar, showcasing its versatility.

5.4 Interactive Play

The light-guided fretboard illuminates to show finger positions, making learning chords and scales easier. Sync with the app for real-time feedback and interactive chord sheets.

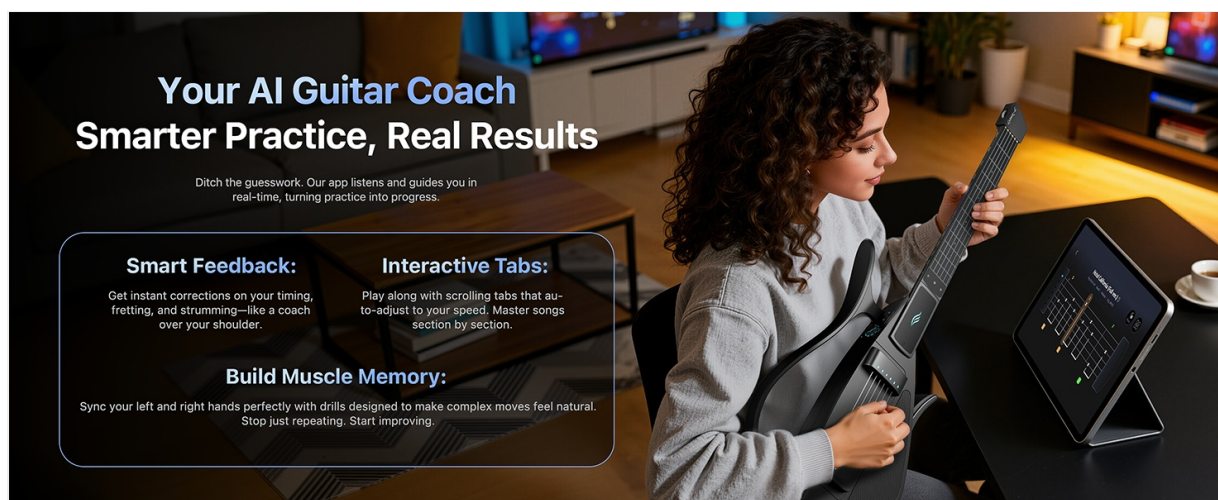 


Figure 5.4: The Enya CYBER-G Smart Guitar demonstrating interactive play with its light-guided fretboard and real-time app synchronization for smart practice assistance.

5.5 Module Interchange

The CYBER-G allows for quick swapping of modules. Simply detach the current module and snap in a different one (e.g., keyboard or pick module) to change your playing interface.

Your browser does not support the video tag.

Video 5.2: A video showcasing the interchangeability of modules on the Enya CYBER-G Smart Guitar, demonstrating how to switch between different playing interfaces.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Enya CYBER-G Smart Guitar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the guitar body and fretboard. Avoid abrasive cleaners or solvents.
- **Storage:** Store the guitar in its protective case when not in use to prevent dust accumulation and physical damage. Keep it away from extreme temperatures and humidity.
- **Silicone Strings:** The silicone strings are durable and do not require traditional string changes. Clean them gently with a damp cloth if needed.
- **Battery Care:** For long-term storage, charge the battery to approximately 50% every few months to maintain battery health.

7. TROUBLESHOOTING

If you encounter issues with your Enya CYBER-G Smart Guitar, refer to the following common solutions:

Problem	Possible Cause	Solution
No sound output	Low battery, volume too low, incorrect sound preset, module not properly connected.	Charge the guitar, increase volume, select a different sound, ensure modules are securely attached.
App not connecting	Bluetooth off, app not updated, guitar not in pairing mode.	Ensure Bluetooth is enabled, update the app, restart both guitar and device, follow in-app pairing instructions.
Sound delay or missing notes	Software glitch, low battery, interference.	Restart the guitar and app, ensure sufficient battery, try playing in a different environment to rule out interference.
Lights on fretboard not working	Feature disabled in app, software issue.	Check app settings to ensure light guidance is enabled, restart the guitar.

8. SPECIFICATIONS

Feature	Detail
Brand	CYBER-G (by Enya Musical)
Model Name	Cyber-G Guitar Model
Color	Black
Top Material Type	Silicone

Feature	Detail
Body Material	ABS+PC
Neck Material Type	Silicone
String Material Type	Silicone
Number of Strings	6
Item Dimensions	33.07 x 8.27 x 2.36 inches
Included Components	Built-in speaker, Drum system

9. WARRANTY AND SUPPORT

The Enya CYBER-G Smart Guitar comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. For warranty claims, technical support, or any inquiries, please contact Enya Musical customer service through their official website or the retailer where the product was purchased.

Manufacturer: Enya Musical

For more information, visit the [CYBER-G Store on Amazon](#).