

Foyoconven TAC1001-UL

Foyoconven 4-Slice Digital Touchscreen Toaster

MODEL: TAC1001-UL

User Manual

Introduction

Thank you for choosing the Foyoconven 4-Slice Digital Touchscreen Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

Product Overview

The Foyoconven 4-Slice Digital Touchscreen Toaster is designed for efficiency and versatility, featuring extra-wide slots and dual independent control panels to cater to various toasting preferences.

Key Features:

- **1.5" Extra-Wide Slots:** Accommodates thick-cut breads, bagels, and waffles.
- **Dual Digital Touchscreen & Independent Control Panels:** Allows simultaneous toasting of different items with separate settings.
- **1800W Rapid-Heat System:** Ensures quick and even toasting.
- **6 Toast Types & 6 Shade Settings:** Customizable browning from light golden to espresso-dark.
- **Smart Single-Slot Technology:** Detects occupied slots and redirects heat, saving energy.
- **Defrost, Reheat, and Cancel Functions:** Convenient options for various needs.
- **Removable Crumb Trays & Hidden Cord Storage:** For easy cleaning and organization.



Figure 1: Front view of the Foyoconven 4-Slice Digital Touchscreen Toaster.

Extra-Wide 1.5" Slot 4-Slice Toaster

Perfect for various breads



Figure 2: Top view illustrating the extra-wide 1.5-inch slots, ideal for bagels and thick bread.

Setup

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, heat-resistant, and dry surface, away from flammable materials. Ensure adequate ventilation around the toaster.
3. **First Use:** Before first use, operate the toaster without bread on the highest setting (level 6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Allow the toaster to cool completely.
4. **Connect Power:** Plug the power cord into a standard 120V AC electrical outlet.

Operating Instructions

Your Foyoconven toaster features a full-touch LED display and dual independent control panels for customized toasting.

Control Panel Overview:



Figure 3: Detailed view of the digital touchscreen control panel.

Basic Operation:

1. **Place Bread:** Insert up to four slices of bread, bagels, or other items into the toaster slots. Ensure items fit without forcing.
2. **Power On:** Touch the power button on the touchscreen to activate the display.
3. **Select Bread Type:** On either the left or right independent panel, select the appropriate bread type icon (Bread, Bagel, Pastry, Waffle, English Muffin, Gluten-Free).
4. **Choose Shade Setting:** Select your desired browning level from 1 (lightest) to 6 (darkest) using the shade selection area.
5. **Start Toasting:** Press the lever down on the side corresponding to the slots you wish to use. The digital countdown timer will begin.
6. **Automatic Pop-up:** Once the toasting cycle is complete, the bread will automatically pop up.



Figure 4: Step-by-step guide for operating the toaster.

Special Functions:

- **Defrost Function:** For frozen items, select the bread type and shade, then press the snowflake icon (Defrost). This adds extra time to thaw and toast.
- **Reheat Function:** To warm up already toasted items without further browning, select the bread type and

shade, then press the wavy lines icon (Reheat). This adds approximately 30 seconds to the cycle.

- **Cancel Function:** To stop the toasting cycle at any time, press the 'X' icon on the touchscreen. The bread will immediately pop up.
- **Single-Slot Technology:** The toaster intelligently detects which slots are occupied and directs heat only where needed, optimizing energy consumption.



Figure 5: Icons for the four main functions: Single Toasting, Cancel, Defrost, and Reheat.



Figure 6: The toaster's single-slot technology in action, toasting one slice efficiently.

Your browser does not support the video tag.

Video 1: Demonstration of the Foyoconven 4-Slice Toaster with Smart Digital Touchscreen, showcasing its features and ease of use.

Maintenance

Regular cleaning ensures optimal performance and longevity of your toaster.

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Clean Crumb Trays:** Pull out the removable crumb trays located at the back of the toaster. Dispose of crumbs and wipe the trays clean with a damp cloth. Ensure they are dry before reinserting.
3. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, use a mild non-abrasive cleaner. Do not use harsh chemicals or abrasive pads.
4. **Interior Cleaning:** Never insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully invert it to shake out the debris.
5. **Storage:** When not in use, store the toaster in a clean, dry place. Utilize the hidden cord storage for a tidy countertop.



Figure 7: Removable crumb trays and hidden cord storage for easy maintenance.

Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in or power outage.	Ensure the toaster is securely plugged into a working outlet. Check the circuit breaker.
Bread does not toast evenly.	Uneven bread thickness or incorrect setting.	Ensure bread slices are of uniform thickness. Adjust the shade setting or try a different bread type preset.
Bread is stuck in the toaster.	Oversized item or malfunction.	Unplug the toaster. Carefully remove the item using non-metallic tongs. Do not force.
Smoke or burning smell.	Crumbs in the toaster or food burning.	Immediately press the Cancel button and unplug. Clean the crumb trays. Reduce shade setting for future use.

Specifications

- **Brand:** Foyoconven
- **Model Number:** TAC1001-UL
- **Color:** Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions (D x W x H):** 10.98" x 10.75" x 7.6"
- **Item Weight:** 4.85 Pounds
- **Wattage:** 1800 watts
- **Voltage:** 120 Volts
- **Slot Count:** 4
- **Number of Settings/Programs:** 6 (Browning Levels), 6 (Bread Types)
- **Special Features:** Built-In Timer, Cancel Function, Defrost Mode, LED Indicator, Touchscreen, Single-Slot Technology
- **Included Components:** Toaster

Warranty Information

Foyoconven products are manufactured to the highest quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official Foyoconven website. Keep your proof of purchase for any warranty claims.

Customer Support

If you have any questions, concerns, or require assistance with your Foyoconven 4-Slice Digital Touchscreen Toaster, please contact our customer support team:

- **Website:** [Visit the Foyoconven Store on Amazon](#)
- **Email:** [Insert Customer Support Email Here]
- **Phone:** [Insert Customer Support Phone Number Here]

Please have your model number (TAC1001-UL) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question