

[Manuals.plus](#) /

› [MZK](#) /

› MZK Pressure Washer Model ET2501-2026 Instruction Manual

MZK ET2501-2026

MZK Pressure Washer Instruction Manual

MODEL: ET2501-2026

Introduction

This manual provides essential information for the safe and effective operation, assembly, maintenance, and troubleshooting of your MZK Pressure Washer Model ET2501-2026. Please read this manual thoroughly before using the product and retain it for future reference.

The MZK Pressure Washer is designed for deep cleaning various surfaces such as driveways, patio furniture, cars, fences, and more. It features anti-tipping technology with 4 wheels for enhanced mobility and stability, and includes 4 quick-connect nozzles and a foam cannon to address diverse cleaning requirements.



Image: MZK Pressure Washer, Deep Red model, showcasing its compact design.

Safety Information

Always observe basic safety precautions when using this product to reduce the risk of injury or damage. High-pressure water jets can be dangerous if misused.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Wear appropriate safety gear:** Always wear eye protection, hearing protection, and protective clothing.
- **Never point the spray gun at people or animals:** The high-pressure stream can cause severe injury.
- **Ensure stable footing:** The recoil from the spray gun can cause you to lose balance.
- **Use the safety switch:** The pressure washer is equipped with a safety switch to prevent accidental activation. Engage it when not actively spraying.
- **Electrical safety:** Do not operate the pressure washer in wet conditions or near electrical outlets. Ensure all connections are dry and secure.
- **Child safety:** Keep children and pets away from the operating area.



SAFETY LOCK

PROTECTS KIDS FROM
ACCIDENTALLY
TRIGGERING THE
SPRAY GUN



**NEVER DIRECT THE WATER JET AT PEOPLE, ANIMALS,
THE UNIT OR ELECTRICAL COMPONENTS**



Image: Close-up of the spray gun showing the red safety lock mechanism. The text warns against directing the water jet at people, animals, the unit, or electrical components.

Package Contents

Verify that all items are present and undamaged upon unpacking:

- MZK Pressure Washer Unit
- High-Pressure Hose (21 FT)
- Spray Gun with Wand
- 4 Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Foam Cannon (Detergent Bottle)
- Power Cord (17 FT)
- Handle and Hose Holder
- 4 Swivel Wheels
- Assembly Hardware (screws)

Setup and Assembly

Follow these steps to assemble your pressure washer:

1. **Attach the Handle:** Secure the top handle to the main unit using the provided screws.
2. **Install Hose Holder:** Mount the hose holder onto the side of the unit.
3. **Attach Wheels:** Secure the four swivel wheels to the base of the unit using the provided screws. These wheels provide 360° mobility and lock for stability.
4. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the outlet on the pressure washer unit and the other end to the spray gun. Ensure connections are tight.
5. **Connect Water Supply:** Attach your garden hose (not included) to the water inlet on the pressure washer. Ensure the water supply is turned on before starting the unit.
6. **Assemble Spray Wand:** Connect the spray wand to the spray gun.
7. **Attach Nozzle Holder:** The nozzle holder can be attached to the spray wand for convenient storage of the quick-connect nozzles.



Image: Visual assembly guide demonstrating the attachment of the handle, hose holder, and wheels to the pressure washer unit.



Image: Features of the MZK Pressure Washer including the quick-connect port for nozzles, the child safety lock on the trigger, and the 360-degree lockable wheels.

Assembly Video Guide

Your browser does not support the video tag.

Video: An official MZK video demonstrating the assembly process of the pressure washer, including attaching components and connecting hoses.

Operating Instructions

Before operating, ensure all connections are secure and the water supply is turned on. Plug the power cord into a grounded outlet.

Nozzle Selection and Usage

The pressure washer comes with four quick-connect nozzles, each designed for specific cleaning tasks:

- **0° Red Nozzle (Intense Spot Cleaning):** Delivers a concentrated, high-pressure stream for stubborn stains, rust, cracks, and metal surfaces. Use with extreme caution.
- **15° Yellow Nozzle (Powerful Stain Removal):** Provides a powerful, narrow spray for removing paint, grease, grime, oil, and cleaning concrete or boats.
- **25° Green Nozzle (Surface Cleaning):** Offers a wider spray for general cleaning of decks, wood, fences, and siding.
- **40° White Nozzle (Light Dusting & Dirt Removal):** Produces a wide, gentle spray suitable for delicate surfaces, automobiles, windows, and garden areas.

To change nozzles, pull back the collar on the quick-connect fitting, insert the desired nozzle, and release the collar to lock it in place. Always ensure the nozzle is securely attached before operating.



Image: Detailed view of the five spray modes (0°, 15°, 25°, 40°, and foam cannon) and their recommended uses for various cleaning tasks.



Image: The 0° red nozzle being used for intense spot cleaning, suitable for rust, cracks, and metal surfaces.



Image: The 15° yellow nozzle in action, demonstrating its effectiveness for powerful stain removal on surfaces like oil, concrete, and boats.



Image: The 25° green nozzle being used for general surface cleaning on decks, wood, and fences.



Image: The 40° white nozzle providing a wide, gentle spray for light dusting and dirt removal on automobiles, windows, and garden areas.

Foam Cannon Usage

The foam cannon is ideal for applying detergents or cleaning solutions for pre-treatment and deep cleaning, especially for vehicles. Fill the detergent bottle with your chosen cleaning solution. Attach the foam cannon to the spray gun. The cleaner will not pass through the pump, protecting the internal components.



Image: A person using the foam cannon to apply a thick layer of foam to a car for pre-treatment and deep cleaning.

Starting and Stopping

1. **To Start:** Ensure the water supply is fully open. Press the ON/OFF switch to the 'ON' position. Squeeze the trigger on the spray gun to begin spraying.
2. **To Stop:** Release the trigger on the spray gun. Engage the safety switch on the spray gun. Press the ON/OFF switch to the 'OFF' position. Turn off the water supply.

Maintenance

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Clean Nozzles:** After each use, remove any debris from the nozzle openings.
- **Drain Water:** Before storing, disconnect the water supply and run the pressure washer for a few seconds to drain any remaining water from the pump and hoses. This prevents freezing damage in cold climates.

- **Store Properly:** Store the pressure washer in a dry, protected area. Utilize the power cord hook and nozzle holder for organized storage.
- **Inspect Hoses and Connections:** Periodically check hoses for kinks, cuts, or leaks. Ensure all connections are tight.

Troubleshooting

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not start	Power cord not plugged in; ON/OFF switch in 'OFF' position; Circuit breaker tripped.	Check power connection; Turn switch to 'ON'; Reset circuit breaker.
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump.	Ensure water tap is fully open; Clean nozzle; Squeeze trigger to purge air.
Water leaks	Loose connections; Damaged O-rings.	Tighten all connections; Replace damaged O-rings.

Specifications

Specification	Detail
Brand	MZK
Model Number	ET2501-2026
Power Source	AC
Item Weight	18 Pounds
Hose Length	21 Feet
Product Dimensions (L x W x H)	14" x 11.5" x 16.5"
Wand Length	15 Inches
Nozzles Included	0°, 15°, 25°, 40° Quick-Connect
Additional Features	Anti-Tipping Technology, 4 Swivel Wheels, Foam Cannon, Safety Switch

Warranty and Support

For warranty information, technical support, or to purchase replacement parts, please contact MZK customer service. Refer to the product packaging or the official MZK website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GF1Y997V>

More documents and user manuals: <https://manuals.plus/>