

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [DYONDER](#) /

> [DYONDER Wireless Controllers for P4/Pro/Slim & PC User Manual](#)

DYONDER Wireless Controllers for P4/Pro/Slim & PC

DYONDER Wireless Controllers for P4/Pro/Slim & PC User Manual

Model: Wireless Controllers for P4/Pro/Slim & PC

Brand: DYONDER

1. PRODUCT OVERVIEW

The DYONDER Wireless Controllers are designed for an enhanced gaming experience across multiple platforms. These controllers are compatible with P4, P4 Slim, P4 Pro, and PC, offering a versatile solution for your gaming needs. Each controller features a built-in 1000mAh battery, dual vibration feedback, a 6-axis motion sensor, and an audio jack for immersive gameplay.



Figure 1: Controller Components and Features. This diagram illustrates the various buttons, joysticks, and ports on the wireless controller, including the SHARE button, Touchpad, D-Pad, Left Joystick, OPTIONS button, Action buttons, Right Joystick, Extended Interface, Headphone Jack, Home button, LED light bar, and Charging Socket.

2. SETUP

2.1 Initial Connection to P4/P4 Slim/P4 Pro

For the first-time connection to a P4 console, a USB-C charging cable is required to sync the controller.

Follow these steps:

1. Connect the game controller to your P4 console using the included USB-C cable.
2. Press and hold the "HOME" button for approximately 2 seconds. The LED indicator will flash white to indicate the connection state.
3. Wait for the LED indicator to change color (typically blue for Player 1) to confirm a successful connection.



Figure 2: Initial Connection Steps for P4 Console.

2.2 Connecting to PC

To pair the controller with a PC, hold the "SHARE + HOME" buttons simultaneously for 3 seconds. The controller will enter pairing mode, and you can then connect it via Bluetooth on your PC.

2.3 Unboxing and Initial Inspection

The following video demonstrates the unboxing process and initial inspection of the DYONDER Wireless Controllers, providing a visual guide to what is included in the package.

Your browser does not support the video tag.

Video 1: DYONDER Wireless Controller Unboxing. This video shows the contents of the product package, including the two controllers, charging cables, and user manual.

3. OPERATING INSTRUCTIONS

3.1 Charging the Controller

The controller is equipped with a built-in 1000mAh rechargeable battery. To charge the controller:

- Connect the controller to a power source (e.g., P4 console, PC, or USB wall adapter) using the provided USB-C quick charge cable.
- A full charge typically takes approximately 2 hours.
- Once fully charged, the controller provides over 15 hours of playtime.

INITIAL CONNECTION WITH P-4

Note: A USB cable is needed for initial connection



Figure 3: Battery Capacity and Charging Information.

3.2 Key Features and Functions

- **Dual Vibration Feedback:** Experience immersive gameplay with dual vibration motors offering 4 levels of intensity.
- **6-Axis Motion Sensor:** Enjoy precise control and responsive in-game movements with the integrated 6-axis motion sensing system.
- **Responsive Joysticks and Buttons:** The upgraded joysticks and buttons provide enhanced responsiveness and precision, minimizing input lag and drift.
- **Audio Jack:** Connect your headset directly to the controller for in-game audio and communication.
- **Touchpad:** Utilize the multi-touch and clickable touchpad for additional control options in compatible games.

4. MAINTENANCE

To ensure the longevity and optimal performance of your DYONDER Wireless Controllers, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the controllers in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Battery Care:** Do not expose the battery to high temperatures or attempt to disassemble it. Charge the controller regularly, even if not in frequent use, to maintain battery health.
- **Avoid Drops:** Protect the controllers from drops and impacts, which can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your DYONDER Wireless Controllers, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Controller does not connect to P4/PC.	First-time connection not properly initiated, low battery, or pairing issue.	Ensure the controller is charged. For P4, connect with a USB-C cable and press the HOME button. For PC, hold SHARE + HOME for 3 seconds to enter pairing mode.
Input lag or unresponsiveness.	Interference, low battery, or distance from console/PC.	Ensure the controller is fully charged. Reduce distance to the console/PC. Minimize wireless interference from other devices. Reset the controller (see below).
Controller does not turn on.	Battery is completely drained.	Connect the controller to a power source using the USB-C cable and allow it to charge for at least 10-15 minutes before attempting to turn it on.
Vibration not working.	Vibration feature disabled in game settings or controller settings.	Check in-game and console/PC settings to ensure vibration is enabled.

5.1 Resetting the Controller

If the controller is unresponsive or behaving erratically, a reset may resolve the issue:

1. Locate the small reset button on the back of the controller (often near the L2 shoulder button).
2. Use a small, pointed object (like a straightened paperclip) to press and hold the reset button for 3-5 seconds.
3. Release the button and attempt to reconnect the controller as per the initial connection instructions.

6. SPECIFICATIONS

Feature	Detail
Compatibility	P4, P4 Slim, P4 Pro, PC
Connectivity	Wireless (Bluetooth)
Battery Capacity	1000mAh
Charging Time	Approx. 2 hours
Playtime	Over 15 hours
Vibration	Dual vibration motors, 4 levels
Motion Sensor	6-Axis (accelerometer, gyroscope)
Audio Port	3.5mm Headphone Jack
Charging Port	USB-C
Item Weight	1.17 pounds (for 2-pack)

7. WARRANTY AND SUPPORT

DYONDER products are manufactured with high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or further assistance, please contact DYONDER customer service through the retailer where the product was purchased or visit the official DYONDER website for contact information.

Note: Warranty terms and conditions may vary by region. Please refer to the specific warranty information provided with your product packaging.