

[Manuals.plus](#) /

› [MENTUME](#) /

› MENTUME X70 Android 16 Tablet User Manual

MENTUME X70

MENTUME X70 Android 16 Tablet User Manual

Model: X70

INTRODUCTION

Welcome to the MENTUME X70 Android 16 Tablet user manual. This guide provides essential information to help you set up, operate, and maintain your new tablet. The MENTUME X70 is a versatile 10-inch tablet featuring the latest Android 16 operating system, integrated Gemini AI, a powerful Octa-Core processor, and a comprehensive accessory kit for enhanced productivity and entertainment.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- 1 x MENTUME X70 Tablet
- 1 x Charger
- 1 x Charging Cable
- 1 x Protective Cover (Pink)
- 1 x Bluetooth Keyboard
- 1 x Wireless Mouse
- 1 x Stylus
- 1 x User Manual

Contenuto della Confezione?



Image: All items included in the MENTUME X70 Tablet package.

SETUP

1. Charging the Tablet

Before first use, fully charge your tablet. Connect the charging cable to the tablet's USB-C port and the charger to a power outlet. The battery indicator on the screen will show charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually on the side) until the MENTUME logo appears.
- **To Power Off:** Press and hold the Power button, then select 'Power Off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart'.

3. Initial Setup

Upon first power-on, follow the on-screen prompts to configure your tablet:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google Account or create a new one.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, password, or facial recognition).

4. Inserting a MicroSD Card

Locate the SIM/MicroSD card tray on the side of the tablet. Use the provided ejector tool to open the tray. Insert a MicroSD card (up to 1TB, not included) into the designated slot, then gently push the tray back into the tablet.

5. Connecting Accessories (Keyboard, Mouse, Stylus)

The included keyboard, mouse, and stylus connect via Bluetooth:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Put your accessory (keyboard, mouse, or stylus) into pairing mode (refer to the accessory's individual instructions if needed).
4. Select the accessory from the list of available devices on your tablet to pair.

Image: Demonstrates Bluetooth and Wi-Fi connectivity for the tablet.

OPERATING THE TABLET

1. Basic Navigation

- **Touch Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Your central hub for apps and widgets.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings like Wi-Fi, Bluetooth, and brightness.

2. Gemini AI Features

The MENTUME X70 integrates Gemini AI for enhanced user experience. Access Gemini AI through its dedicated app or by voice command (if enabled). Gemini AI offers:

- Intelligent voice assistance for queries and commands.
- Efficient office support for tasks and organization.
- Practical life services and information.



Image: Overview of Gemini AI 2.0 capabilities.

3. Connectivity

- **Wi-Fi 6:** Connect to high-speed Wi-Fi networks for fast internet access. Go to **Settings > Network & internet > Wi-Fi**.
- **Bluetooth 5.0:** Pair with headphones, speakers, and other Bluetooth devices. Go to **Settings > Connected devices > Bluetooth**.

4. Camera Usage

The tablet features an 8MP front camera and a 13MP rear camera. Open the Camera app to take photos or record videos. Tap the camera icon to switch between front and rear cameras.



Image: Various usage scenarios of the MENTUME X70 tablet.

5. Storage Management

Your tablet comes with 256 GB of internal storage (ROM) and supports expansion up to 1 TB via a MicroSD card. To manage your storage, go to **Settings > Storage**. Here you can view storage usage and free up space.

-  **24(8+16) GB RAM**
-  **256 GB ROM**
-  **Estendibile a 1 TB**

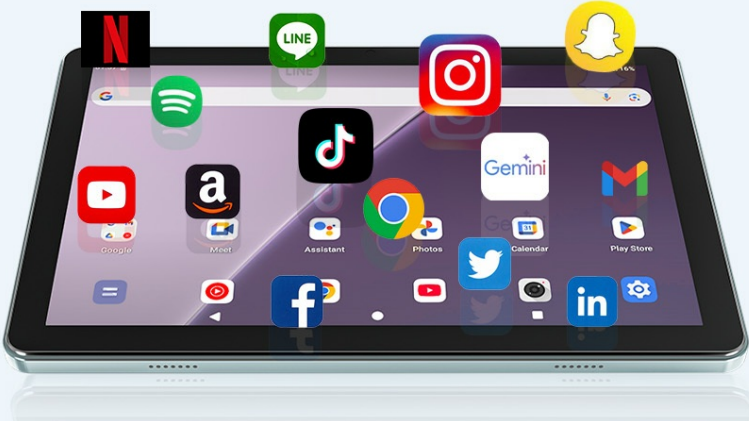


Image: Illustrates the tablet's memory and storage capabilities.

6. Display and Audio

The 10.1-inch IPS display offers a 1920x1200 HD resolution with a 60Hz refresh rate for clear visuals. It supports Widevine L1 for high-quality streaming content. Enjoy immersive audio with the tablet's dual stereo speakers.

Supporto Widevine L1



10,1 Pollici



1920*1200



60 Hz



16:10

You Tube

HBO

hulu

prime video

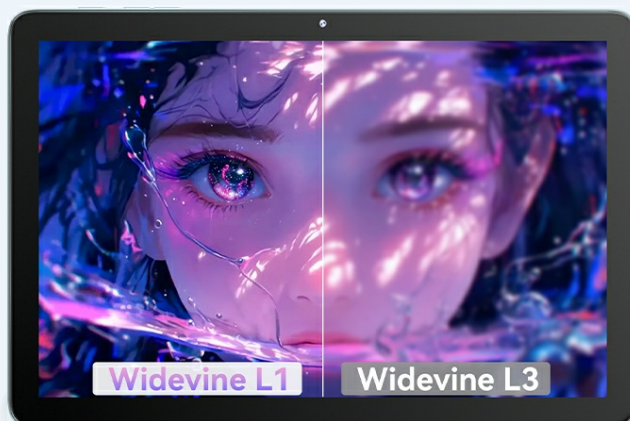


Image: Details of the tablet's display features and Widevine L1 support.

Altoparlanti Doppi Stereo

Ascolta Di Più, Vivi Di Più



Image: Highlights the tablet's dual stereo speakers for enhanced audio.

MAINTENANCE

1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

2. Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to **Settings > System > System update**.

3. Battery Care

To prolong battery life:

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use the original charger and cable provided.



Image: Illustrates the 6000 mAh battery capacity and typical usage durations.

4. General Care

Protect your tablet from physical damage by using the provided protective cover. Avoid dropping the tablet or exposing it to water or excessive dust.

TROUBLESHOOTING

If you encounter issues with your MENTUME X70 tablet, refer to the following common solutions:

Problem	Solution
Tablet does not turn on	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again.
Wi-Fi connection issues	Restart your Wi-Fi router and the tablet. Go to Settings > Network & internet > Wi-Fi and try reconnecting.
Apps are crashing or freezing	Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). If the problem persists, uninstall and reinstall the app.
Slow performance	Close unnecessary background apps. Clear cache and temporary files. Consider performing a factory reset as a last resort (back up your data first).
Facial Recognition not working	Ensure your face is well-lit and clear of obstructions. Re-register your face in Settings > Security > Face unlock.

If these solutions do not resolve your issue, please contact MENTUME customer support.

SPECIFICATIONS

Detailed technical specifications for the MENTUME X70 Tablet:

- Model Name:** X70
- Operating System:** Android 16
- Processor:** Unisoc T7250 Octa-Core, 1.8 GHz
- RAM:** 24 GB

Internal Storage (ROM): 256 GB

Expandable Storage: Up to 1 TB via MicroSD card (not included)

Display: 10.1-inch IPS, 1920 x 1200 HD Resolution, 60Hz Refresh Rate

Rear Camera: 13 MP

Front Camera: 8 MP

Battery: 6000 mAh Lithium Polymer

Connectivity: Wi-Fi 6 (802.11a/b/g/n/ac), Bluetooth 5.0, USB 2.0, 3.5mm Audio Jack

Dimensions: 24.7L x 16.3W x 1.1H cm

Weight: 1.43 Kilograms

Special Features: Gemini AI, Stereo Speakers, USB OTG, Stylus Support, Facial Recognition, GPS Receiver, Widevine L1 Support

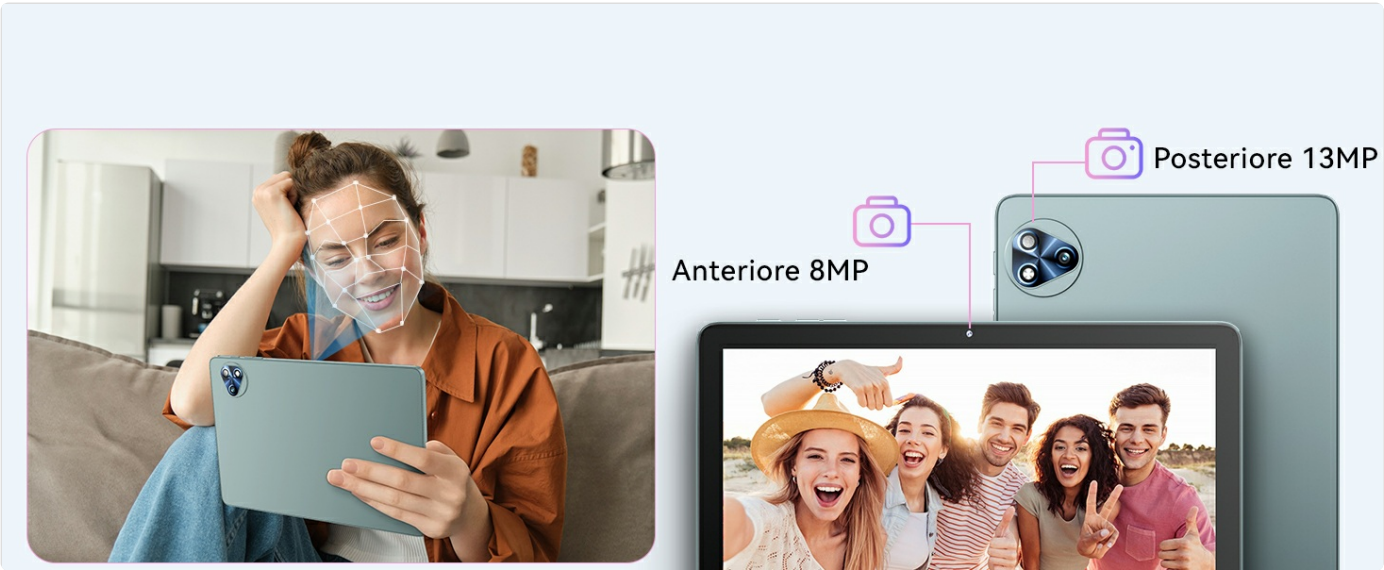


Image: Overview of the MENTUME X70 tablet's main features and specifications.

WARRANTY AND SUPPORT

Warranty Information

The MENTUME X70 Tablet comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

Customer Support

For technical assistance, warranty claims, or any questions regarding your MENTUME X70 Tablet, please contact our customer support team:

- **Email:** support@mentume.com (Example email, please refer to product packaging for actual contact)
- **Website:** www.mentume.com/support (Example website, please refer to product packaging for actual contact)

Please have your purchase receipt and tablet model number (X70) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question