

[Manuals.plus](#) /

› [NutriChef](#) /

› NutriChef 4-Liter Electric Kitchen Composter User Manual

## NutriChef NCCMP4LGY

# NutriChef 4-Liter Electric Kitchen Composter

Model: NCCMP4LGY

## INTRODUCTION

---

The NutriChef 4-Liter Electric Kitchen Composter is designed to efficiently reduce food waste and transform it into nutrient-rich material. This appliance processes various organic scraps, including fruits, vegetables, coffee grounds, and eggshells, through a process of high-temperature drying, grinding, and cooling. This method can reduce waste volume by up to 90% within 2 to 6 hours.

This composter features a compact design, operates quietly (below 48 dB), and offers three capacity modes to manage waste for households of 5-10 people. It includes a dishwasher-safe ceramic-coated inner basket and an active carbon filter system to ensure odor-free operation, with an automatic alert for filter replacement. Constructed from durable ABS and aluminum, the unit incorporates safety features such as overheat protection and automatic shutdown.

## IMPORTANT SAFETY INFORMATION

---

- **Always unplug the unit before cleaning.**
- Do not operate the unit if it is damaged.
- Keep the unit away from water sources to prevent electrical hazards.
- Do not overfill the unit beyond its stated capacity.
- Exercise caution when handling the contents, especially after a cycle, as they may be warm.
- Ensure proper ventilation during operation.

## PACKAGE CONTENTS

---

Verify that all components are present upon unpacking:

- NutriChef Electric Kitchen Composter Unit
- Removable Inner Basket (Ceramic-coated)
- Lid
- Active Carbon Filters (2 included)
- Power Cord

- User Manual (this document)

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials and inspect the composter for any damage.
2. **Placement:** Place the unit on a stable, flat, and heat-resistant surface in a well-ventilated area. Ensure there is adequate space around the unit for air circulation.
3. **Filter Installation:** Locate the filter compartments, typically at the rear or side of the unit. Insert the active carbon filters into their designated slots. Ensure they are securely in place.
4. **Inner Basket:** Place the ceramic-coated inner basket inside the main unit.
5. **Power Connection:** Plug the power cord into the composter and then into a standard electrical outlet.



**Image:** Overview of the composter's dimensions and the location of the carbon filter. The image shows the composter from a slightly elevated angle, highlighting its rectangular shape and the placement of the carbon filter unit on the side, along with an additional odor filter component.

## OPERATING INSTRUCTIONS

---

Follow these steps to operate your NutriChef Electric Kitchen Composter:

1. **Prepare Food Waste:** Collect suitable food scraps such as fruit and vegetable peels, coffee grounds, eggshells, and small amounts of cooked food. Avoid large bones, hard pits, or excessive liquids.
2. **Load the Basket:** Open the lid and place the food waste into the inner basket. Do not overfill; ensure the lid can close properly. The composter has a 4-liter capacity.
3. **Close the Lid:** Securely close the lid. The unit will not operate if the lid is not properly closed.
4. **Select Volume Mode:** Use the "Volume" button to select the appropriate mode based on the amount of waste:
  - **Low:** For small quantities of waste.
  - **Medium:** For average daily waste.
  - **Large:** For maximum capacity loads.
5. **Start Cycle:** Press the "Mode" button to initiate the composting cycle. The unit will begin the drying, grinding, and cooling process. A typical cycle lasts between 2 to 6 hours, depending on the volume and moisture content of the waste.
6. **Monitoring:** The unit operates quietly (under 48 dB) and uses active carbon filters to minimize odors. An indicator light will signal when the filters need replacement (approximately every 600 hours of use).
7. **Cycle Completion:** Once the cycle is complete, the unit will automatically shut off. The processed material will be significantly reduced in volume and can be used as a soil amendment or disposed of.

# SMART ONE-TOUCH CONTROLS



**Image:** Close-up of the composter's control panel, showing the power, volume, mode, and play/pause buttons, along with a digital timer display. This illustrates the smart one-touch controls for easy operation.

# TURN KITCHEN WASTE INTO NUTRIENT-RICH COMPOST

Reduce Kitchen waste up to 90%



**Image:** A visual representation of food waste before and after processing in the NutriChef composter. The "Before" image shows a basket full of kitchen scraps, while the "After" image shows a significantly smaller volume of dry, processed material at the bottom of the basket, demonstrating up to 90% waste reduction.



**Image:** An illustration of the internal composting process, showing food waste being heated and processed within the composter. Icons indicate a processing time of 4-6 hours and a 4L capacity, emphasizing the speed and efficiency of the unit.

# ODORLESS AND QUIET OPERATION



Activated  
Carbon Filter



<48 dB  
Quiet



Clean &  
Bug-Free

**Image:** The composter operating quietly in a kitchen setting, with a woman reading nearby. The image highlights the active carbon filter system and a noise level below 48 dB, indicating an odorless and quiet operation.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your composter:

- **Cleaning the Inner Basket:** The ceramic-coated inner basket is dishwasher-safe. After each use, remove the basket and clean it thoroughly. For manual cleaning, use warm soapy water and a non-abrasive sponge.
- **Cleaning the Unit Exterior:** Wipe the exterior of the composter with a damp cloth. Do not immerse the unit in water. Ensure the unit is unplugged before cleaning.
- **Filter Replacement:** The active carbon filters should be replaced approximately every 600 hours of operation, or when the filter indicator light illuminates. Refer to the "Setup" section for filter installation instructions. Replacement filters can be purchased from authorized NutriChef retailers.
- **Lid Cleaning:** Clean the inside of the lid and any seals regularly to prevent residue buildup and maintain an airtight seal.

# SELF-CLEANING AND SAFE DESIGN



Dishwasher-Safe  
Bucket



Overheat  
Protection



Lid-Open  
Auto Shutoff



**Image:** An internal view of the composter highlighting its self-cleaning capabilities and safety features. Icons indicate a dishwasher-safe bucket, overheat protection, and lid-open auto-shutoff, emphasizing ease of cleaning and user safety.

## TROUBLESHOOTING

If you encounter issues with your NutriChef composter, refer to the table below:

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outage; lid not closed properly; unit damaged.	Ensure power cord is securely plugged in. Check circuit breaker. Close lid firmly. If damaged, do not operate; contact support.
Unpleasant odors during operation.	Filters need replacement; lid not sealed; inappropriate waste added.	Replace carbon filters. Ensure lid is properly closed and sealed. Avoid adding items not suitable for composting.

Problem	Possible Cause	Solution
Waste not fully processed.	Overfilled basket; high moisture content; incorrect volume mode selected.	Do not overfill. Reduce moisture by adding drier scraps. Select the appropriate volume mode (e.g., "Large" for full loads). Run another cycle if necessary.
Unit is excessively noisy.	Foreign object in grinding mechanism; unit not on a stable surface.	Unplug and inspect the inner basket for any hard objects. Ensure the unit is placed on a flat, stable surface.

## SPECIFICATIONS

<b>Brand</b>	NutriChef
<b>Model Number</b>	NCCMP4LGY
<b>Capacity</b>	4 Liters (4 Quarts)
<b>Material</b>	ABS, Aluminum, Ceramic-coated components
<b>Color</b>	Grey
<b>Dimensions (L x W x H)</b>	30.3 cm x 8.5 cm x 33.2 cm (approx. 11.93" x 3.35" x 13.07")
<b>Item Weight</b>	8.46 kg (18.66 lbs)
<b>Noise Level</b>	<48 dB
<b>Filter Type</b>	Active Carbon Filters
<b>UPC</b>	842893184562

## WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts (such as carbon filters), please visit the official NutriChef website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

**NutriChef Official Store:** [Visit NutriChef Store](#)