

LEADZM XQB70-168

LEADZM 5KG Mini Washing Machine

INSTRUCTION MANUAL - MODEL XQB70-168

1. Introduction

Thank you for choosing the LEADZM 5KG Mini Washing Machine. This appliance is designed for efficient and convenient laundry care in various living spaces. This manual provides essential information for safe operation, installation, maintenance, and troubleshooting to ensure optimal performance and longevity of your washing machine.



Image 1.1: LEADZM Fully Automatic Washing Machine overview, highlighting key features like 5kg capacity, 8 programs, LED screen, noise reduction, simple operation, and energy saving.

This 2-in-1 washing machine combines washing and spinning functions, making it a versatile solution for your laundry needs. Its compact design makes it ideal for apartments, RVs, dormitories, and other small living spaces.

CONVIENT À DIVERSES SCÈNES ET TENUES D'INTÉRIEUR



Image 1.2: The washing machine is suitable for various indoor environments such as apartments, dorms, laundry rooms, and studios, and can handle daily wear, children's dirty clothes, and sweaty sports shirts.

2. Safety Instructions

Please read all safety instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Ensure the washing machine is placed on a stable, level surface to prevent vibration and noise.
- Do not install or store the appliance where it will be exposed to weather or freezing temperatures.
- Connect the appliance to a properly grounded electrical outlet. Do not use extension cords.
- Keep children away from the appliance during operation. This machine is equipped with a child lock feature for added safety.
- Do not wash items that are soiled with flammable or explosive substances.
- Always unplug the washing machine before cleaning, maintenance, or if it will be unused for an extended period.
- Do not attempt to repair or replace any part of the appliance unless specifically recommended in this manual. Refer all servicing to qualified personnel.



Image 2.1: The washing machine includes a child safety lock feature to prevent accidental operation by children.

3. Product Overview

The LEADZM 5KG Mini Washing Machine is designed for convenience and efficiency. It features a diamond-patterned inner drum to reduce wear on clothes and enhance cleaning performance. The air-dry function promotes air circulation for fresher laundry.



Image 3.1: Front view of the LEADZM 5KG Mini Washing Machine in a typical laundry room setup.

Key Features:

- **2-in-1 Wash and Spin:** Combines both functions in a single process.
- **5KG Capacity:** Suitable for small to medium loads.
- **8 Wash Modes:** Versatile options for different fabric types and soil levels.
- **5 Water Levels:** Adjustable water usage for efficiency.
- **Diamond Inner Drum:** Reduces clothing wear and improves cleaning.
- **Air Dry Function:** Enhances freshness and aids in drying.
- **Child Lock:** For enhanced safety.
- **Self-Cleaning Function:** Maintains drum hygiene.
- **Adjustable Feet:** Ensures stability on uneven surfaces.
- **Quiet Operation:** Designed for minimal noise disturbance.

POURQUOI NOUS CHOISIR

	 <p>5KG Grande capacité</p>		 <p>Cuve autonettoyante</p>
	 <p>Mode lavage Sauvegarde de la mémoire</p>		 <p>Verrouillage enfant</p>
	 <p>Séchage à l'air libre Vêtements frais</p>		 <p>Minuterie 24 heures</p>

Image 3.2: Overview of the washing machine's key features, including capacity, self-cleaning, wash memory, child lock, air dry, and 24-hour timer.

2-IN-1 LAVAGE ET ESSORAGE



Image 3.3: The 2-in-1 wash and spin function, emphasizing compact design, water/energy saving, stainless steel drum, and silent operation.

<p>✓ NETTOYAGE ANTIBACTÉRIEN</p> <p>Préservez notre environnement de lavage sain et propre</p> <p>✗ ALLERGIES CUTANÉES</p>	<p>✓ ÉVITEZ LA POLLUTION SECONDAIRE</p> <p>Auto-nettoyage du tambour : éliminez les saletés déposées, évitez le nettoyage secondaire</p> <p>✗ POLLUTION SECONDAIRE</p>	<p>✓ LAVAGE À LA MAIN BIONIQUE</p> <p>Réduit les frottements et les accrocs sur les vêtements</p> <p>✗ ACCROCS SUR LES VÊTEMENTS</p>	<p>✓ FILTRE EN TISSU</p> <p>Tissu collet, empêche les odeurs de moisi</p> <p>✗ MAUVAISE ODEUR</p>
--	--	--	---

Image 3.4: The stainless steel inner tub cleans deeply and gently, ensuring clothes look new after each wash.



Image 3.5: The washing machine offers a large 5kg capacity in a compact size, capable of washing various items like sheets, t-shirts, shirts, pants, coats, and curtains.

4. Setup

4.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Ensure all accessories are present:

- Power Cord
- Drain Hose

4.2 Placement

Place the washing machine on a firm, level surface. Adjust the leveling feet at the bottom of the machine to ensure it is stable and does not wobble. Proper leveling minimizes vibration and noise during operation.

4.3 Water Connection

1. Connect the water inlet hose (not explicitly listed as included, but implied) to a cold water tap.
2. Connect the other end of the water inlet hose to the water inlet port on the back of the washing machine.
3. Ensure all connections are tight to prevent leaks.

4.4 Drain Hose Installation

Attach the provided drain hose to the drain outlet on the washing machine. Position the other end of the drain hose into a sink or a standpipe, ensuring it is securely fixed and at an appropriate height to allow for proper drainage (typically between 60-90 cm from the floor).

4.5 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the washing machine.

5. Operating Instructions

5.1 Control Panel Overview



Image 5.1: The control panel displays 8 wash modes and allows selection of water level, wash, rinse, spin, and air dry functions, along with a child lock feature.

The control panel features an LED display for time remaining, buttons for program selection, water level, and start/pause. It also includes indicators for soak, wash, rinse, spin, and air dry stages.

5.2 Loading Laundry

1. Sort clothes by fabric type, color, and soil level.
2. Open the top lid and load clothes loosely into the drum. Do not overload the machine.
3. Add appropriate detergent and fabric softener to their respective dispensers.



5.3 Selecting a Wash Program

The machine offers 8 distinct wash programs:

- **Normal:** For everyday cottons and mixed fabrics.
- **Jeans:** Optimized for denim and heavy fabrics.
- **Standard:** A balanced program for general laundry.
- **Quick:** A fast 26-minute cycle for lightly soiled items.
- **Wool:** Gentle wash for woolens and delicate items.
- **Delicate:** Extra gentle cycle for very delicate garments.
- **Tub Clean:** For cleaning the washing machine drum (see Maintenance).
- **Air Dry:** For enhanced drying and freshness.

Use the 'Program' button on the control panel to cycle through the available modes. The LED display will show the selected program.

5.4 Adjusting Water Level

Press the 'Water Level' button to select one of the 5 available water levels, matching the size of your laundry load for water efficiency.

5.5 Starting a Cycle

1. After selecting the program and water level, close the top lid.
2. Press the 'Start/Pause' button to begin the wash cycle.
3. To pause a cycle, press 'Start/Pause' again. Press it once more to resume.

5.6 Child Lock Function

To activate the child lock, press and hold the 'Child Lock' button (or indicated combination) for a few seconds until the indicator lights up. This prevents accidental changes to settings or opening of the lid during operation. To deactivate, repeat the process.

6. Maintenance

Regular maintenance ensures the longevity and efficient operation of your washing machine.

6.1 Cleaning the Drum (Tub Clean)

The washing machine features a self-cleaning function to keep the stainless steel inner tub hygienic. Select the 'Tub Clean' program and run it periodically (e.g., once a month) without any laundry inside. You may add a washing machine cleaner if desired.

6.2 Cleaning the Lint Filter

Locate the lint filter inside the drum (usually near the top rim). Remove it, clean any accumulated lint under running water, and reinsert it securely. Clean the filter after every few washes to maintain optimal performance.

6.3 Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.

7. Troubleshooting

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; Child lock active; No water supply.	Check power connection; Ensure lid is fully closed; Deactivate child lock; Check water tap and hose.
Excessive vibration/noise	Machine not level; Overloaded; Items unevenly distributed.	Adjust leveling feet; Reduce load size; Redistribute laundry evenly.
Water leakage	Hoses loose; Drain hose improperly positioned.	Tighten water inlet/drain hoses; Ensure drain hose is secure and at correct height.
Poor washing results	Overloaded; Insufficient detergent; Incorrect program selected.	Reduce load; Use correct amount of detergent; Select appropriate wash program.
Water not draining	Drain hose blocked or kinked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter (refer to specific instructions if available).

8. Specifications

Technical details for the LEADZM 5KG Mini Washing Machine, Model XQB70-168.



Image 8.1: Dimensions of the LEADZM 5KG Mini Washing Machine.

Feature	Detail
Brand	LEADZM
Model Number	XQB70-168
Capacity	5 Kilograms
Dimensions (L x W x H)	51 x 47 x 86.5 cm
Weight	22 Kilograms
Loading Type	Top Load
Special Features	Remaining Time Display, Child Lock, Self-Cleaning Tub, Air Dry Function
Included Components	Power Cord, Drain Hose
Manufacturer	LEADZM

9. Warranty and Support

Information regarding product warranty and customer support was not provided in the available data. Please refer to your purchase documentation or contact the retailer for details on warranty coverage and support services.

10. Official Product Videos

No official product videos from the seller were provided in the available data.