

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Costzon](#) /
- › [Costzon Kids Corner Play Kitchen Instruction Manual](#)

Costzon 07375

Costzon Kids Corner Play Kitchen Instruction Manual

Model: 07375

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your new Costzon Kids Corner Play Kitchen. Designed to encourage imaginative play, this playset features realistic appliances and accessories, fostering creativity and practical life skills in young chefs.



Image shows two children actively engaged with the corner play kitchen, highlighting its various sections including the refrigerator, stove, and sink area.

SAFETY INFORMATION

Please read all safety warnings and instructions before assembly and use to ensure a safe play environment.

- Designed for children aged 3 years and up.
- Features rounded edges for enhanced safety during play.
- Complies with ASTM and CPSIA safety standards.
- Adult supervision is recommended during play to prevent accidents.
- Regularly inspect all parts for wear and tear, loose screws, or damage. Discontinue use if any damage is found and contact customer support.

WHAT'S IN THE BOX

Verify that all components are present and undamaged before beginning assembly.

- 1 x Corner Play Kitchen unit
- 21 x Kitchen Accessories (e.g., pots, pans, utensils, play food)
- 1 x User Guide (this document)



Image displays the 21 included kitchen accessories, such as various play food items, cookware, and serving tools, designed to enhance imaginative play.

ASSEMBLY INSTRUCTIONS

Assembly requires adult supervision and may take approximately 2-6 hours. Follow the included user guide for step-by-step instructions. Ensure all parts are correctly aligned and securely fastened.

Tools Required: Standard household tools (e.g., screwdriver).

Assembly Tip: Organize all parts and hardware before starting. Some users find it helpful to watch an assembly video for visual guidance.

Assembly Video Guide

Watch this official seller video for a step-by-step assembly guide to assist with the setup process.

Your browser does not support the video tag.

This video demonstrates the unboxing and assembly process for the Corner Kitchen Playset. It shows various components being put together to form the complete kitchen structure, providing visual aid for installation.

OPERATING INSTRUCTIONS

Familiarize yourself with the interactive features of your play kitchen.

Realistic Stoves

The play kitchen features two stoves with rotation knobs that produce realistic clicking sounds. Place pots or pans on the burners to activate cooking sounds and red glowing lights, simulating a real stovetop.



Image shows a close-up of the play kitchen's two stoves. One burner is lit with a red glow, indicating activation, and a small pot is placed on it. A hand is shown turning one of the stove knobs.

Coffee Machine

The coffee machine includes a twistable handle for pretend coffee brewing, adding to the realistic play experience.

Refrigerator

The refrigerator has multiple compartments with opening doors for storing play food and accessories, promoting organization.

Microwave

The microwave features a door that opens and closes, allowing children to place and retrieve play food items.

Toaster

The toaster allows for interactive play with included toast accessories, simulating toast popping up.



Refrigerator

Microwave

Oven

Toaster

All-In-One Kids Cooking Playset

Image features the play kitchen's refrigerator with open doors, a microwave with an open door, and a toaster with toast popping up, showcasing multiple functional appliances.

Sink and Faucet

The removable sink and easy-to-use faucet allow for pretend dishwashing. The faucet can be turned for added realism.

Dishwasher

The playset includes a cartoon-themed dishwasher with an opening door, encouraging tidying-up habits after play.

Pretend Washing Fun



Realistic Faucet & Sink

Encourages creativity as kids “wash” dishes



Cartoon Dishwasher

Inspires responsibility and tidying-up habits

Image shows the play kitchen's sink with a realistic-looking faucet and play vegetables, alongside the cartoon-themed dishwasher, emphasizing pretend cleaning activities.

Writable Blackboard

Use the integrated writable blackboard to create daily menus, practice writing, or draw fun kitchen-themed pictures.

STORAGE SOLUTIONS

The clever corner design maximizes playroom space and offers various storage options to keep accessories neatly organized.

- **Enclosed Cabinets:** Keep smaller items out of sight.
- **Open Shelves:** Display favorite play food or kitchenware.
- **3 Hanging Hooks:** Conveniently store utensils.

Great Gift for Birthdays

Suitable Age: 3+



Image highlights the storage features of the play kitchen, including open shelves, enclosed cabinets, and three hooks for hanging utensils, promoting organization.

MAINTENANCE

Proper care will extend the life of your play kitchen.

- Wipe all surfaces with a soft, damp cloth and mild soap as needed.
- Avoid using abrasive cleaners, harsh chemicals, or excessive water, which can damage the wood finish.
- Ensure all parts are completely dry before storing or resuming play to prevent moisture damage.
- Periodically check and tighten any loose screws or fasteners.

TROUBLESHOOTING

Here are solutions to common issues you might encounter.

Missing Parts

If any parts are missing upon arrival, please contact Costzon customer support immediately for assistance. Provide your purchase details and a list of missing items.

Chalkboard Issues

If the chalkboard is difficult to write on or erase, ensure you are using standard chalk and a soft, damp cloth for cleaning. Avoid using liquid chalk markers unless specified, as they may stain the surface.

SPECIFICATIONS

Detailed product information for your reference.

- **Color:** Beige/White (as pictured)
- **Material:** Beech Wood, Schima Superba, MDF
- **Overall Dimensions (L x W x H):** 58" x 21.5" x 34" (146.5 x 54 x 85.5 cm)
- **Height of Countertop:** 19" (47.5 cm), 17.5" (44.5 cm)
- **Length of Each Base Edge:** 28" (71 cm), 9.5" (24 cm), 16" (40.5 cm)
- **Suitable Age:** 3+ years
- **Net Weight:** 55 lbs (25 kg)
- **Model Number:** 07375
- **ASIN:** B0GF6RCRMZ

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official Costzon website or contact their customer service department. Keep your purchase receipt for warranty claims.