

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [awesafe](#) /

> [awesafe GF04XL Biometric Gun Safe Instruction Manual](#)

awesafe GF04XL

awesafe GF04XL Biometric Gun Safe Instruction Manual

Model: GF04XL

1. SAFETY INFORMATION

Proper and responsible storage of firearms is paramount to prevent unauthorized access, especially by children. This awesafe gun safe is designed to provide secure storage for your handguns and ammunition. Always ensure the safe is properly secured and locked when not in use. Keep all keys and access codes in a secure location, inaccessible to unauthorized individuals.

- Always treat firearms as if they are loaded.
- Keep your finger off the trigger until ready to shoot.
- Never point a firearm at anything you are not willing to destroy.
- Be sure of your target and what is beyond it.
- Store firearms unloaded and locked.
- Store ammunition in a separate, locked location.
- Keep keys and access codes confidential and secure.

2. PRODUCT OVERVIEW

The awesafe GF04XL Biometric Gun Safe offers secure storage for up to two standard handguns and extra ammunition. It features multiple access methods including biometric fingerprint, a 4-button keypad, and manual key access. Constructed from solid steel with a pry-resistant door, this safe is designed for durability and security. It also includes a gas strut for quiet, single-handed opening and interior LED lighting for visibility in low-light conditions.

Key Features:

- **UL1037 Certified:** Meets international standards for security.
- **Multiple Access Methods:** Biometric fingerprint, 4-button keypad, and manual key.
- **Quick Access:** Gas strut for instant, quiet door opening.
- **Interior LED Lighting:** Enhances visibility in dark environments.

- **Robust Construction:** Solid steel and pry-resistant door for enhanced security.
- **Capacity:** Designed to store two standard handguns and ammunition.

What's in the Box:



Image Description: This image displays the contents included with the awesafe GF04XL gun safe. It shows the black gun safe itself, two manual keys, a set of mounting screws, and a quick access user manual. Four AA alkaline batteries are also shown, indicating they are required but not included with the product.

- awesafe GF04XL Biometric Gun Safe
- 2 x Manual Keys
- Mounting Screws
- User Manual

3. SETUP

3.1 Battery Installation

The safe requires 4 AA alkaline batteries (not included) for electronic operation. Ensure the safe is open using the manual key before installing batteries.

1. Locate the battery compartment inside the safe.
2. Insert 4 AA alkaline batteries, ensuring correct polarity.
3. Close the battery compartment cover securely.

Your browser does not support the video tag.

Video Description: This official awesafe instruction video demonstrates the process of installing batteries and setting up both the digital password and fingerprint access for the gun safe. It visually guides the user through each step, including pressing the settings button and entering codes or scanning fingerprints.

3.2 Setting a Digital Password (Up to 5 groups)

1. With the safe door open, press the internal settings button (usually a small button near the battery compartment). The green light will flash.
2. Press '1' on the keypad.
3. Enter your desired 4-digit password.
4. Press '1' again to confirm. The green light will flash quickly twice, indicating successful setting.

3.3 Setting a Fingerprint Password (Up to 30 groups)

1. With the safe door open, press the internal settings button. The green light will flash.
2. Place your finger on the biometric scanner. The green light will flash quickly twice, indicating successful setting.
3. Repeat the process for additional fingerprints if desired.

4. OPERATING THE SAFE

4.1 Opening with Fingerprint

1. Place a pre-registered finger firmly on the biometric scanner.
2. The safe will unlock and the door will open automatically via the gas strut.

4.2 Opening with Keypad

1. Enter your pre-set 4-digit digital password on the keypad.
2. The safe will unlock and the door will open automatically.

4.3 Opening with Manual Key

In case of battery failure or forgotten codes, the safe can be opened with the manual key.

1. Insert the manual key into the keyhole on the front of the safe.
2. Turn the key to unlock the safe.
3. The door will open automatically.

4.4 Closing the Safe

To close the safe, simply push the lid down firmly until it latches securely. Ensure no items obstruct the closing mechanism.



Image Description: This image shows the awesafe gun safe in its closed position, highlighting the sleek black exterior, the fingerprint scanner, the four-button keypad, and the manual keyhole. The design features subtle ridges on the top surface.

Fast Access Points

Set your own combination for convenient access



Image Description: This image illustrates the three quick access points of the awesafe gun safe: a finger pressing the biometric scanner for 'Fingerprint Quick Access', a hand entering a code on the 4-button keypad for 'Password Quick Access', and a key being inserted into the manual keyhole for 'Manual keys'.

5. MAINTENANCE

5.1 Battery Replacement

When the batteries are low, the safe will typically provide an indicator (e.g., a series of beeps or a red light). Replace all 4 AA alkaline batteries promptly to ensure continued electronic functionality. Always use the manual key if the batteries are completely depleted.

5.2 Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners. For the fingerprint sensor, use a clean, dry cloth to gently remove any dust or smudges.

5.3 Key Storage

Store the manual keys in a secure location away from the safe and out of reach of unauthorized individuals. Never store the keys inside the safe.

6. TROUBLESHOOTING

6.1 Fingerprint Not Recognized

- Ensure your finger is clean and dry.
- Place your finger firmly and completely on the sensor.
- Try re-enrolling your fingerprint if issues persist.
- Check battery levels.

6.2 Keypad Not Responding

- Verify that the batteries are correctly installed and have sufficient power.
- Ensure you are entering the correct digital password.
- If the keypad remains unresponsive, use the manual key to open the safe.

6.3 Safe Not Opening Electronically

- Check battery status and replace if necessary.
- Ensure the correct fingerprint or digital password is being used.
- Use the manual key as an override.

7. SPECIFICATIONS

Feature	Detail
Brand	awesafe
Model Number	GF04XL
Product Dimensions	9.9"D x 12.1"W x 3.2"H
Lock Type	Biometric, Electronic Combination Lock, Key
Color	Black
Capacity	13 Pounds (weight capacity)
Material	Aluminum, Solid Steel
Special Feature	Biometric Fingerprint, Gas Strut, LED Lighting
Mounting Type	Floor Mount (mounting screws included)
Item Weight	10 Pounds
Alarm	Anti-theft
Water Resistance Level	Not Water Resistant
Batteries Required	Yes (4 AA alkaline batteries)

Batteries Included	No
--------------------	----

8. WARRANTY AND SUPPORT

awesafe is committed to providing high-quality products and excellent customer service. If you encounter any questions or problems with your awesafe GF04XL Biometric Gun Safe, please do not hesitate to contact our customer service team. We are dedicated to providing a satisfactory solution for you.

For support, please refer to the contact information provided in your product packaging or visit the official awesafe website.