

[Manuals.plus](#) /

› [HIFI WALKER](#) /

› HIFI WALKER H2 Touch Hi-Res MP3 Player User Manual

HIFI WALKER H2TOUCH64GB

HIFI WALKER H2 Touch Hi-Res MP3 Player User Manual

Model: H2TOUCH64GB

INTRODUCTION

This manual provides detailed instructions for the HIFI WALKER H2 Touch Hi-Res MP3 Player. Please read this manual thoroughly before using the device to ensure proper operation and to maximize your listening experience. The H2 Touch is designed for high-fidelity audio playback, featuring a touchscreen interface, Bluetooth connectivity, and support for various lossless audio formats.



The HIFI WALKER H2 Touch Hi-Res MP3 Player in use, demonstrating its portable design and high-quality audio experience.

SETUP

1. Unboxing and Initial Inspection

Upon opening the package, verify that all components are present:

- HIFI WALKER H2 Touch MP3 Player
- 64GB Micro SD Card (pre-installed or included separately)
- USB Cable
- User Manual



The HIFI WALKER H2 Touch package contents, including the player, USB cable, and Micro SD card.

2. Charging the Device

Before first use, fully charge the device. Connect the provided USB cable to the player's Type-C port and to a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.



The HIFI WALKER H2 Touch connected for charging, illustrating the 1500mAh battery and power management features.

3. Inserting the Micro SD Card

The device supports MicroSD, SDHC, and SDXC cards up to 512GB. A 64GB Micro SD card is included. Locate the Micro SD card slot on the side of the player. Gently insert the card until it clicks into place.



Inserting the Micro SD card into the HIFI WALKER H2 Touch, highlighting the expandable storage up to 512GB.

4. Transferring Music Files

Connect the player to your computer using the USB cable. The device can function in two modes:

- **Data Transfer Mode:** Allows you to drag and drop music files directly onto the Micro SD card.
- **USB DAC Mode:** Enables the player to act as an external sound card for your computer, providing high-fidelity audio output.

Supported audio formats include FLAC, WAV, APE, ALAC, MP3, DSF, and DFF.

OPERATING INSTRUCTIONS

1. Power On/Off and Basic Controls

Press and hold the power button to turn the device on or off. The H2 Touch features a 2.4-inch HD touchscreen for navigation, complemented by physical buttons for volume control, track skipping, and play/pause functions.



The HIFI WALKER H2 Touch features a responsive touchscreen and intuitive physical button controls for easy operation.

2. Music Playback

Navigate to the 'Music' section on the touchscreen. You can browse your music by artist, album, genre, or folder.

Select a track to begin playback. The player supports high-resolution and lossless audio formats for optimal sound quality.



Design for Music Audiophile

With High Sampling Rates & Bit Depths

WAV 16/24/32-bit 8kHz-384kHz	FLAC 16/24-bit up to 192kHz	APE 16/24-bit, up to 384kHz	M4A (ALAC) Up to 24-bit/ 192kHz
DSF (Sony) Supports DSD64/ DSD128	DFF (Philips) Supports DSD64/ DSD128	SACD-ISO Supports DSD64	MP3 8K-320Kbps, 8kHz-48kHz

The HIFI WALKER H2 Touch supports various high-sampling rate and bit-depth audio formats, including WAV, FLAC, APE, M4A, DSF, DFF, SACD-ISO, and MP3.

3. Bluetooth Connectivity

The H2 Touch supports Bluetooth 5.2 with both send and receive functions. To connect to Bluetooth headphones or speakers, navigate to the 'Bluetooth' settings, turn Bluetooth on, and select your desired device from the list. For receiving audio, ensure the player is in receive mode and pair it with your transmitting device.



The HIFI WALKER H2 Touch offers bi-directional lossless Bluetooth 5.2 connectivity, allowing connection to various audio devices.

4. USB DAC Function

When connected to a computer via USB, the H2 Touch can operate as a USB DAC (Digital-to-Analog Converter). This allows your computer's audio to be processed by the player's high-quality ESS DAC chip, enhancing sound output.



USB-DAC High-Fidelity Decoding

Connecting via USB-DAC mode lets you enjoy music stored on your PC directly on the device without transferring it, ensuring the same high-quality audio experience.

The HIFI WALKER H2 Touch functioning as a USB DAC, providing high-fidelity audio decoding when connected to a computer.

5. Equalizer Settings

Access the equalizer settings to customize your audio output. The device offers various preset EQ modes (e.g., Pop, Blues, Classic) and may include a custom MSEB (Mage Sound 8-Ball) equalizer for fine-tuning sound characteristics like overall temperature, bass extension, and bass texture.



The HIFI WALKER H2 Touch equalizer interface, showing options for various sound styles.



The MSEB equalizer interface on the HIFI WALKER H2 Touch, allowing detailed sound customization.

6. Recording Function

The device includes a voice recording function. Navigate to the 'REC' menu to start, pause, and save recordings. Recordings can be saved in WAV, MP3, or FLAC formats.



The HIFI WALKER H2 Touch recording function, useful for lectures, meetings, or audio notes.

7. Ebook Function

The H2 Touch supports ebook reading. Transfer compatible ebook files to the device's storage and access them through the 'Ebook' menu.



The HIFI WALKER H2 Touch displaying an ebook, demonstrating its additional reading functionality.

MAINTENANCE

1. Cleaning the Device

Use a soft, dry, lint-free cloth to clean the device's screen and body. Avoid using abrasive cleaners or solvents, which can damage the finish.

2. Battery Care

The H2 Touch is equipped with a 1500mAh battery, providing approximately 10 hours of playback time. To prolong battery life:

- Avoid extreme temperatures.
- Do not allow the battery to fully discharge frequently.
- Store the device with a partial charge if not used for extended periods.

3. Software Updates

Periodically check the manufacturer's website for any available firmware updates. Updates can improve performance, add new features, or fix bugs. Follow the instructions provided with the update carefully.

TROUBLESHOOTING

Device does not power on:

- Ensure the device is fully charged. Connect it to a power source for at least 30 minutes.
- Try performing a hard reset by holding the power button for 10-15 seconds.

No sound or poor sound quality:

- Check headphone connection and ensure headphones are functioning correctly.
- Verify volume levels on the device and any connected Bluetooth accessories.
- Ensure audio files are not corrupted and are in a supported format.
- Reset equalizer settings to default.

Bluetooth connection issues:

- Ensure both devices are in pairing mode and within range.
- Forget the device on both the player and the Bluetooth accessory, then attempt to re-pair.
- Restart both the player and the Bluetooth accessory.

Files not appearing on the device:

- Ensure the Micro SD card is properly inserted and recognized.
- Verify that files are transferred to the correct directory on the Micro SD card.
- Check if the file formats are supported by the player.


SPECIFICATIONS

Feature	Detail
Brand	HIFI WALKER
Model Name	H2TOUCH64GB
Special Features	Equalizer, Hi-Res Audio, Touch Screen, Voice Recorder
Connectivity Technology	USB, Bluetooth 5.2
Memory Storage Capacity	64 GB (Micro SD Card Included)
Expandable Storage	Up to 512GB (MicroSD, SDHC, SDXC)
Color	Black
Screen Size	2.4 inches
Display Technology	LCD
Compatible Devices	Headphones
Supported Media Type	Micro SD
Supported Audio Standards	FLAC, WAV, APE, ALAC, MP3, DSF, DFF
DAC Chip	ESS ES9219Q

Battery Capacity	1500mAh
Playback Time	Approximately 10 hours
Dimensions (Approx.)	Length: 3.3", Width: 2.4", Height: 0.6"
Weight (Approx.)	4.9oz



Physical dimensions and weight of the HIFI WALKER H2 Touch, featuring a CNC Zinc Alloy Shell.

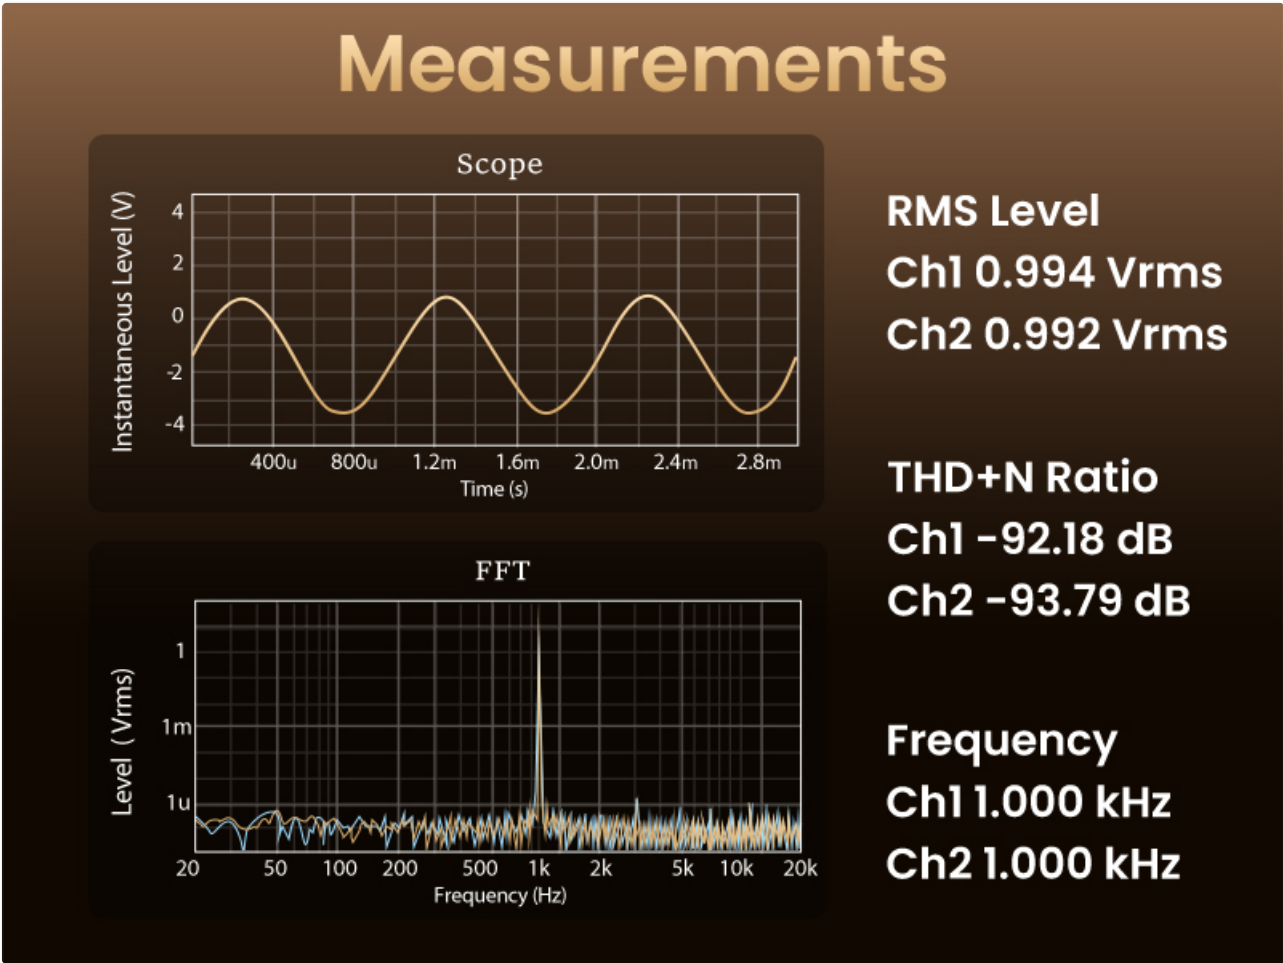

Audio performance measurements for the HIFI WALKER H2 Touch, including RMS Level, THD+N Ratio, and Frequency response.

WARRANTY INFORMATION

The HIFI WALKER H2 Touch Hi-Res MP3 Player comes with a **1 Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact HIFI WALKER customer service. Refer to the contact information provided in your product packaging or visit the official HIFI WALKER website for support resources.