



[Manuals.plus](#) /

> [Ewin](#) /

> Ewin Wireless Foldable Bluetooth Keyboard (Model EW-TKB304) Instruction Manual

Ewin EW-TKB304

Ewin Wireless Foldable Bluetooth Keyboard (Model EW-TKB304) Instruction Manual

Brand: Ewin | Model: EW-TKB304

INTRODUCTION

Thank you for purchasing the Ewin Wireless Foldable Bluetooth Keyboard. This compact and versatile keyboard is designed for enhanced productivity across multiple devices, featuring a JIS Japanese layout, an integrated touchpad, and multi-device pairing capabilities. This manual will guide you through its setup, operation, and maintenance to ensure optimal performance.

EWIN 意匠商品

これまでにない 新機能、新しい体験を



LED表示スクリーンを搭載、
キーボードの状況が一目瞭然

ヒンジロックで、折り目が固定でき、
膝の上でも安定、デスクから解放



Image: The Ewin Wireless Foldable Bluetooth Keyboard, showcasing its compact, folded form and its full-size, unfolded layout with an integrated touchpad.

1. SETUP

1.1 Package Contents

Ensure all items are present in the package:

- Ewin Wireless Foldable Bluetooth Keyboard

- USB-C Charging Cable
- Instruction Manual

スマホ並みのコンパクトさ
収納も携帯も、スマートに

三つ折りデザイン

サイズ: 182*120*20mm
(折り畳み後)



薄い 20mm (折り畳み後)



軽い 314g (本体)



Image: The Ewin keyboard, USB-C cable, and instruction manual as typically found in the product package.

1.2 Charging the Keyboard

Before first use, fully charge the keyboard. Connect the supplied USB-C cable to the keyboard's charging port and the other end to a USB power source (e.g., computer, USB wall adapter). The display screen will indicate charging status.

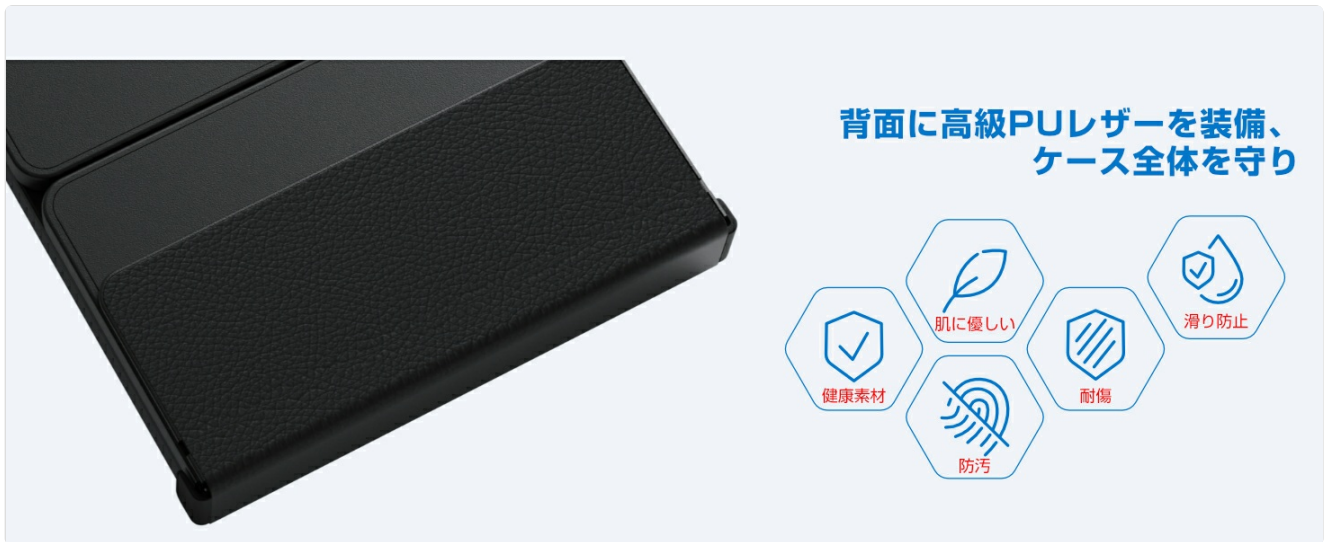


Image: A close-up of the keyboard's USB-C port with a charging cable connected, illustrating the charging process.

1.3 Powering On/Off

Unfold the keyboard to automatically power it on. Fold the keyboard to power it off and protect the keys. The hinge lock mechanism ensures stability when unfolded.



Image: The Ewin keyboard in its unfolded state, highlighting the display screen for connection and battery status, and a detail of the hinge lock for stable typing.

1.4 Bluetooth Pairing

The keyboard supports multi-device pairing (up to 3 devices via Bluetooth). To pair:

1. Unfold the keyboard to power it on.
2. Press **Fn + A** (for Device 1), **Fn + S** (for Device 2), or **Fn + D** (for Device 3) to select a pairing channel. The corresponding indicator on the display screen will flash.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for "Ewin Keyboard".
4. Select "Ewin Keyboard" from the list of available devices to connect. The indicator on the keyboard's display will stop flashing once connected.
5. To switch between paired devices, press **Fn + A/S/D** for the desired device.



Image: The Ewin keyboard demonstrating multi-device pairing with a tablet, smartphone, and laptop, showing seamless switching capability.



Image: A diagram illustrating how to switch between three paired Bluetooth devices using Fn+A, Fn+S, and Fn+D keys.

1.5 Wired Connection

The keyboard also supports a wired connection. Connect the USB-C cable from the keyboard to your computer's USB port. This allows for typing while charging.

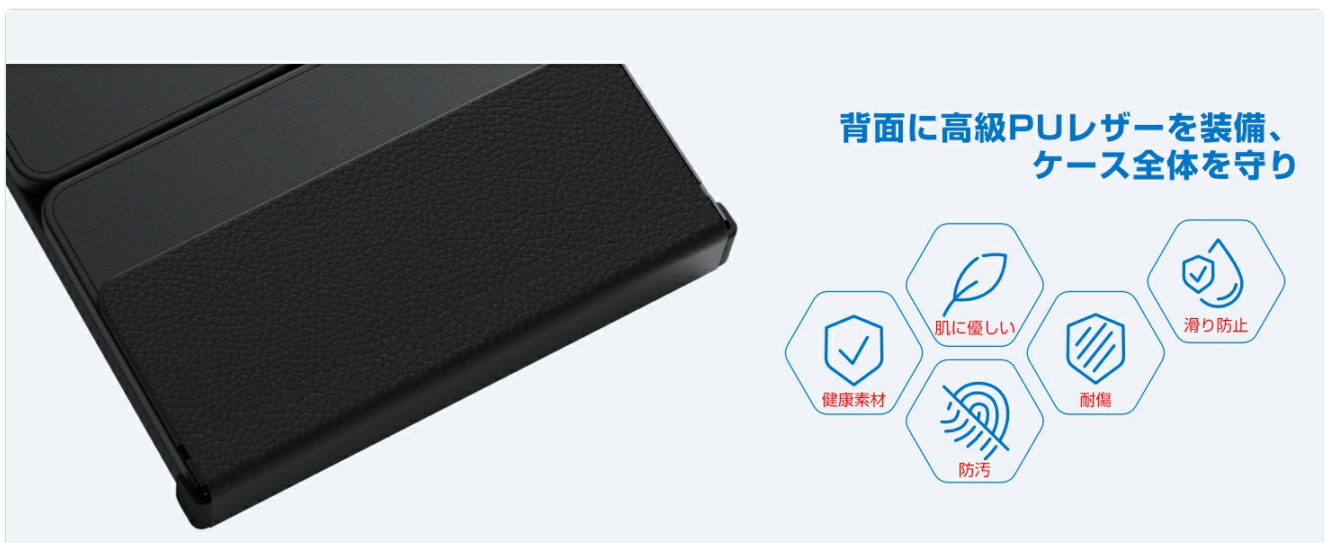


Image: The Ewin keyboard connected to a desktop computer via a USB-C cable, demonstrating wired usage.

1.6 Operating System Switching

To optimize key functions for your operating system, press the following combinations:

- **Fn + Q** for iOS/iPadOS
- **Fn + W** for Windows
- **Fn + E** for Android
- **Fn + R** for macOS

2. OPERATING THE KEYBOARD

2.1 Keyboard Layout and Function Keys

The keyboard features a JIS standard Japanese layout with a large inverted L-shaped Enter key and symmetrical Shift keys for comfortable typing. It includes 13 dedicated function keys for various shortcuts.



Image: A detailed view of the Ewin keyboard's JIS Japanese layout, showing the placement of the large Enter key, symmetrical Shift keys, and 13 function keys. The scissor-switch mechanism is also illustrated.

The keys utilize a scissor-switch mechanism, similar to laptop keyboards, providing a responsive and quiet typing experience with a 19mm key pitch.

2.2 Touchpad Operation

The integrated high-precision touchpad supports multi-touch gestures, eliminating the need for an external mouse. Refer to the following gestures:

- **One-finger tap:** Left click
- **One-finger slide:** Cursor movement
- **Two-finger slide (up/down):** Scroll
- **Two-finger slide (left/right):** Horizontal scroll
- **Pinch in/out:** Zoom (OS dependent)

大型で高精度なタッチパッド搭載 その手のまま、操作の自由を



タッチパッドを一時的に使用しない場合は、「Fn」＋「Space」キーでロックし、誤操作を防止できます。同じ操作で元に戻せます。



1本指でクリック
マウスの左クリック

1本指でスライド
カーソル移動

2本指で上下スライド
スクロール（上下）

2本指で左右スライド
画面の左右移動

ご注意：OSにより一部ジェスチャーが利用できない可能性がありますので、あらかじめご了承ください。

Image: The keyboard's touchpad with visual guides for common gestures: single-finger tap for left-click, single-finger slide for cursor movement, two-finger vertical slide for scrolling, and two-finger horizontal slide for side-to-side navigation.

To temporarily disable the touchpad and prevent accidental input, press **Fn + Space**. Press again to re-enable.

2.3 Display Screen

The integrated display screen provides real-time information on the keyboard's status, including:

- Bluetooth connection status (BT)
- Active device channel (A1, A2, A3)
- Battery level indicator

This allows for quick confirmation of your connection and power status.

3. MAINTENANCE

3.1 Cleaning

To clean the keyboard, gently wipe the surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

The back of the keyboard is equipped with high-grade PU leather, which is dirt-resistant and protects against scratches and slips.

パッケージ内容



Image: The reverse side of the Ewin keyboard, highlighting its premium PU leather finish designed for durability and protection against dirt and scratches.

3.2 Battery Care

The keyboard has a built-in 500mAh large-capacity battery, providing up to 70 hours of continuous use. It supports Type-C fast

charging.

- To check the battery level, press **Fn + Tab**. The display screen will show the current battery status.
- The keyboard features an automatic sleep function. If inactive for 20 minutes, it will enter sleep mode to conserve power. Press any key to wake it up.



Image: An illustration detailing the keyboard's 500mAh battery, 70-hour continuous use, Type-C charging, and the Fn+Tab shortcut to check battery status, along with the 20-minute auto-sleep function.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard does not power on.	Low battery or not unfolded correctly.	Charge the keyboard fully. Ensure the keyboard is fully unfolded.
Unable to connect via Bluetooth.	Keyboard not in pairing mode, device Bluetooth off, or interference.	Ensure keyboard is in pairing mode (indicator flashing). Check device Bluetooth settings. Move closer to the device. Try re-pairing.
Keys are not responding or typing incorrectly.	Incorrect OS mode selected or temporary software glitch.	Switch to the correct OS mode (Fn + Q/W/E/R). Restart the keyboard and device.
Touchpad is not working.	Touchpad disabled or OS incompatibility.	Press Fn + Space to enable the touchpad. Some advanced gestures may be OS-dependent.
Keyboard frequently disconnects.	Low battery, too far from device, or interference.	Charge the keyboard. Ensure it is within 10 meters of the device. Minimize interference from other wireless devices.

5. SPECIFICATIONS

Feature	Detail
Brand	Ewin

Feature	Detail
Model Number	EW-TKB304
Connectivity Technology	Bluetooth 5.2, USB-C (Wired)
Keyboard Description	Foldable, Bluetooth & Wired, Display Screen, Hinge Lock, JIS Japanese Layout, Multi-pairing, Touchpad, Compact, Lightweight, Silent
Compatible Devices	Smartphones, Tablets, Laptops, PCs (iOS, Windows, Android, macOS)
Special Features	Trackpad, Rechargeable, Foldable, Lightweight, Silent
Color	Black
Style	Foldable, Compact, Thin, Lightweight, Portable
Product Dimensions (L x W x H)	34.3 x 11.9 x 1 cm (unfolded)
Material	ABS (Exterior), Polycarbonate (Keyplate)
Number of Keys	90
Keyboard Layout	QWERTY (JIS Japanese)
Switch Type	Scissor-switch
Battery Capacity	500mAh
Continuous Use Time	Up to 70 hours
Weight	314 grams

6. WARRANTY AND SUPPORT

6.1 Warranty Information

This product comes with a 1-year manufacturer's warranty from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

6.2 Customer Support

For any questions, technical assistance, or warranty inquiries, please contact Ewin customer support through the retailer where you purchased the product or refer to the contact information provided on the official Ewin website.