

[Manuals.plus](#) /

> [AULCMEET](#) /

> AULCMEET RC2133501/01 Replacement Remote Control User Manual for Grundig 42 VLC 6121c TV DVD

## AULCMEET QR-RC2133501/01

# AULCMEET RC2133501/01 Replacement Remote Control User Manual

Model: QR-RC2133501/01

## INTRODUCTION

This manual provides instructions for the AULCMEET RC2133501/01 Replacement Remote Control. This remote is designed to be compatible with various Grundig TV and DVD models, including the Grundig 42 VLC 6121c. It offers a direct replacement solution without requiring complex setup procedures.





Image: The AULCMEET RC2133501/01 Replacement Remote Control, showing its overall design and button layout from an angled perspective.

## SETUP

### 1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: The back of the AULCMEET remote control with the battery compartment cover removed, illustrating where to insert the AAA batteries.

## 2. Initial Use

This replacement remote control is designed for immediate use with compatible Grundig TV and DVD models. No programming or pairing is required. Simply insert the batteries, and the remote should function directly with your device.

## OPERATING INSTRUCTIONS

The remote control features standard buttons for TV and DVD operation. Refer to the image below for button identification.



Image: A clear, top-down view of the AULCMEET remote control, detailing the layout and labels of all operational buttons.

- **Power Button (●):** Turns the connected device (TV/DVD) on or off.
- **TV/DR/DVD/AMP Buttons:** Selects the device to control. Press the corresponding button (e.g., TV) to switch control to your television.
- **Number Buttons (0-9):** Used for direct channel selection or inputting numerical values.
- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Channel Up/Down (▲/▼):** Changes the TV channel.
- **Navigation Pad (Up, Down, Left, Right, OK/Enter):** Used to navigate menus and confirm selections.
- **MENU / TOP MENU:** Accesses the main menu or top menu of the TV/DVD.
- **TXT (Teletext):** Activates or deactivates Teletext function.
- **AV:** Switches between available audio/video input sources.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls DVD playback functions.
- **PIP (Picture-in-Picture):** Activates or controls the Picture-in-Picture function if supported by your TV.
- **SCAN / PAT / S / P.** These buttons may have specific functions depending on your Grundig model, often related to channel scanning, picture settings, or special features.

## MAINTENANCE

---

### 1. Battery Replacement

If the remote control's range decreases or it becomes unresponsive, the batteries may need to be replaced. Follow the battery installation steps in the "Setup" section to replace the old batteries with new AAA batteries.

*Note: Always dispose of used batteries responsibly according to local regulations.*

### 2. Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

### 3. Storage

When not in use for extended periods, store the remote control in a cool, dry place. If storing for several months, it is advisable to remove the batteries to prevent leakage, which can damage the remote.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure the batteries are correctly installed with the correct polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote control and the device's infrared receiver.
  - Ensure you have selected the correct device mode (TV, DVD, etc.) using the dedicated buttons.
- **Short transmission distance:**
  - Replace the batteries. Low battery power can reduce the remote's effective range.
  - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

- **Certain buttons do not work:**

- Verify that the remote is in the correct mode (TV, DVD).
- Some functions may not be supported by all Grundig models. Refer to your device's original manual for specific feature compatibility.

## SPECIFICATIONS

Feature	Detail
Brand	AULCMEET
Model Number	QR-RC2133501/01
Compatible Devices	Television (Grundig 42 VLC 6121c TV DVD and other compatible models)
Connectivity Technology	Infrared
Maximum Range	Approximately 10 meters
Special Features	Ergonomic design
Product Dimensions (L x W x H)	15L x 4.5W x 1H centimetres
Power Source	2 x AAA Batteries (not included)

## WARRANTY INFORMATION

This AULCMEET replacement remote control is typically covered by a standard manufacturer's warranty. For specific details regarding warranty duration and terms, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

## SUPPORT

If you encounter issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact the retailer or the manufacturer's customer support. Provide your product model number (QR-RC2133501/01) and a detailed description of the problem when seeking support. For general inquiries, you may also refer to the official AULCMEET website or the support section of the platform where the product was purchased.