



Manuals.plus /

- › CXK /
- › CXK O34 Open Ear Headphones with Microphone User Manual

CXK O34

CXK O34 Open Ear Headphones with Microphone User Manual

Model: O34

INTRODUCTION

Thank you for choosing the CXK O34 Open Ear Headphones. This manual provides essential information for setting up, operating, and maintaining your new wireless headset. Please read it carefully to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Verify that all items are present in the package:

- CXK O34 Open Ear Headphones
- Charging Cable (Magnetic)
- User Manual (This document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your CXK O34 headphones.



Open ear headphones with mic

ENC Noise Canceling for Clear Call



Mute
Control



Hi-Fi Stereo
Sound



Air
Conduction

Image: CXK O34 Open Ear Headphones, showing the overall design with the microphone boom extended.

Key Features:

- **Open Ear Design:** Allows awareness of surroundings.
- **AI Noise Cancelling Microphone:** Reduces background noise during calls.
- **One-Touch Mute:** Quickly mute/unmute the microphone.
- **Bluetooth 5.3:** For stable wireless connectivity.
- **16.3mm Dynamic Drivers:** Delivers HI-FI stereo sound.
- **Adjustable Microphone:** Rotates 220 degrees for optimal positioning.
- **Magnetic Charging:** Convenient and secure charging connection.

SETUP

1. Charging the Headphones

Before first use, fully charge the headphones.

1. Connect the magnetic charging cable to the charging port on the headphones.
2. Connect the other end of the charging cable to a USB power source (e.g., computer USB port, wall adapter).
3. The indicator light will show charging status (e.g., red for charging, blue/green for fully charged).
4. A full charge typically takes approximately 2 hours.

Adjustable Microphone

Capture sound more effectively to meet different call or recording needs, and Comfortable fit.



Image: Close-up view of the magnetic charging connection on the CXK O34 headphones.

Note: The headphones offer up to 10 hours of talk time and 100 hours of standby time on a full charge.

2. Pairing with a Bluetooth Device

Follow these steps to connect your headphones to a smartphone, laptop, or other Bluetooth-enabled device.

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button until the indicator light flashes blue and red alternately, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "CXK O34" from the list of found devices.
5. Once connected, the indicator light will typically turn solid blue or flash blue slowly.

Air conduction headphones for open ear safety

Stay aware of your surroundings



Image: Diagram illustrating stable Bluetooth 5.3 connection for the CXK O34 headphones.

OPERATING INSTRUCTIONS


Power On/Off

- **Power On:** Press and hold the Power button for 3 seconds.
- **Power Off:** Press and hold the Power button for 5 seconds.

Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.
- **One-Touch Mute:** During a call, press the dedicated Mute button on the microphone boom to mute or

unmute your voice.

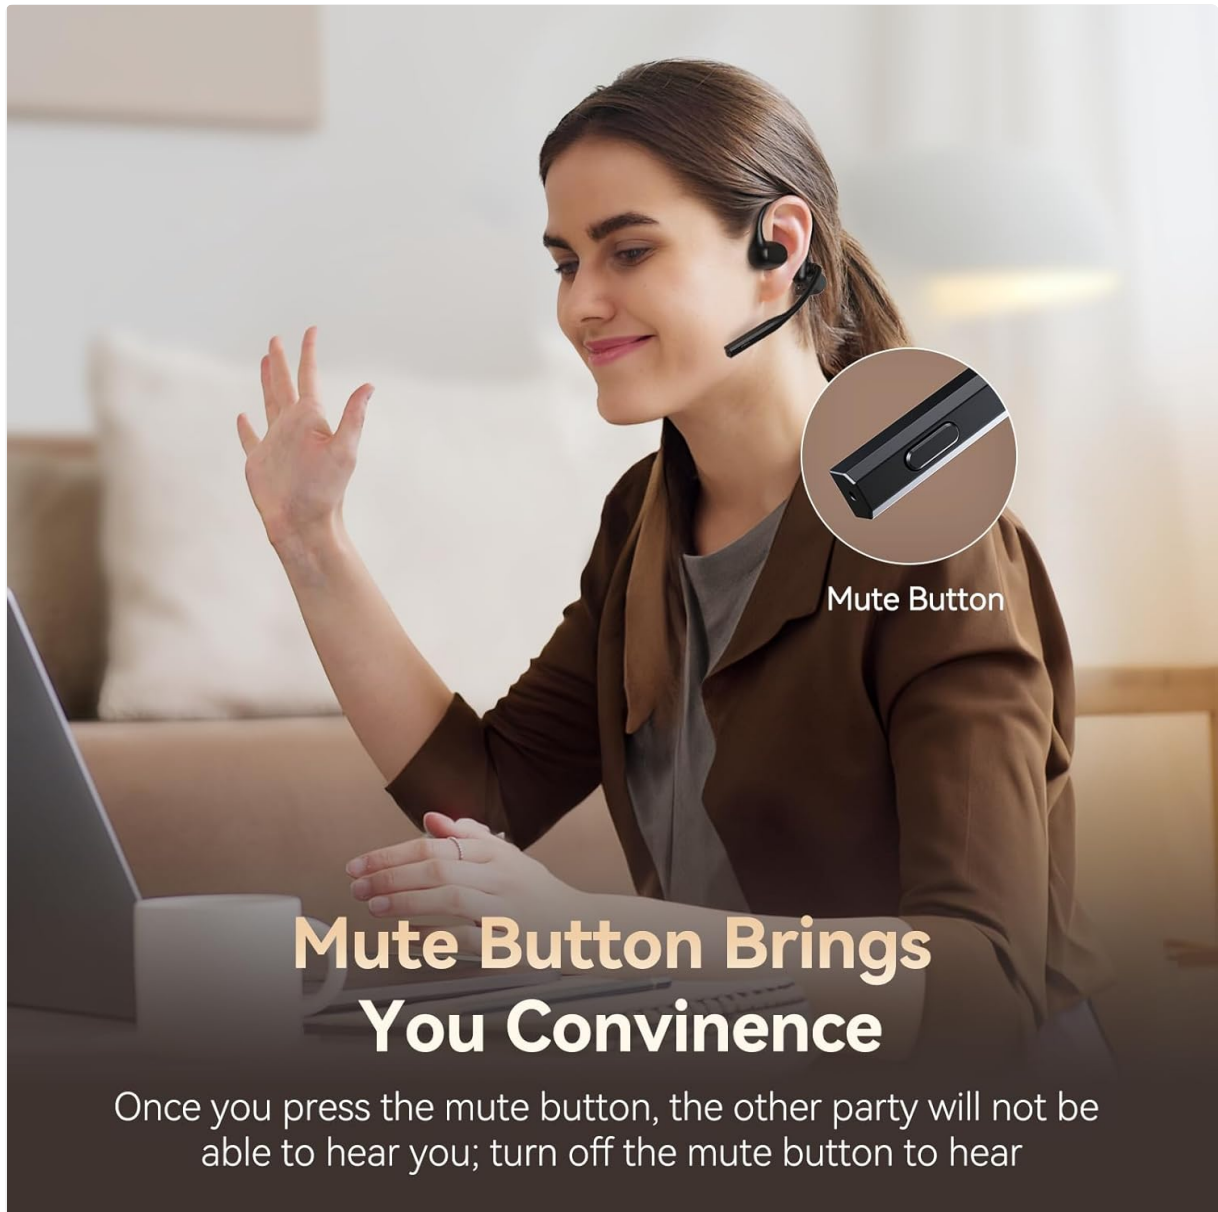

**Mute Button Brings
You Convenience**

Once you press the mute button, the other party will not be able to hear you; turn off the mute button to hear

Image: Close-up of the microphone boom showing the dedicated mute button for the CXK O34 headphones.

The AI Noise Cancelling Microphone actively reduces background noise, ensuring clear communication during calls. This feature is specifically for call noise cancellation.



90%

Before After

ENC Noise Cancellation Microphone

Automatically reduce 90% of high-frequency noise according to environmental factors to improve call quality

Image: Illustration demonstrating the AI Noise Cancellation Microphone's effectiveness in reducing background noise for clearer calls.

Audio Playback

- **Play/Pause:** Press the Multi-function button once.
- **Volume Up:** Press the Volume + button.
- **Volume Down:** Press the Volume - button.
- **Next Track:** Press and hold the Volume + button.
- **Previous Track:** Press and hold the Volume - button.

Hi-Fi Stereo Sound

Enjoy immersive audio sound quality with 16.3 dynamic drivers



Image: Detailed view of the 16.3mm dynamic driver, highlighting the HI-FI stereo sound capability of the CXK O34 headphones.

MAINTENANCE

Proper care ensures the longevity and performance of your headphones.

- **Cleaning:** Use a soft, dry cloth to wipe the headphones. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in use for extended periods.
- **Water Resistance:** The headphones are not waterproof. Avoid exposure to rain, sweat, or other liquids.

TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect to a power source and try again.
Cannot pair with a device.	<ul style="list-style-type: none"> • Ensure headphones are in pairing mode (flashing blue/red). • Turn off and on Bluetooth on your device. • Move headphones closer to the device. • Forget "CXK O34" from your device's Bluetooth list and try pairing again.
No sound or low volume.	<ul style="list-style-type: none"> • Adjust volume on both headphones and connected device. • Ensure headphones are properly connected to the device. • Check if the audio source is playing.
Microphone not working.	<ul style="list-style-type: none"> • Ensure the microphone is not muted. • Check microphone settings on your connected device. • Ensure the microphone boom is positioned correctly.
Intermittent connection.	<ul style="list-style-type: none"> • Ensure no obstacles are between the headphones and the device. • Move away from other wireless devices that may cause interference. • Re-pair the headphones with your device.

SPECIFICATIONS

Feature	Detail
Model Name	O34
Brand	CXK
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth 5.3
Earpiece Shape	Open Ear
Audio Driver Type	Air Conduction Driver
Speaker Size	16.3mm
Special Feature	AI Noise Cancellation (for calls), One-Touch Mute
Battery Life (Talk Time)	Up to 10 Hours
Standby Time	Up to 100 Hours
Charging Time	Approx. 2 Hours
Control Method	Push Button
Compatible Devices	Telephones, Laptops, Car Audio Systems, Cellphones
Item Weight	2.89 ounces
Dimensions (approx.)	124mm (width) x 124mm (height) x 45mm (earpiece depth)



124mm/4.9in

The diagram shows two views of the CXK O34 headphones. The top view shows the headphones from a front-facing perspective, with a vertical dimension line on the left indicating a height of 124mm (4.9 inches). The bottom view shows the headphones from a side profile, with a horizontal dimension line below the earbuds indicating a width of 124mm (4.7 inches) and a vertical dimension line on the left indicating an earbud height of 45mm (1.8 inches). The headphones are black and have a sleek, modern design with a curved neckband and two earbuds.

124mm/4.7in

45mm/1.8in

Image: Diagram showing the approximate dimensions of the CXK O34 headphones.

WARRANTY AND SUPPORT

CXK products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official CXK website. Keep your purchase receipt for warranty claims.