



[Manuals.plus](#) /

› [GOBOULT](#) /

› GOBOULT Tenet TWS Earbuds User Manual

GOBOULT Tenet

GOBOULT Tenet TWS Earbuds User Manual

Model: Tenet (Airbass Earbuds)

1. INTRODUCTION

Thank you for choosing the GOBOULT Tenet TWS Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. The Tenet earbuds feature Bluetooth 5.4 connectivity, 13mm dynamic drivers, Quad Mic Environmental Noise Cancellation (ENC), and support for the Amp App for personalized audio.



Image: The GOBOULT Tenet TWS Earbuds in Solar Yellow, shown with their charging case.

2. PACKAGE CONTENTS

Verify that all the following items are included in your package:

- GOBOULT Tenet TWS Earbuds (Left and Right)
- Charging Case
- USB Type-C Charging Cable
- Ear Cushions (various sizes)
- User Manual (this document)
- Warranty Card

3. SETUP

3.1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The case provides extended battery life for the earbuds.

1. Place both earbuds into the charging case, ensuring they are correctly seated.
2. Connect the provided USB Type-C charging cable to the charging port on the case and to a compatible USB power source (e.g., wall adapter, computer USB port).
3. The indicator light on the charging case will show the charging status. Refer to the LED indicator guide in the operating section for details.
4. A full charge provides up to 75 hours of total playtime with the charging case. A quick 10-minute charge can provide up to 120 minutes of playtime.

75H playtime

Purposefully
Power-Packed,
literally.



Image: The GOBOULT Tenet earbuds in their open charging case, illustrating the USB-C charging port and battery life.

 
3.2. Fitting the Earbuds

Proper fit is crucial for sound quality and comfort. The earbuds feature a 'Vacuum Lock Earshell' design for a secure fit.

1. Select the ear cushions that best fit your ears. Different sizes are provided.
2. Gently insert the earbuds into your ear canal.
3. Twist slightly to ensure a snug and comfortable seal. This helps optimize audio performance and noise isolation.

Vacuum

Lock Earshell

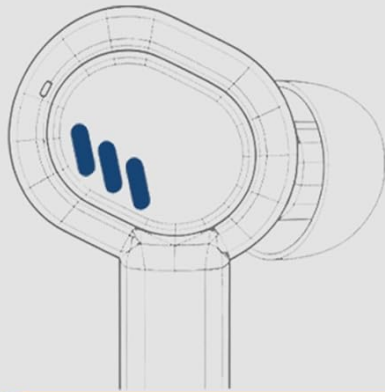

LiDAR scanned patented ergonomic fit for comfort and superior sound

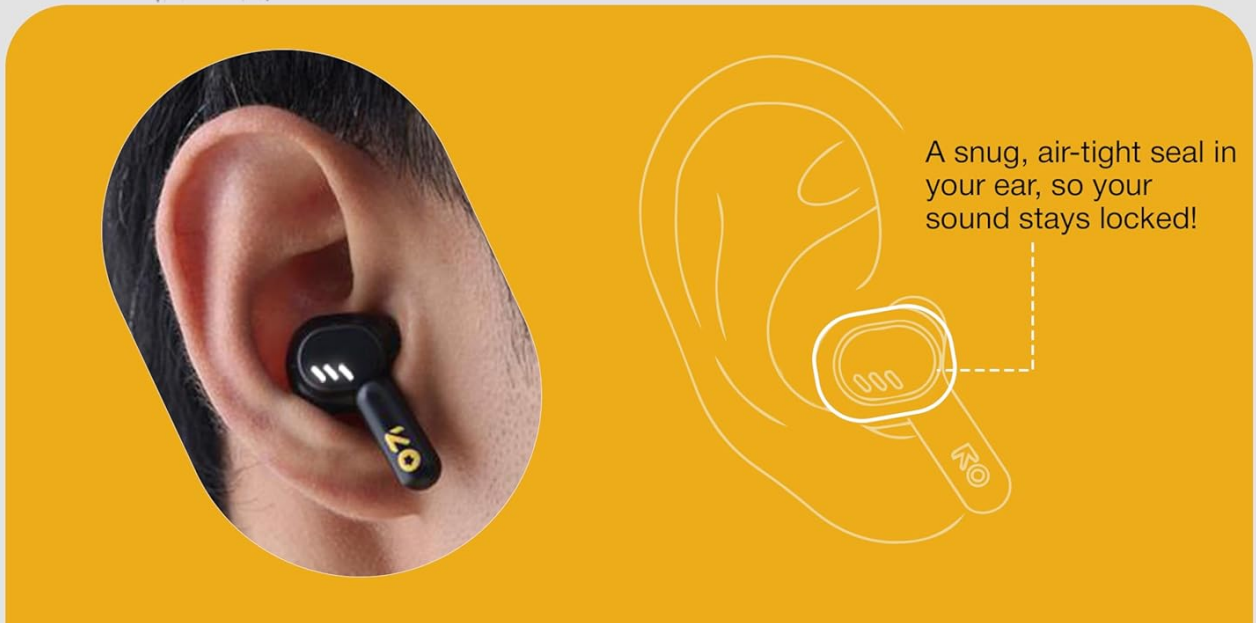 
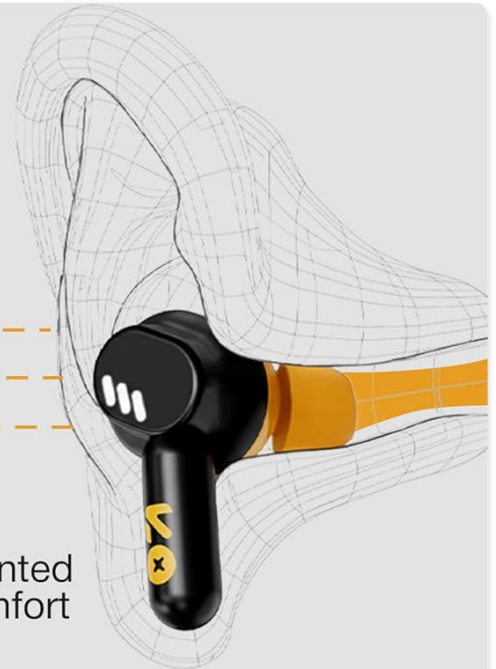 


Image: A diagram illustrating the 'Vacuum Lock Earshell' design and how the earbud sits securely in the ear.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

4.2. Bluetooth Pairing

The GOBOULT Tenet earbuds use Bluetooth 5.4 for stable and efficient connection.


1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case. The earbuds will enter pairing mode, indicated by flashing LED lights.
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for available Bluetooth devices and select "GOBOULT Tenet" from the list.

5. Once connected, the earbud indicator lights will stop flashing.

4.3. Dual Device Connectivity

The earbuds support dual device pairing, allowing seamless switching between two connected devices.

1. Pair the earbuds with your first device (e.g., smartphone) as described above.
2. Disconnect the earbuds from the first device's Bluetooth settings (do not unpair).
3. Pair the earbuds with your second device (e.g., laptop).
4. Reconnect the earbuds to the first device from its Bluetooth settings. The earbuds are now connected to both devices.
5. To switch between devices, simply pause audio on one device and play on the other.

 Seamlessly switch
between devices.



Dual Device Connectivity



Two Screens.
One Pair.

Image: The GOBOULT Tenet earbuds and charging case positioned between a smartphone and a laptop, demonstrating dual device connectivity.

4.4. Touch Controls

The earbuds feature intuitive touch controls for music playback, call management, and voice assistant activation.

Function	Action
Play/Pause	Single tap on either earbud
Next Track	Double tap on the Right earbud
Previous Track	Double tap on the Left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Long press on either earbud
Activate Voice Assistant (Siri/Google Assistant)	Triple tap on either earbud

Touch Controls

Music controls

⏪ ⏩ ⏮ ⏭ ⏸

Call controls

📞 📞 📞

Intelligent AI Assistance

Hey Siri

Ok Google

///

Splash-Safe.
Sweat-Ready.

IPX5 Water Resistant

Image: An illustration detailing the touch controls for music and calls, along with information on intelligent AI assistance and IPX5 water resistance.

4.5. Using the Amp App

Personalize your listening experience with the dedicated Amp App.

1. Download the "Amp App" from your device's app store.
2. Connect your GOBOULT Tenet earbuds to your device via Bluetooth.
3. Open the Amp App. It will automatically detect your earbuds.
4. Within the app, you can customize EQ settings (e.g., Rock, Jazz, Natural, Bass), rename your earbuds, and access tailored widgets.

GOBOULT Amp APP

Custom
EQ modes

Rename
your buds

Water
Ejection

Tailored
Widgets



Rock



 
Jazz



Natural



Bass



Next-gen
audio tuning



Image: The GOBOULT Amp App interface displayed on a smartphone, showing custom EQ modes and other personalization options for the earbuds.

4.6. Call Management (Quad Mic ENC)


The Quad Mic Environmental Noise Cancellation (ENC) ensures clear calls by reducing background noise.

- Use the touch controls (Section 4.4) to answer, end, or reject calls.
- The four integrated microphones work to isolate your voice from ambient sounds, providing clear communication even in noisy environments.

Quad mic ENC

Environmental Noise Cancellation

Your voice stands
out, always.

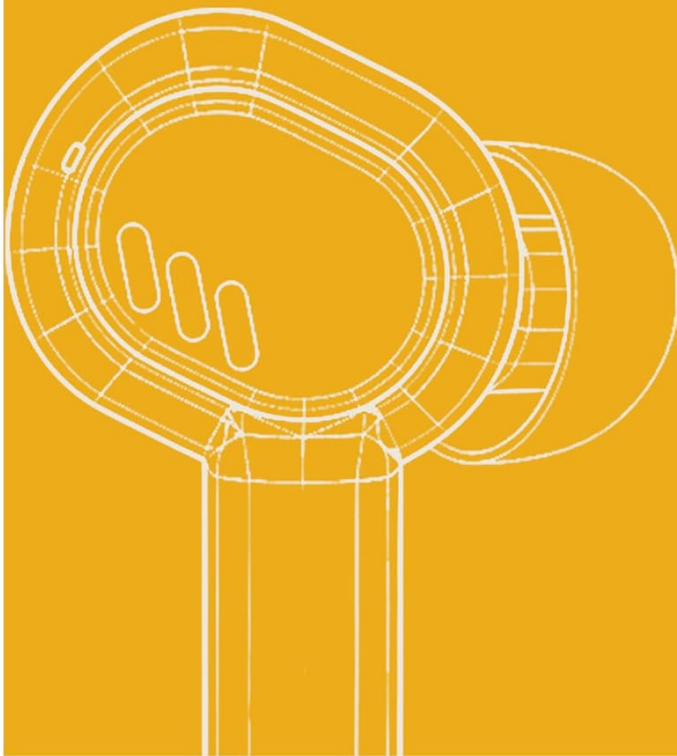

Calibrated for
Clarity.



Image: A detailed diagram highlighting the Quad Mic ENC system within the earbud, designed for clear voice transmission.

4.7. Audio Performance (13mm Drivers)

The GOBOULT Tenet earbuds are equipped with 13mm dynamic drivers for a rich audio experience.

- Experience deep bass, clear vocals, and balanced audio across various music genres.
- Adjust the sound profile further using the Amp App's equalizer settings.

13mm Drivers

Fearlessly Loud.
Thunderous Bass.



Sound, delivered with Authority.
Feel the Power Within.

Image: An exploded view diagram of the earbud, showcasing the 13mm dynamic driver responsible for audio output.

4.8. Water Resistance

The earbuds are IPX5 water resistant, making them suitable for workouts and light splashes.

- IPX5 rating means the earbuds can resist a sustained, low-pressure water jet spray.
- Do not submerge the earbuds in water or expose them to heavy rain.
- The charging case is not water resistant.

5. MAINTENANCE

5.1. Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear cushions and clean them with mild soap and water if necessary, ensuring they are completely dry before reattaching.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

- Ensure charging contacts on both earbuds and case are clean and free of debris.

5.2. Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures and direct sunlight.

5.3. Battery Care

- To prolong battery life, avoid fully discharging the earbuds and case frequently.
- Charge the device regularly, even if not in frequent use, to prevent deep discharge.

6. TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	<ul style="list-style-type: none"> ◦ Ensure earbuds are charged. ◦ Place earbuds in case, close, then open to re-enter pairing mode. ◦ Turn off and on Bluetooth on your device. ◦ Forget "GOBOULT Tenet" from your device's Bluetooth list and re-pair.
No sound from one earbud	<ul style="list-style-type: none"> ◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the case, close the lid, wait a few seconds, then open. ◦ Try resetting the earbuds (refer to manufacturer's website for specific reset instructions if needed).
Charging issues	<ul style="list-style-type: none"> ◦ Check the USB Type-C cable and power adapter. ◦ Ensure charging contacts on earbuds and case are clean. ◦ Try a different charging cable or power source.
Low volume or poor sound quality	<ul style="list-style-type: none"> ◦ Adjust the volume on your device. ◦ Ensure earbuds are properly seated in your ears with the correct ear cushion size. ◦ Clean the earbud mesh and ear cushions. ◦ Check EQ settings in the Amp App.
Voice assistant not responding	<ul style="list-style-type: none"> ◦ Ensure the earbuds are connected to your device. ◦ Verify that the voice assistant is enabled on your device. ◦ Ensure you are performing the correct triple-tap gesture.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	GOBOULT
Model Name	Tenet (Airbass)
Model Number	Airbass Earbuds
Ear Placement	In Ear
Noise Control	Environmental Noise Cancellation (ENC), Sound Isolation
Bluetooth Version	5.4
Bluetooth Range	Up to 10 Metres
Audio Driver Size	13 Millimetres
Frequency Range	20 Hz - 20,000 Hz
Sensitivity	105 dB
Battery Average Life (with case)	Up to 75 Hours
Fast Charging	10 minutes charge for 120 minutes playtime
Charging Port	USB Type-C
Water Resistance Level	IPX5 (Earbuds only)
Controller Type	Touch, Google Assistant, Siri
Compatible Devices	Desktops, Gaming Consoles, Laptops, Smart Watch, Tablets
Item Weight	54.5 Grams (Case + Earbuds)
Country of Origin	China

8. WARRANTY & SUPPORT

8.1. Warranty Information

The GOBOULT Tenet TWS Earbuds come with a 1-Year Manufacturer's Warranty from the date of purchase. This warranty covers manufacturing defects.

- Please retain your purchase receipt as proof of purchase for warranty claims.
- The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2. Customer Support

For any queries, technical assistance, or warranty claims, please contact GOBOULT customer support.

- **Manufacturer:** Exotic Mile Private Limited, B-67 Wazirpur Industrial Area, New Delhi 110052
- **Importer:** Exotic Mile Pvt. Ltd., B67 Wazirpur Industrial Area, New Delhi 110052
- Refer to the contact information provided on your warranty card or the official GOBOULT website for the most up-to-date support channels.

