

## GOPLUS UR21577EFFR

# GOPLUS 12V Electric Vespa Scooter for Kids

Model: UR21577EFFR

## 1. INTRODUCTION

---

Thank you for choosing the GOPLUS 12V Electric Vespa Scooter for Kids. This manual provides essential information for the safe assembly, operation, and maintenance of your new electric scooter. Please read it thoroughly before first use and retain it for future reference. This scooter is designed for children aged 3 to 6 years, with a maximum load capacity of 30 kg.

## 2. SAFETY INFORMATION

---

- **Adult Supervision Required:** Always supervise children while they are operating the scooter.
- **Age and Weight Limits:** Suitable for children aged 3 to 6 years. Do not exceed the maximum weight capacity of 30 kg.
- **Protective Gear:** Ensure the child wears appropriate safety gear, including a helmet, knee pads, and elbow pads, at all times.
- **Operating Environment:** Use the scooter on flat, dry, and safe surfaces away from traffic, steep inclines, swimming pools, or other hazards.
- **Battery Safety:** Only use the charger provided. Do not overcharge the battery. Keep the battery away from heat sources and moisture.
- **Assembly:** Adult assembly is required. Ensure all parts are correctly installed and secured before use.
- **Braking:** Instruct the child on how to stop the scooter safely.
- **Maintenance:** Regularly check the scooter for any loose parts, damage, or wear. Refer to the maintenance section for detailed instructions.

## 3. PACKAGE CONTENTS

---

Before assembly, please ensure all components listed below are present and undamaged.

- 1 x Electric Vespa Scooter for Kids
- 1 x User Manual
- 1 x Charger
- Assembly Hardware (screws, nuts, etc.)

## 4. ASSEMBLY INSTRUCTIONS

---

Adult assembly is required. Please follow these steps carefully. Refer to the included user manual for detailed diagrams.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Install Front Wheel:** Attach the front wheel to the fork using the provided axle and fasteners. Ensure it spins freely.
3. **Attach Handlebars:** Secure the handlebars to the steering column. Make sure they are aligned and tightened properly.
4. **Connect Battery:** Locate the battery compartment (usually under the seat). Connect the battery terminals according to the polarity markings (+ to +, - to -).
5. **Install Seat:** Place the seat onto the scooter body and secure it with the designated screws.
6. **Attach Training Wheels (Optional):** For added stability, attach the removable training wheels to the rear of the scooter using the provided hardware.
7. **Final Checks:** Before first use, ensure all screws are tight, connections are secure, and the scooter functions correctly.

# Dimensions du Produit

Recommandé pour les Enfants de 3 à 6 Ans



Image: Product dimensions for assembly reference. Length: 101cm, Width: 46cm, Height: 75cm. Seat dimensions: 38cm x 16cm, Seat height: 46cm.

# Design Triangulaire Stable

Roues d'entraînement amovibles pour réduire le risque de chute



Image: Stable triangular design with removable training wheels for enhanced balance during initial use.

## 5. OPERATING INSTRUCTIONS

---

Familiarize your child with the controls before allowing them to ride independently.

1. **Charging the Battery:** Before first use, fully charge the battery for 8-12 hours. Plug the charger into the charging port (usually located near the footrest) and then into a standard wall outlet. Do not charge for more than 18 hours.
2. **Power On/Off:** Press the power button (often a single button on the dashboard) to turn the scooter on or off.
3. **Starting Movement:** Press the foot pedal to accelerate. Releasing the pedal will engage the brake.
4. **Direction Control:** Use the forward/reverse switch (located on the dashboard) to select the desired direction of travel.
5. **Steering:** Turn the handlebars left or right to steer the scooter.
6. **Speed:** The scooter operates at a safe speed range of 1.9 to 3 km/h.

# Voyage Sans Fin pour S'Amuser

## Centre Multimédia



Port  
USB



Emplacement  
pour Carte TF



Port  
MP3/AUX



Comptines



Histoires



Musique



Volume



Image: Dashboard controls including the single start button, forward/reverse switch, music controls, and horn button.

# Excellent Moto pour Tout-Petits

Capacité  
de 30 kg



2-3 km/h




Double  
Moteur  
Puissant  
de 30W



Image: Performance overview, highlighting the 30 kg weight capacity, 2-3 km/h speed, and dual 30W motors.

# Roues Tout-Terrain

Rendent les aventures en plein air plus amusantes pour les petits cyclistes

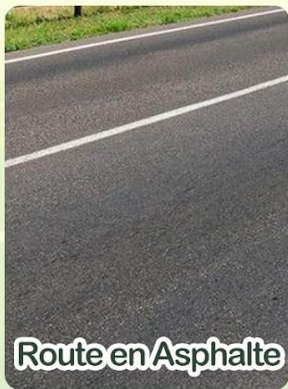


Route en Asphalte



Sol en Bois



Route en Ciment

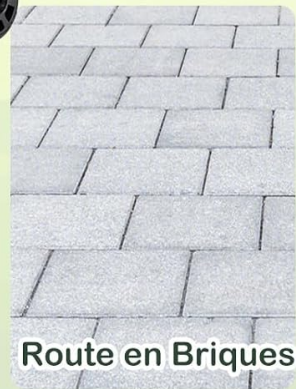

Route en Briques

Image: All-terrain wheels designed for various surfaces such as asphalt roads, wooden floors, cement paths, and brick pavements.

## 6. MULTIMEDIA FEATURES

The scooter includes an integrated multimedia center for an enhanced riding experience.

- **Music Playback:** Press the music button on the dashboard to play pre-loaded songs, stories, or nursery rhymes.
- **Horn:** Press the horn button for a realistic sound effect.
- **External Media:** The multimedia center features a USB port, TF card slot, and MP3/AUX port for playing your child's favorite audio content.
- **LED Headlights:** The scooter is equipped with bright LED headlights for a realistic look and improved visibility.



Guidon Facile à Saisir



Rétroviseurs Réalistes



Siège Confortable

## • Détails Bien Conçus •



Phares LED Lumineux

Image: Close-up of well-designed details including easy-grip handlebars, realistic rearview mirrors, a comfortable seat, and luminous LED headlights.

## 7. MAINTENANCE

---

Regular maintenance ensures the longevity and safe operation of the scooter.

- **Battery Charging:** Charge the battery after each use. If the scooter is not used for an extended period, charge the battery at least once a month to maintain its lifespan.
- **Cleaning:** Clean the scooter with a damp cloth. Avoid using harsh chemicals or spraying water directly onto electrical components.
- **Inspections:** Regularly check tires, brakes, and all fasteners for wear or looseness. Tighten any loose screws.
- **Storage:** Store the scooter in a dry, cool place, away from direct sunlight and moisture.

## 8. TROUBLESHOOTING

---

If you encounter any issues, please refer to the following common solutions. For more complex problems,

contact customer support.

- **Scooter Does Not Start:**

- Check if the battery is charged.
- Ensure all battery connections are secure.
- Verify the power button is pressed.

- **Reduced Power/Speed:**

- The battery may be low; recharge it.
- Ensure the scooter is not overloaded (check weight limit).

- **Unusual Noises:**

- Inspect for loose parts or debris caught in the wheels.

## 9. SPECIFICATIONS

---

Feature	Detail
Model Number	UR21577EFFR
Material	Polypropylene, Metal
Overall Dimensions (L x W x H)	101 x 46 x 75 cm
Seat Dimensions (L x W)	38 x 16 cm
Seat Height	46 cm
Net Weight	9.5 kg
Maximum Load Capacity	30 kg
Recommended Age	3 to 6 years
Motor Power	Dual 30W Motors
Speed Range	1.9 - 3 km/h
Battery	2 x 6V 4.5Ah
Assembly Required	Yes

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer. Keep your purchase receipt as proof of purchase.

If you have questions or require assistance, please contact GOPLUS customer service through the contact information provided on their official website or your purchase platform.

