

Klarstein Velaire BM916Ti3-B12

Klarstein Velaire 90 cm 127L Built-in Oven User Manual

Model: Velaire BM916Ti3-B12

[Safety Information](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. SAFETY INFORMATION

Read all instructions carefully before using the appliance. Keep this manual for future reference. Incorrect installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the manufacturer.

General Safety Warnings

- **Electrical Safety:** Ensure the oven is correctly earthed and connected to a suitable power supply. Do not use adapters or extension cords. Disconnect from power before cleaning or maintenance.
- **Hot Surfaces:** The oven and its accessible parts become hot during use. Exercise caution to avoid touching heating elements. Keep children away.
- **Child Lock:** Utilize the child safety lock feature to prevent accidental operation by children.
- **Ventilation:** Ensure adequate ventilation around the appliance as specified in the installation instructions.
- **Flammable Materials:** Do not store flammable materials in or near the oven.
- **Supervision:** Never leave the oven unattended during operation, especially when cooking with oil or fat.

2. SETUP AND INSTALLATION

Unpacking and Inspection

Carefully remove the oven from its packaging. Inspect the appliance for any damage. Report any damage to your retailer immediately. Ensure all accessories (universal baking tray, grid, side racks) are present.

Installation Dimensions

The Klarstein Velaire oven is designed for built-in installation. Refer to the diagram below for precise cavity dimensions required for proper fitting.



Image: Installation dimensions for the Klarstein Velaire oven. The diagram indicates a depth of 58.5 cm, width of 89.5 cm, and height of 59.5 cm for the oven unit, with a required cabinet opening width of 86 cm and height of 59 cm.

- **Oven Dimensions (D x W x H):** 58.5 cm x 89.5 cm x 59.5 cm
- **Required Cabinet Opening (W x H):** 86 cm x 59 cm
- Ensure sufficient space for ventilation at the rear of the appliance.

Electrical Connection

Electrical installation must be performed by a qualified electrician in accordance with local regulations. The oven requires a 220V power supply and has a total power output of 4800W. Ensure the circuit is adequately protected.

First Use

Before first use, clean the oven interior and accessories with a damp cloth and mild detergent. Run the oven empty at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure the kitchen is well-ventilated during this process.

3. OPERATING INSTRUCTIONS

Control Panel Overview

The Klarstein Velaire oven features a digital control panel with a central rotary knob and touch-sensitive buttons for various functions.


16 functions



Image: Digital control panel displaying '16 functions' and icons for temperature, timer, and other settings.

Energy
efficiency
class: A

 Digital timer

 Digital rotary knob control

 Digital child safety lock


 Clock



Image: Control panel details, emphasizing the digital timer, digital rotary knob control, digital child safety lock, and clock function. The display shows '180°' and various mode icons.

Setting the Clock

Upon first connection or after a power outage, the clock will flash. Use the rotary knob to set the current time, then confirm by pressing the appropriate button (refer to specific button icons on your oven).

Selecting Cooking Functions (16 Modes)

The oven offers 16 versatile operating modes. Turn the rotary knob to cycle through the available functions. The selected function will be displayed on the digital screen. Common modes include:



Image: Oven displaying various functions: Convection, Quick Preheating, Defrost Mode, Fermentation Level, and Keep-warm Function.

- **Convection Function:** For even cooking and baking.
- **Quick Preheating:** Rapidly heats the oven to the desired temperature.
- **Defrost Mode:** Gently thaws frozen foods.
- **Fermentation Level:** Provides a controlled environment for dough rising.
- **Keep-warm Function:** Maintains food at serving temperature.
- Other modes may include various grill settings, bottom heat, top heat, and combinations. Consult the full icon legend in the printed manual for detailed descriptions of all 16 modes.

Setting Temperature

After selecting a cooking function, use the rotary knob to adjust the temperature. The temperature range is from 35°C to 310°C. The selected temperature will be shown on the digital display.

Using the Timer

The digital timer can be set for cooking duration (up to 600 minutes) or for a delayed start. Press the timer button, then use

the rotary knob to set the desired time. Confirm the setting.

Child Lock Function

To activate the child lock, press and hold the designated child lock button (usually indicated by a lock icon) for a few seconds until the lock indicator appears on the display. To deactivate, repeat the process.

Oven Interior

127 litres

Ideal for those who frequently bake large quantities

Universal baking tray and removable glass door

Removable side racks

Easy-to-clean enamel

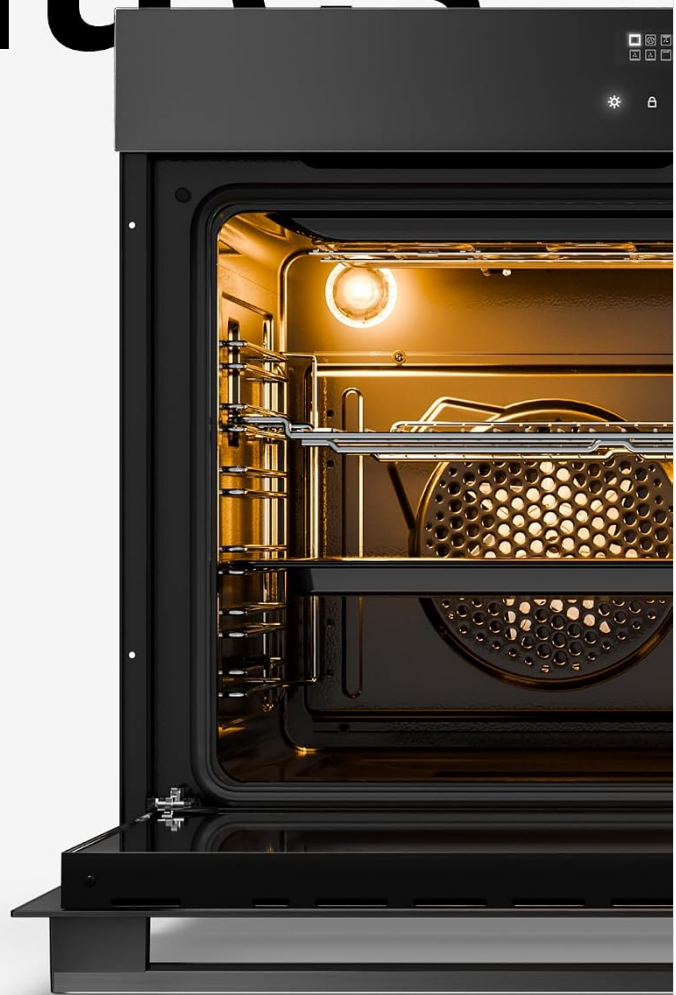


Image: Oven interior, showing the spacious 127-liter capacity, a universal baking tray, removable side racks, and the easy-to-clean enamel coating.

The oven features a 127-liter capacity, suitable for large dishes. It includes a universal baking tray and a grid. The side racks are removable for easier cleaning. The interior is coated with easy-to-clean enamel.

4. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your oven. Always ensure the oven is cool and disconnected from the power supply before cleaning.

Cleaning the Oven Interior

- The oven interior is made of easy-to-clean enamel. Wipe spills and food residues immediately after the oven has cooled down.
- For stubborn stains, use a specialized oven cleaner, following the product instructions. Avoid abrasive cleaners or scourers that can damage the enamel.
- The side racks are removable for thorough cleaning. Pull them out and wash them in warm soapy water or in a dishwasher.

Cleaning the Oven Door

The oven door features triple glazing and a high-quality glass front. It can be removed for easier cleaning between the glass panes (refer to the full manual for detailed removal instructions).

- Clean the glass surfaces with a soft cloth and a non-abrasive glass cleaner.
- Wipe the matt and glossy black glass surfaces with a damp cloth and dry thoroughly to prevent streaks.

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth and a mild detergent. Do not use abrasive cleaners, solvents, or metal scourers.

5. TROUBLESHOOTING

If you encounter problems with your oven, consult the following table before contacting customer service.

| Problem | Possible Cause | Solution |
|-----------------------------------|--|--|
| Oven does not heat up. | No power supply; Oven not switched on; Timer not set correctly. | Check power connection and circuit breaker; Ensure oven is switched on; Set the timer or select a manual cooking mode. |
| Display is blank or flashing. | Power outage; Incorrect clock setting. | Reset the clock; Check power supply. |
| Child lock cannot be deactivated. | Incorrect button press sequence. | Press and hold the child lock button for the specified duration (typically a few seconds). |
| Uneven cooking results. | Incorrect temperature or mode selection; Overloading the oven; Improper placement of food. | Ensure correct temperature and cooking mode for the dish; Avoid overcrowding the oven; Use the recommended shelf position. |
| Excessive smoke during first use. | Residues from manufacturing process. | This is normal for the first use. Ensure good ventilation. It should subside after the initial burn-off cycle. |

6. TECHNICAL SPECIFICATIONS

Detailed technical data for the Klarstein Velaire Built-in Oven.

| Feature | Value |
|---------|-----------|
| Brand | Klarstein |

| Feature | Value |
|---------------------------|--|
| Model Number | BM916Ti3-B12 |
| Type | Built-in Oven |
| Capacity | 127 Liters |
| Power | 4800 W |
| Voltage | 220 Volts |
| Energy Efficiency Class | A |
| Temperature Range | 35°C to 310°C |
| Number of Operating Modes | 16 |
| Dimensions (D x W x H) | 58.5 cm x 89.5 cm x 59.5 cm |
| Product Weight | 58.5 Kilograms |
| Cable Length | 1.5 m |
| Special Features | Digital Timer, Child Lock, Digital Rotary Knob Control |
| EPREL Registration Number | 2494232 (View EPREL) |

7. WARRANTY AND SUPPORT

Warranty Information

For warranty details, please refer to the documentation provided with your purchase or contact your retailer. The standard return policy is 30 days. Specific warranty terms may vary by region and retailer.

Customer Support

Should you require assistance, have questions, or need to report an issue, please contact Klarstein customer service:

- **Manufacturer:** Chal-Tec GmbH
- **Seller:** Klarstein Deutschland
- **Email:** info@klarstein.com
- **Website:** www.klarstein.com/shops/
- **Address:** Mühlenstraße 25, 10243 Berlin, Germany