

VGR VGR 877S3

VGR 877S3 Professional Hair Clipper and Trimmer Set User Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your VGR 877S3 Professional Hair Clipper and Trimmer Set. Please read all instructions carefully before first use and retain this manual for future reference. This set includes a hair clipper, a precision trimmer, and a foil shaver, designed for various hair grooming needs.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Do not immerse the device in water or use it in wet environments such as bathtubs, showers, or sinks.
- Keep the appliance out of reach of children.
- Use only the charging cables and stations provided with this product.
- Inspect the device and blades for any damage before each use. Do not operate if damaged.
- Unplug the appliance from the power source before cleaning.
- Do not disassemble the appliance. For repairs, contact qualified service personnel.
- Avoid using the device on irritated skin or open wounds.
- Ensure the charging port is dry before connecting the USB cable.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Hair Clipper (VGR 877S3)
- 1 x Precision Trimmer
- 1 x Foil Shaver

- 6 x Guide Combs for Hair Clipper (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm)
- 4 x Guide Combs for Precision Trimmer (1.5mm, 3mm, 6mm, 9mm)
- 2 x Charging Stations (for Clipper and Trimmer)
- 1 x USB Charging Cable
- 1 x Cleaning Brush
- 1 x Lubricating Oil
- Protective Caps for blades
- 1 x Zero Gap Adjustment Tool (for Trimmer)



Image: The VGR 877S3 Hair Clipper and Trimmer Set, including the main clipper, trimmer, shaver, and various accessories like guide combs and charging bases.

4. PRODUCT FEATURES

- **High-Quality Blades:** The hair clipper features a durable DLC (Diamond-Like Carbon) coated blade. The precision trimmer uses ceramic-metal blades, and the foil shaver has a titanium grid for a smooth finish.
- **Powerful Motors:** The hair clipper operates at up to 9000 RPM, and the precision trimmer at up to

8000 RPM, ensuring efficient and precise cutting.

- **Flexible Cutting Lengths:**

- Hair Clipper: Includes 6 guide combs (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm) and a fine adjustment lever for lengths from 0.8mm to 2.0mm without a comb.
- Precision Trimmer: Comes with 4 guide combs (1.5mm, 3mm, 6mm, 9mm) and can be adjusted for a near-zero gap cut using the included Zero Gap adjustment tool (0.1mm to 0.5mm).

- **Long-Lasting Battery & Charging:**

- Hair Clipper: 2000 mAh battery, providing up to 150 minutes of use after a 3-hour charge.
- Precision Trimmer: 2000 mAh battery, offering up to 180 minutes of use after a 3-hour charge.
- Foil Shaver: 600 mAh battery, delivering up to 90 minutes of use after a 2-hour charge.
- All devices support USB charging and come with dedicated charging stations.

- **Ergonomic Design:** Features a diamond-faceted design for a modern aesthetic and comfortable grip, reducing fatigue during extended use.

- **LED Display:** Integrated LED screen clearly shows battery level and operating speed.

- **Easy Cleaning:** Hair clipper and trimmer have magnetic removable blade covers for quick hair removal and maintenance.



Image: A detailed diagram labeling the components of the VGR 877S3 hair clipper and trimmer, including ceramic blades,

adjustment lever, magnetic cover, LED screen, power switch, polygonal body, and charging base.

BATTERIE LONGUE DURÉE

- Rechargez-le à l'aide d'un câble de données USB-C ou d'une station de charge.

tondeuse

Batterie au lithium de 2000 mAh

3 H **150 MIN**

Temps de charge Temps de travail

trimmer

Batterie au lithium de 2000 mAh

3 H **180 MIN**

Temps de charge Temps de travail



Image: An illustration showing the charging time and working time for the hair clipper (3 hours charge for 150 minutes work), trimmer (3 hours charge for 180 minutes work), and shaver (2 hours charge for 90 minutes work).

5. SETUP AND CHARGING

5.1 Initial Charge

Before first use, fully charge each device. Connect the USB cable to the charging station and then to a USB power adapter (not included) or a computer USB port. Place the clipper or trimmer onto its respective charging station. The shaver can be charged directly via its USB-C port.

- Hair Clipper: Approximately 3 hours for a full charge.
- Precision Trimmer: Approximately 3 hours for a full charge.
- Foil Shaver: Approximately 2 hours for a full charge.

The LED display will indicate the charging status and battery level.

5.2 Attaching Guide Combs

To attach a guide comb, align the comb with the blade and push it firmly until it clicks into place. To

remove, gently pull the comb away from the blade.



Image: An illustration displaying the different sizes of guide combs included for both the hair clipper (6 combs) and the precision trimmer (4 combs).

5.3 Zero Gap Adjustment (Trimmer Only)

For extremely close cuts and precise outlining, the trimmer blade can be adjusted to a near-zero gap using the included adjustment tool. Refer to the diagram below for guidance. Exercise caution during this adjustment to avoid injury.

Profil en T

Lame de finition

Réglage précis de
0,1 mm à 0,5 mm



- ▶ Lames **métalliques** moulées par injection de céramique de **précision**, coupe lisse et uniforme

Image: A close-up of the precision trimmer blade, illustrating the fine adjustment range from 0.1mm to 0.5mm and the ceramic-metal injection molded blades.

6. OPERATING INSTRUCTIONS

6.1 General Operation

- Press the power button to turn the device ON or OFF.
- The LED display will show the current battery level and operating speed.

6.2 Using the Hair Clipper

The hair clipper is designed for general hair cutting and fading.

1. Ensure hair is clean and dry.
2. Attach the desired guide comb for your preferred cutting length.
3. For shorter lengths, use the fine adjustment lever on the side of the clipper (0.8mm to 2.0mm).
4. Hold the clipper with the blade flat against the head and move it slowly against the direction of hair growth.
5. Overlap strokes to ensure an even cut.



Choisissez celui
que vous aimez



Image: A person using the VGR 877S3 hair clipper to cut another person's hair, demonstrating typical use.

6.3 Using the Precision Trimmer

The precision trimmer is ideal for detailing, outlining, and creating sharp lines for beards, necklines, and sideburns.

1. Use without a guide comb for closest trim or with appropriate guide comb for desired length.
2. Hold the trimmer at an angle to the skin and move it slowly to create precise lines.
3. For zero-gap cuts, ensure the blade is properly adjusted (refer to Section 5.3).

6.4 Using the Foil Shaver

The foil shaver provides a close, smooth finish for facial hair or necklines.

1. Ensure skin is clean and dry.
2. Hold the shaver flat against the skin and move it in short, gentle strokes against the direction of hair growth.
3. Do not press too hard, as this can cause irritation.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and extend the lifespan of your VGR grooming set.

7.1 Cleaning Blades

1. Turn off and unplug the device before cleaning.
2. Use the provided cleaning brush to remove loose hairs from the blades and inside the cutting head.
3. For the hair clipper and trimmer, the magnetic blade cover can be easily removed for thorough cleaning. Gently lift the cover to detach it, clean the internal components, and then reattach it securely.
4. The blades of the hair clipper and trimmer can be rinsed under running water after removing the main body from the blade assembly, ensuring the main body remains dry. The shaver head can also be rinsed. Ensure all parts are completely dry before reassembly and storage.



Image: An illustration demonstrating how to easily remove the magnetic blade cover on the VGR 877S3 devices for cleaning with a brush.

7.2 Lubricating Blades

After every few uses or after rinsing, apply a small drop of the provided lubricating oil to the blades. Turn on the device for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; Device not charged.	Charge the device fully. Ensure charging cable and station are properly connected.
Poor cutting performance or pulling hair.	Blades are dull, dirty, or not lubricated; Hair buildup.	Clean the blades thoroughly and apply lubricating oil. If blades are dull, consider replacement.
Device gets hot during use.	Extended continuous use; Lack of lubrication.	Allow the device to cool down. Ensure blades are clean and lubricated. Avoid excessively long continuous operation.
LED display not working.	Device malfunction.	Contact customer support if the device functions but the display does not.

9. SPECIFICATIONS

Feature	Detail
Model Number	VGR 877S3
Brand	VGR
Power Source	Battery Powered (Rechargeable)
Battery Type	Lithium-ion (internal rechargeable cells)
Hair Clipper Battery Capacity	2000 mAh
Hair Clipper Charge Time	3 hours
Hair Clipper Run Time	Up to 150 minutes
Trimmer Battery Capacity	2000 mAh
Trimmer Charge Time	3 hours
Trimmer Run Time	Up to 180 minutes
Shaver Battery Capacity	600 mAh
Shaver Charge Time	2 hours
Shaver Run Time	Up to 90 minutes
Blade Material (Clipper)	DLC Coated
Blade Material (Trimmer)	Ceramic-Metal

Feature	Detail
Blade Material (Shaver)	Titanium Grid
Motor Speed (Clipper)	Up to 9000 RPM
Motor Speed (Trimmer)	Up to 8000 RPM
Charging Interface	USB
Product Dimensions (approx.)	34.49 x 25.7 x 6.5 cm (Package)
Product Weight (approx.)	1.55 kg (Package)
Country of Origin	China

10. WARRANTY AND SUPPORT

VGR products are manufactured with quality and reliability in mind. For warranty information, technical support, or service inquiries, please refer to the warranty card included in your product packaging or contact VGR customer service through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for warranty claims.