

VGR VGR 877S3

VGR 877S3 Professional Hair Clipper Kit User Manual

Model: VGR 877S3 | Brand: VGR

INTRODUCTION

Thank you for choosing the VGR 877S3 Professional Hair Clipper Kit. This all-in-one grooming system is designed for both personal and professional use, offering precision and reliability. This manual provides essential information for the safe and effective operation, maintenance, and care of your VGR 877S3 kit. Please read it thoroughly before first use and keep it for future reference.

SAFETY INFORMATION

Always read all safety warnings and instructions before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, or serious injury. Keep this manual in a safe place for future reference.

- Do not immerse the appliance in water or use it near water.
- Keep the appliance away from children.
- Ensure the power adapter is compatible with your local voltage.
- Do not use the appliance if it is damaged or malfunctioning.
- Only use attachments supplied by the manufacturer.
- Unplug the appliance before cleaning.

PACKAGE CONTENTS

Your VGR 877S3 Professional Hair Clipper Kit includes the following items:

- 1 x Hair Clipper Unit
- 1 x Hair Trimmer Unit
- 1 x Foil Shaver Unit
- 10 x Guide Combs (various sizes)
- 2 x Charging Bases

- Magnetic Protective Covers
- 1 x Lubricating Oil
- 1 x Cleaning Brush
- 1 x USB-C Charging Cable
- Zero-Gap Adjustment Tool

PRODUCT OVERVIEW

Familiarize yourself with the components of your VGR 877S3 kit:

SINGLE-BLADE FOIL SHAVER

● Charge using a USB-C data cable or a charging dock.

Foil shaver

600mAh Lithium Battery

2 H Charging time **90 MIN** Working time

Portable and long battery life anytime, anywhere

Figure 1: Labeled components of the VGR Hair Clipper and Trimmer. Key parts include Ceramic blades, Adjusting rod, Magnetic cover, LED Display, On/off switch, Polygon cutting machine body, and Charging dock.

HIGH-EFFICIENCY MOTOR

HIGHLY EFFICIENT AND PRECISE CUTTING WITHOUT JAMMING



Figure 2: The Hair Clipper features a 9000 RPM motor, and the Hair Trimmer features an 8000 RPM motor, both designed for high-efficiency cutting.

T-Shaped Profile Trimming Blade

Precise adjustment from
0.1 mm to **0.5 mm**



► Precision **ceramic** injection molded
metal blades, **Smooth** and even trimming

Figure 3: T-Shaped Profile Trimming Blade with precise adjustment from 0.1 mm to 0.5 mm, featuring precision ceramic injection molded metal blades for smooth and even trimming.



Figure 4: The kit includes a full set of guide combs: 4 guide combs for the clipper (1.5mm, 3mm, 6mm, 9mm) and 6 guide combs for the trimmer (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm).

SETUP

Charging the Device

Before first use, fully charge the hair clipper, trimmer, and foil shaver. Each unit has its own battery specifications:

- **Hair Clipper:** 2000mAh Lithium Battery, 3 hours charging time for 150 minutes working time.
- **Hair Trimmer:** 2000mAh Lithium Battery, 3 hours charging time for 180 minutes working time.
- **Foil Shaver:** 600mAh Lithium Battery, 2 hours charging time for 90 minutes working time.

To charge:

1. Place the desired unit (clipper, trimmer, or shaver) onto one of the provided charging bases.
2. Connect the USB-C charging cable to the charging base and then to a compatible USB power adapter (not included).
3. The LED display on the unit will indicate the charging status. A full charge is indicated when the battery percentage reaches 100%.

LONG LASTING BATTERY

- Charge using a USB-C data cable or a charging dock.

Hair clipper

2000mAh Lithium Battery

3 H

Charging time

150 MIN

Working time

Hair trimmer

2000mAh Lithium Battery

3 H

Charging time

180 MIN

Working time



Figure 5: Hair Clipper charging on its base, displaying 2000mAh battery, 3 hours charging time, and 150 minutes working time.

PROFESSIONAL HAIRDRESSING KIT



Figure 6: Hair Trimmer charging on its base, displaying 2000mAh battery, 3 hours charging time, and 180 minutes working time.



Figure 7: Foil Shaver with its USB-C charging cable, displaying 600mAh battery, 2 hours charging time, and 90 minutes working time.

Attaching Guide Combs

To achieve desired hair lengths, attach the appropriate guide comb:

1. Select the guide comb corresponding to the desired cutting length.
2. Align the comb with the blade of the clipper or trimmer.
3. Push the comb firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

OPERATING INSTRUCTIONS

Powering On/Off

Press the On/Off switch located on the front of the unit to power the device on or off. The LED display will illuminate upon activation.

Using the Hair Clipper and Trimmer

1. Ensure the blades are clean and oiled before use.

2. Select and attach the appropriate guide comb for your desired hair length. For zero-gap cutting, use the trimmer without a guide comb and adjust the blade using the zero-gap adjustment tool.
3. Turn on the device. The LED display will show the current battery level and speed setting.
4. For thicker hair, activate the turbo function (if available on your model) for increased motor speed and cutting power.
5. Hold the unit with the blades pointing downwards and move it against the direction of hair growth.
6. Use smooth, even strokes for consistent results.

Using the Foil Shaver

1. Ensure your skin is clean and dry.
2. Turn on the shaver.
3. Gently press the shaver head against your skin and move it in short, circular motions or straight strokes against the direction of hair growth.
4. Avoid applying excessive pressure to prevent irritation.

LED Display

The intelligent LED display provides real-time feedback:

- **Battery Percentage:** Shows the remaining battery life, allowing you to monitor usage and recharge as needed.
- **Speed Setting:** Indicates the current motor speed, which can be adjusted on some models.
- **Charging Indicator:** Displays when the unit is charging.

MAINTENANCE

Cleaning the Blades

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the device and disconnect it from the power source.
2. Remove any attached guide combs.
3. For the clipper and trimmer, the magnetic cap can be easily removed for cleaning. Gently detach the magnetic cover to access the blades.
4. Use the provided cleaning brush to remove hair clippings from the blades and the internal mechanism.
5. For the foil shaver, carefully remove the foil head and brush away any trapped hairs.
6. Reattach the magnetic cap or foil head securely.

Magnetic Cap

Easy to remove



- ▶ The **magnetic** design allows for easy opening and disassembly for **cleaning**
- ▶ Clean with a **cleaning brush**

Figure 8: The magnetic cap design allows for easy opening and disassembly for cleaning with a cleaning brush.

Oiling the Blades

To maintain blade sharpness and smooth operation, oil the blades regularly:

1. After cleaning, apply 1-2 drops of the provided lubricating oil onto the blades.
2. Turn on the device for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no charge.	Charge the device fully. Check if the charging cable and adapter are working correctly.
Poor cutting performance.	Blades are dull, dirty, or not oiled.	Clean the blades thoroughly and apply lubricating oil. If blades are dull, consider professional sharpening or replacement.

Problem	Possible Cause	Solution
Device pulls hair.	Blades are dirty, not oiled, or moving too slowly.	Clean and oil the blades. Ensure the device is fully charged. Use the turbo function for thicker hair.
Excessive noise or vibration.	Foreign object in blades or internal issue.	Turn off and clean blades. If problem persists, contact customer support.

SPECIFICATIONS

Feature	Specification
Model Number	VGR 877S3
Power Source	Battery Operated
Hair Clipper Battery	2000mAh Lithium, 150 min runtime (3h charge)
Hair Trimmer Battery	2000mAh Lithium, 180 min runtime (3h charge)
Foil Shaver Battery	600mAh Lithium, 90 min runtime (2h charge)
Hair Clipper Motor Speed	9000 RPM (with Turbo function)
Hair Trimmer Motor Speed	8000 RPM (with Turbo function)
Clipper Blade Material	DLC Coated
Trimmer Blade Material	Ceramic Injection Molded Metal
Foil Shaver Blade Material	Titanium Coated Foil
Charging Type	USB-C / USB-A (Universal Voltage 100-240V)
Included Components	3 main units, 10 guide combs, 2 charging bases, magnetic protective covers, oil, brush, cleaning tools, zero-gap adjustment tool.

WARRANTY AND SUPPORT

The VGR 877S3 Professional Hair Clipper Kit comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact VGR customer service through the retailer where the product was purchased or visit the official VGR website.

