

## Fanttik C8 Nano

# Fanttik C8 Nano Easyswap Cordless Electric Scissors User Manual

Model: C8 Nano

## 1. INTRODUCTION

---

Thank you for choosing the Fanttik C8 Nano Easyswap Cordless Electric Scissors. This device is designed for efficient and effortless cutting of various materials, including cardboard, carpets, leather, and thin plastics. Please read this manual thoroughly before use to ensure safe and optimal operation.

## 2. PRODUCT OVERVIEW

---

The Fanttik C8 Nano features a high-magnet motor for powerful performance, an intuitive LED display, and EasySwap blade change technology. It is designed for comfortable and safe use, preventing wrist fatigue during extended tasks.



Image: Fanttik C8 Nano Cordless Electric Scissors, showcasing its compact design and cutting blade.

### 3. WHAT'S IN THE BOX

Upon unpacking, please ensure all the following components are present:

- 1 x C8 Nano 3.7V Cordless Electric Scissors/Cardboard Cutter
- 2 x Blades (one pre-installed, one replacement)
- 1 x Blade Replacement Key
- 1 x Type-C Charging Cable

- 1 x User Manual (this document)
- 1 x Storage Bag

# WHAT'S IN THE BOX?

C8 Nano Electric Scissors  
「 5.6" × 7.1" × 2.2" 」



Replacement  
Blade × 1



Blade  
Replacement Key × 1




Charging Cable × 1



Storage Bag × 1



Quick  
Start  
Guide  
× 1

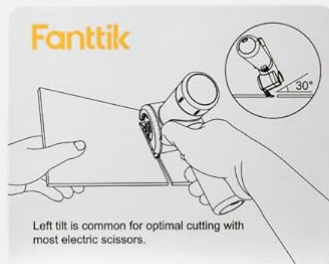

User  
Manual  
× 1



Image: A visual representation of all items included in the Fanttik C8 Nano product package.

## 4. SETUP

### 4.1 Charging the Device

Before first use, fully charge the electric scissors. Connect the provided Type-C charging cable to the charging port on the device and to a compatible USB power source (5V/2A recommended). The LED

display will indicate the battery life during charging.



Image: The Fanttik C8 Nano connected to a Type-C charging cable, showing the charging port location.

## **4.2 Blade Installation/Replacement (EasySwap Technology)**

The C8 Nano features EasySwap Technology for quick and secure blade changes. Use the included blade replacement key for this process.

1. Ensure the device is turned off and unplugged.
2. Locate the spindle lock mechanism on the blade assembly.
3. Use the blade replacement key to unlock and remove the existing blade.
4. Carefully place the new blade onto the spindle.
5. Secure the new blade by locking the mechanism with the key.

Always handle blades with caution to prevent injury.

# EASYSWAP™



Image: Close-up view of the EasySwap blade mechanism, illustrating the simple one-step process for changing blades.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off and Speed Adjustment

The C8 Nano features a 35mm LED screen that displays real-time battery life and speed settings. It offers three-speed adjustments for various cutting needs.

- **To Power On:** Twist the mode selection knob to your desired speed setting (ECO, REG, MAX). Press and hold the extra lock-off button, then press the on/off switch. Once the tool is running, you

can release the lock-off button.

- **Speed Modes:**

- **ECO Mode:** Offers optimal battery performance without compromising on power.
- **REG Mode:** Effortlessly cuts through most common materials.
- **MAX Mode:** Delivers a powerful and smooth cutting experience with up to 230 RPM.

- **To Power Off:** Release the on/off switch.



Image: The intuitive LED display of the Fanttik C8 Nano, showing battery percentage and selected speed mode (ECO, REG, MAX).

## 5.2 Cutting Operation

The C8 Nano is designed for quick and smooth cutting. The built-in LED lights ensure clear visibility for

accurate cutting.

- Ensure the blade guard is properly positioned before cutting.
- Select the appropriate speed mode for your material.
- Gently guide the electric scissors along the cutting line. Avoid forcing the device.
- The rotating blade can cut materials up to 1/4 inch thick.



Image: The Fantik C8 Nano effortlessly cutting through a piece of cardboard, highlighting its powerful motor and smooth operation.

# MORE MATERIALS TO CUT



Image: Collage showing the Fanttik C8 Nano being used to cut thin cardboard, carpet, rope, blister packaging, leather, and craft paper.

## 5.3 Official Product Video: Cutting Cardboard

Video: An official demonstration by Fanttik Innovation Direct on how to efficiently cut cardboard using the electric scissors, highlighting its ease of use and effectiveness.

## 6. MAINTENANCE

### 6.1 Cleaning

After each use, ensure the device is powered off and unplugged. Use a soft, dry cloth to wipe down the exterior of the scissors. Remove any debris or material fragments from around the blade area. Do not use harsh chemicals or abrasive cleaners.

## 6.2 Blade Care

Regularly inspect the blade for sharpness and damage. A dull blade can reduce cutting efficiency and potentially damage materials. Replace blades as needed using the EasySwap Technology described in Section 4.2.

## 7. TROUBLESHOOTING

If you encounter any issues with your Fanttik C8 Nano, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Safety lock engaged; Faulty switch	Charge the device; Ensure the lock-off button is pressed before the main switch; Contact support if issue persists.
Poor cutting performance	Dull or damaged blade; Incorrect speed setting; Material too thick	Replace the blade; Select a higher speed mode; Ensure material is within 1/4 inch thickness.
Device stops unexpectedly	Overload protection activated; Low battery	Reduce cutting pressure; Charge the device.

## 8. SPECIFICATIONS

- **Brand:** Fanttik
- **Model Number:** C8 Nano
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Battery Capacity:** 2000mAh
- **Charging:** Type-C, 5V/2A Fast Charging (Fully charged in 1 hour)
- **Max Cutting Speed:** Up to 230 RPM
- **Max Cutting Thickness:** 1/4 inch
- **Blade Material:** High Speed Steel
- **Special Features:** EasySwap Technology, LED Display, LED Lights
- **Surface Recommendation:** Fabric, Paper, Thin Plastics
- **Handle Material:** Plastic or Rubber
- **GTIN/UPC:** 850077828591

## 9. WARRANTY AND SUPPORT

---

The Fanttik C8 Nano Easyswap Cordless Electric Scissors comes with a limited warranty provided by Fanttik. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Fanttik website.

For technical support, troubleshooting assistance, or any inquiries regarding your product, please contact Fanttik customer service. Contact information can typically be found on the product packaging or the official Fanttik website.