

[Manuals.plus](#) /

› [Kakanuo](#) /

› Kakanuo M34N1 Rechargeable Cordless Table Lamp User Manual

Kakanuo M34N1

Kakanuo M34N1 Rechargeable Cordless Table Lamp User Manual

Model: M34N1


INTRODUCTION

Thank you for choosing the Kakanuo M34N1 Rechargeable Cordless Table Lamp. This lamp is designed to provide versatile and convenient lighting with its portable, battery-operated design, touch control, and stepless dimming functionality. This manual will guide you through the setup, operation, and maintenance of your new lamp.

WHAT'S IN THE BOX

Please ensure all the following components are included in your package:

- Lamp Base with integrated LED
- Lampshade
- Fixing Ring
- USB-C Charging Cable
- User Guide (this manual)

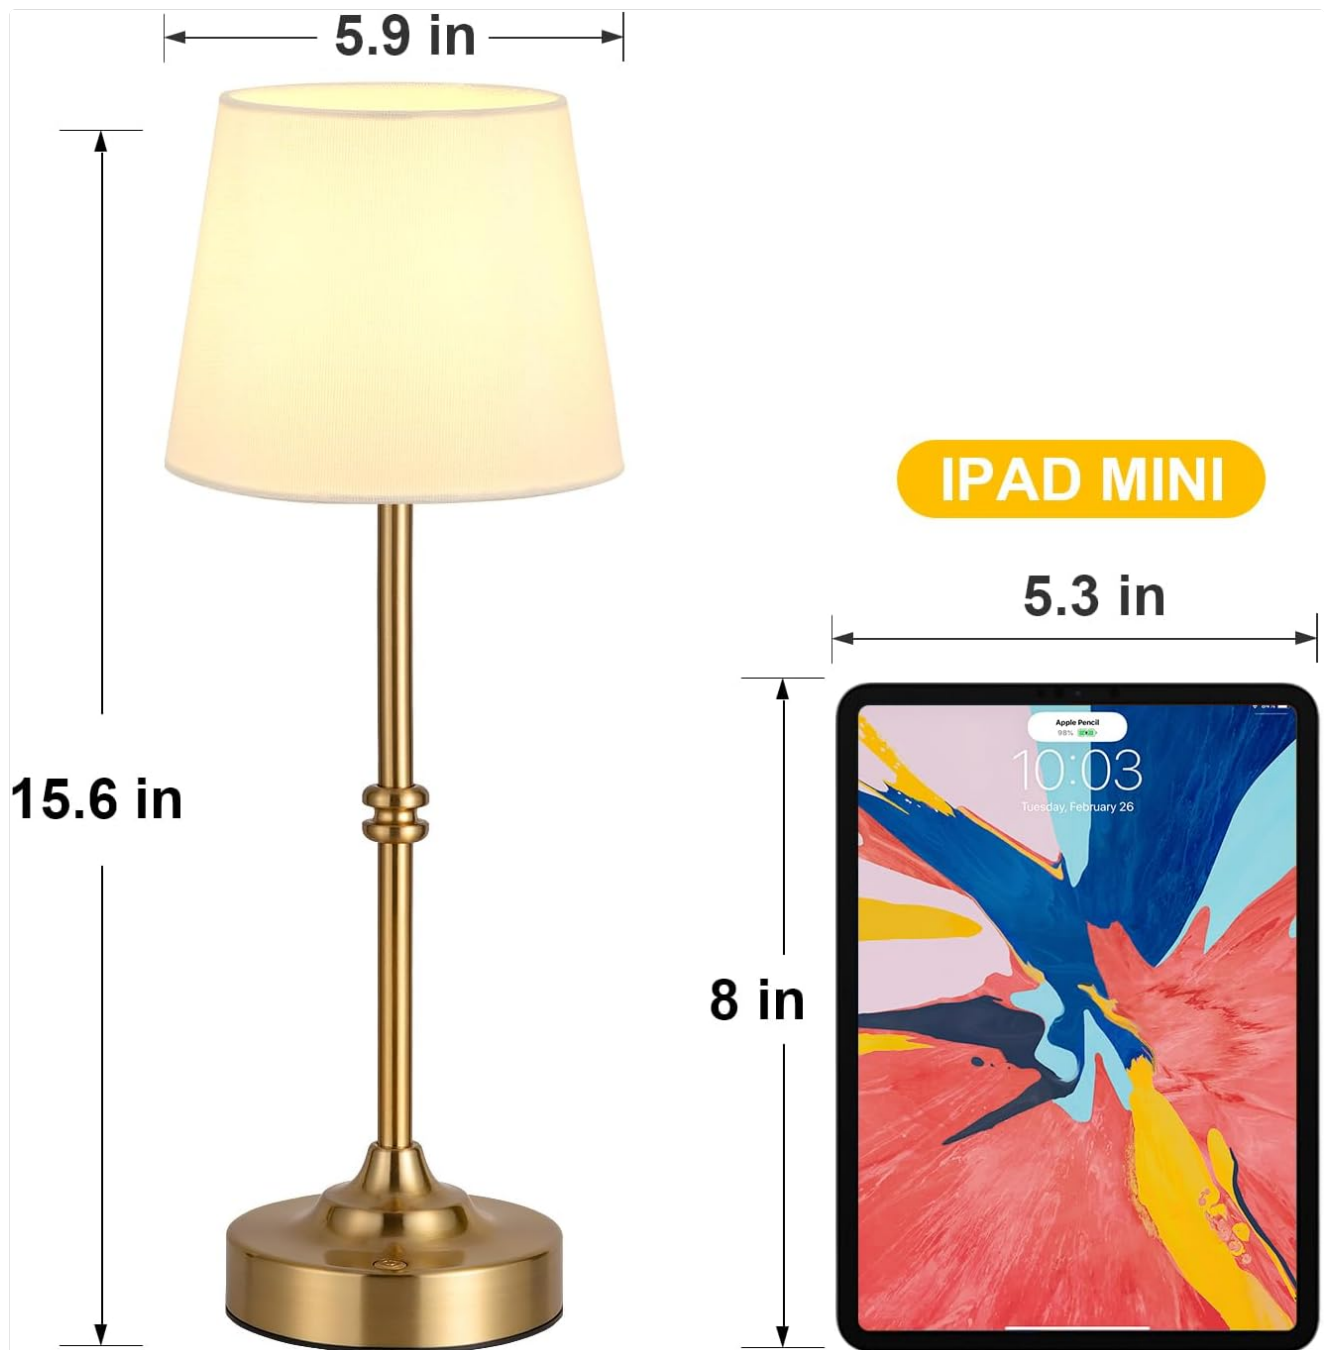

This image displays all the components included in the Kakanuo M34N1 table lamp package, ready for assembly.

SETUP INSTRUCTIONS

Follow these simple steps to assemble your Kakanuo M34N1 table lamp:

1. **Connect the Lamp Body:** Gently screw the upper part of the lamp body onto the base. Ensure it is securely tightened.
2. **Place the Lampshade:** Carefully place the lampshade over the LED light source on the lamp body.
3. **Secure the Lampshade:** Screw the fixing ring onto the lamp socket to secure the lampshade in place.

This video demonstrates the step-by-step assembly process for the Kakanuo M34N1 Cordless Table Lamp, showing how to connect the lamp parts and secure the shade.



A visual guide to assembling your Kakanuo M34N1 table lamp, detailing the connection of the lamp body, placement of the shade, and securing it with the fixing ring.

OPERATING INSTRUCTIONS

Power On/Off and Dimming

The lamp features a touch-sensitive control button located on the base:

- **To Turn On/Off:** Lightly tap the touch button.
- **To Adjust Brightness (Stepless Dimming):** Press and hold the touch button. The brightness will smoothly adjust between 5% and 100%. Release the button when the desired brightness level is reached.
- **Memory Function:** The lamp will remember the last brightness setting used when turned off and will revert to that setting when turned back on.

STEPLESS DIMMABLE LIGHT

Long Press to Adjust Brightness (5%-100%)

10%  100%



This image illustrates the stepless dimming capability of the Kakanuo M34N1 lamp, showing how the light intensity can be adjusted from a soft glow to full brightness.

Charging the Lamp

The Kakanuo M34N1 lamp is equipped with a built-in 4000mAh rechargeable battery.

- **Charging Port:** Locate the USB-C charging port on the back of the lamp base.
- **Connect Charger:** Insert the provided USB-C cable into the charging port and connect the other end to a suitable USB power adapter (not included).
- **Indicator Light:** A red light indicates the lamp is charging. The light will turn green when charging is complete.
- **Charging Time:** A full charge typically takes approximately 3.5-4 hours.
- **Battery Life:** The lamp provides 8 to 40 hours of cordless lighting, depending on the brightness setting.

4000mAh

RECHARGEABLE BATTERY

Up to 40Hrs Of Battery Life

Cordless Design for Placement Anywhere



The Kakanuo M34N1 lamp is powered by a 4000mAh rechargeable battery, providing extended cordless use for flexible placement.

This video showcases various practical applications and placement options for the Kakanuo M34N1 Cordless Table Lamp in different home environments.

MAINTENANCE

To ensure the longevity and optimal performance of your lamp, follow these maintenance guidelines:

- **Cleaning:** Wipe the lamp base and shade with a soft, dry cloth. Avoid using abrasive cleaners or solvents that may damage the finish.
- **Storage:** If storing the lamp for an extended period, ensure it is fully charged and store it in a cool, dry place.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Recharge the lamp when the light output becomes noticeably dim.

TROUBLESHOOTING

If you encounter any issues with your Kakanuo M34N1 lamp, please refer to the following common solutions:

- **Lamp does not turn on:**
 - Ensure the lamp is charged. Connect it to a power source using the USB-C cable.
 - Verify the touch button is being pressed correctly. A light tap should turn it on.
- **Lamp does not dim:**
 - Ensure you are pressing and holding the touch button, not just tapping it.
- **Lamp is not charging:**
 - Check if the USB-C cable is securely connected to both the lamp and the power adapter.
 - Try using a different USB-C cable or power adapter to rule out a faulty accessory.
 - Confirm the power adapter is functioning correctly.
- **Short battery life:**
 - Battery life varies with brightness settings. Higher brightness consumes more power.
 - Ensure the lamp is fully charged before use.

SPECIFICATIONS

Feature	Detail
Model Number	M34N1
Product Dimensions	5.9"D x 5.9"W x 15.6"H
Item Weight	1.1 Pounds
Power Source	Battery Powered
Battery Capacity	4000mAh
Light Source Type	LED
Color Temperature	3000K Warm Light
Switch Type	Touch
Additional Features	Cordless, Dimmable, Memory Function, Portable, Rechargeable
Material Type	Fabric, Metal
Color	Brass
Voltage	5 Volts (DC)
Wattage	2 watts

WARRANTY AND SUPPORT

Your Kakanuo M34N1 Rechargeable Cordless Table Lamp is backed by a **6-month replacement service** for manufacturing defects or functional failures under normal use. This warranty ensures lasting performance and peace of mind.

For further assistance, technical support, or warranty claims, please contact Kakanuo customer service through the retailer's platform or visit the official Kakanuo website for contact information.

Additional protection plans may be available for purchase from your retailer, offering extended coverage beyond the standard manufacturer's warranty.

© 2026 Kakanuo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GFDD4HY5>

More documents and user manuals: <https://manuals.plus/>