

[Manuals.plus](#) /

› [PayLessHere](#) /

› PayLessHere 70-inch Multi-Level Cat Tree Instruction Manual

PayLessHere CT-MS70

PayLessHere 70-inch Multi-Level Cat Tree Instruction Manual

Model: CT-MS70

[Instructions](#) [Usage](#) [Safety Information](#) [Package Contents](#) [Assembly](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for purchasing the PayLessHere 70-inch Multi-Level Cat Tree. This product is designed to provide a safe and engaging environment for your feline companions, offering multiple platforms for climbing, scratching, resting, and playing. Please read this manual carefully before assembly and use to ensure proper setup and long-term enjoyment for your cats.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury to your pets or damage to the product:

- Ensure all parts are securely fastened during assembly. Regularly check for loose screws or connections.
- Place the cat tree on a flat, stable surface to prevent tipping.
- Keep small children away from the cat tree during assembly and ensure they do not climb on it.
- This product is designed for indoor use only.
- Do not allow cats to chew on non-sisal components, as this may cause damage or ingestion of materials.
- Inspect the cat tree periodically for wear and tear. Replace damaged parts immediately.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the included parts list and diagram for identification.



Image: Overview of cat tree components, including platforms, posts, and condos.

Typical components include:

- Baseboard(s)
- Various sized platforms
- Sisal-wrapped scratching posts
- Plush-covered support posts
- Cat condos/houses
- Climbing ladder
- Hanging toys (e.g., furry balls)
- Hardware pack (screws, Allen wrench)

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to assemble the cat tree on a soft surface to prevent scratching floors or components.

Step 1: Prepare the Base

Lay the main baseboard (A) on a flat surface. Attach the initial support posts (B) to the base using the provided screws (S1) and Allen wrench. Ensure they are tightened securely.



Image: Base dimensions, indicating a stable foundation.

Step 2: Attach Lower Platforms and Condo

Connect the first level of platforms (C) and the lower cat condo (D) to the support posts from Step 1. Use the appropriate

screws (S2) and tighten them firmly. Ensure the condo entrance faces a desired direction.

Step 3: Install Climbing Ladder

Attach the climbing ladder (L) between the base and the first platform or a designated lower platform. Secure it with screws (S3) as indicated in the diagram.



Image: A cat utilizing the integrated climbing ladder.

Step 4: Assemble Upper Levels and Second Condo

Continue building upwards, attaching additional support posts (E), platforms (F), and the upper cat condo (G). Pay attention to the orientation of platforms and condos for optimal cat access. Use screws (S4) and ensure all connections are tight.

Large Condo

The quiet and roomy condo allows for your cat to nap without any disruptions



Reliable Steady Bases

The base plate is thickened for better stability for further protect your cat's safety



Image: Detail of a large cat condo and the reinforced base for stability.

Step 5: Attach Top Perches and Hanging Toys

Secure the top perches (H) to the uppermost posts. Finally, attach any hanging toys (T) to the designated points on the platforms or perches. Ensure toys are securely fastened but allow for movement.

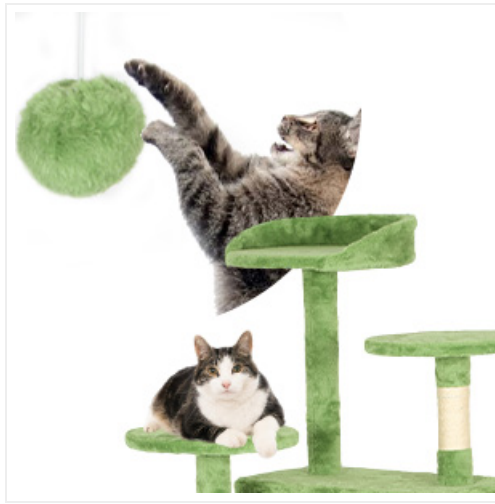


Image: A cat engaging with a hanging ball toy, demonstrating a play feature.

Step 6: Final Check

Once assembled, gently shake the cat tree to ensure stability. Retighten any loose screws. Place the cat tree in its desired location, ensuring it is away from high-traffic areas or potential hazards.

USAGE

The PayLessHere Cat Tree offers various features for your cat's enjoyment:

- **Scratching Posts:** The sisal-wrapped posts are designed to satisfy your cat's natural urge to scratch, helping to protect your furniture.
- **Multi-Level Platforms:** Cats can climb, jump, and observe their surroundings from different heights.
- **Cat Condos:** Enclosed spaces provide a sense of security and a quiet retreat for napping or hiding.
- **Hanging Toys:** The attached furry balls encourage playful interaction and exercise.



Multi-Level Fun

Both young and old cats can easily climb up and down



Climb up and down



Climb up and down

Image: Cats demonstrating the multi-level climbing and resting features of the cat tree.

MAINTENANCE

Regular maintenance will extend the life of your cat tree and ensure a hygienic environment for your pets:

- **Cleaning:** Use a lint roller or vacuum cleaner to remove loose fur and debris from the plush surfaces. For spot cleaning, use a damp cloth with mild soap and water, then air dry thoroughly. Avoid harsh chemicals.
- **Sisal Rope:** Periodically check the sisal scratching posts for fraying. While sisal is durable, heavy use may require replacement of posts over time.
- **Stability Check:** Every few weeks, check all screws and connections to ensure they remain tight. Retighten as necessary to maintain stability.
- **Toy Inspection:** Inspect hanging toys for damage. Replace if they become detached or pose a choking hazard.

TROUBLESHOOTING

If you encounter issues with your cat tree, refer to the following common problems and solutions:

- Issue:** The cat tree feels wobbly or unstable.
Solution: Ensure all screws are fully tightened. Verify the base is on a flat, even surface. If necessary, reposition the tree or place shims under the base.
- Issue:** Cats are not using the scratching posts.
Solution: Try sprinkling catnip on the sisal posts to attract your cat. Gently guide your cat's paws to the posts to demonstrate their use.
- Issue:** Missing parts during assembly.
Solution: Double-check the packaging. If parts are genuinely missing, contact PayLessHere customer support with your purchase details.
- Issue:** Plush fabric is shedding.
Solution: This can be normal for new plush items. Use a vacuum cleaner with a brush attachment to remove loose fibers. Continued excessive shedding may indicate a defect; contact support.

SPECIFICATIONS

Product Dimensions (L x W x H)	21" x 21" x 70"
Item Weight	34 pounds
Material	Particleboard, Plush, Sisal
Color	Green
Number of Levels	3
Mounting Type	Floor Mount
Recommended Uses	Indoor climbing, scratching, resting
Model Number	CT-MS70
UPC	195030184421

WARRANTY & SUPPORT

Warranty Information

This PayLessHere Cat Tree comes with a **90-day warranty** from the date of purchase, covering manufacturing defects. This warranty does not cover damage caused by misuse, improper assembly, normal wear and tear, or unauthorized modifications.

Customer Support

For assistance with assembly, missing parts, or warranty claims, please contact PayLessHere customer support. Have your purchase receipt and model number (CT-MS70) ready when contacting support.
Contact information for PayLessHere can typically be found on their official website or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question