

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LEGO](#) /
- › [LEGO Stranger Things WSQK Radio Station \(40891\) Instruction Manual](#)

LEGO 40891

LEGO Stranger Things WSQK Radio Station (40891) Instruction Manual

Model: 40891

INTRODUCTION

This instruction manual provides detailed guidance for assembling and maintaining your LEGO Stranger Things WSQK Radio Station (40891) building kit. Designed for adult fans, this set allows you to recreate the iconic WSQK radio station interior from the Stranger Things series, complete with a retro DJ booth and a lounge area. It includes minifigures of Joyce Byers and Sheriff Hopper, along with a unique tile featuring the WSQK rubber chicken.

Please read these instructions carefully before beginning assembly to ensure a smooth and enjoyable building experience.



Figure 1: The fully assembled LEGO Stranger Things WSQK Radio Station, featuring the detailed interior and included minifigures.

SETUP AND ASSEMBLY

Follow these steps to assemble your LEGO Stranger Things WSQK Radio Station:

1. **Unpack Components:** Carefully open the packaging and sort all LEGO bricks and elements. It is recommended to organize pieces by color or type to facilitate assembly.
2. **Consult Building Guide:** Refer to the included printed building guide for step-by-step visual instructions. Each step illustrates the specific pieces required and their placement.
3. **Assemble the Base:** Begin by constructing the base structure of the radio station, ensuring all connections are firm.
4. **Build Interior Details:** Proceed to build the interior elements, including the retro DJ booth with its mixer board, tape machine, record player, and microphone.
5. **Construct Lounge Area:** Assemble the laid-back lounge space, including the couch and television.
6. **Add Minifigures and Accessories:** Place the Joyce Byers and Sheriff Hopper minifigures within the scene. Integrate the LEGO tile printed with the WSQK rubber chicken.

7. **Final Review:** Once assembly is complete, review the model against the building guide to ensure all pieces are correctly placed and the structure is stable.

This construction kit contains 234 pieces. Take your time and enjoy the building process.

OPERATING AND DISPLAY

The LEGO Stranger Things WSQK Radio Station is designed as a display model and collectible. While it does not have electronic functions, you can interact with it in the following ways:

- **Minifigure Placement:** Position the Joyce Byers and Sheriff Hopper minifigures in various areas of the radio station to recreate scenes or imagine new ones.
- **Accessory Arrangement:** Adjust the placement of the DJ booth elements (mixer, tape machine, record player, microphone) and the lounge furniture as desired.
- **Display:** Place the completed model in a prominent location as a captivating centerpiece for your home, office, or collection.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your LEGO model, follow these maintenance guidelines:

- **Dusting:** Regularly dust the model using a soft brush or compressed air to prevent dust buildup in crevices.
- **Cleaning:** For more thorough cleaning, gently wipe the bricks with a damp cloth and mild soap solution. Rinse with clean water and allow to air dry completely. Avoid harsh chemicals or abrasive materials.
- **Storage:** If disassembling for storage, keep all pieces in a sealed container away from direct sunlight and extreme temperatures to prevent discoloration or warping.
- **Handling:** Handle the model carefully to avoid accidental disassembly or damage to delicate parts.

TROUBLESHOOTING

If you encounter any issues during assembly or with your completed model, consider the following:

- **Missing Pieces:** If you believe a piece is missing, double-check the packaging and all sorted piles. LEGO offers a "Bricks & Pieces" service on their official website for ordering replacement parts.
- **Assembly Difficulty:** If a step seems unclear or pieces don't fit, re-examine the building guide carefully. Sometimes, a piece may be oriented incorrectly or a previous step might have an error.
- **Loose Connections:** Ensure all bricks are firmly pressed together. LEGO connections should feel secure.
- **Damaged Parts:** If any parts are damaged upon arrival, contact LEGO Customer Service for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	40891

Product Name	LEGO Stranger Things WSQK Radio Station
Number of Pieces	234
Dimensions (Assembled)	Over 2.5 in. (7 cm) high, 4 in. (10 cm) wide and 5 in. (13 cm) deep
Recommended Age	18+
Item Weight	10.6 ounces
Product Dimensions (Box)	8.03 x 7.48 x 2.36 inches
Manufacturer	LEGO

WARRANTY INFORMATION

LEGO products are manufactured to high-quality standards. For detailed information regarding warranty coverage for missing or defective parts, please refer to the official LEGO website or contact LEGO Customer Service directly. Warranty terms and conditions are subject to LEGO's official policy.

CUSTOMER SUPPORT

For further assistance, including inquiries about missing pieces, assembly questions, or product information, please visit the official LEGO customer service portal:

[LEGO Customer Service](#)

You can also find additional resources and contact information on the LEGO website.