

[Manuals.plus](#) /

› [SICOTAS](#) /

› SICOTAS Rattan Shoe Storage Cabinet (Model B0GFF469FC) User Manual

SICOTAS B0GFF469FC

SICOTAS Rattan Shoe Storage Cabinet User Manual

MODEL: B0GFF469FC

1. Introduction

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your SICOTAS Rattan Shoe Storage Cabinet. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.



Image 1.1: The SICOTAS Rattan Shoe Storage Cabinet in an entryway setting.

2. Safety Information

Important Safety Instructions:

- Always secure the cabinet to the wall using the provided anti-tip hardware to prevent tipping. This is crucial for safety, especially in households with children or pets.
- Ensure the cabinet is level and stable on a flat surface before use. Adjustable feet are provided for this purpose.
- Do not overload the cabinet. The maximum weight capacity for the top surface is 55 pounds. Overloading can compromise stability and lead to tipping.
- Keep fingers clear of flip-down drawers when opening and closing to avoid pinching.

- Do not allow children to climb on or play with the cabinet.

3. Package Contents

Before beginning assembly, verify that all components and hardware are present. If any parts are missing or damaged, please contact customer support.

Included Components:

- Cabinet panels (top, bottom, sides, back)
- Flip-down drawer fronts with rattan decor
- Internal shoe shelves (adjustable and removable)
- Metal handles
- Adjustable feet
- Anti-tip device
- Installation Kit (screws, dowels, cam locks, etc.)
- User Manual (this document)

Tools Required (Not Included):

- Phillips head screwdriver
- Hammer (optional, for dowels)
- Drill (for wall mounting anti-tip device)
- Level

4. Setup and Assembly

Follow these steps carefully for proper assembly. It is recommended to assemble the cabinet on a soft, clean surface to prevent scratches.

1. **Prepare the Panels:** Identify all wooden panels. Attach cam bolts and wooden dowels to the designated holes on the side panels and bottom panel as per the included installation kit instructions.
2. **Assemble the Frame:** Connect the bottom panel to the side panels using cam locks. Ensure all connections are secure.
3. **Install Back Panel:** Slide the back panel into the grooves on the side and bottom panels. Secure it with small nails or screws provided.
4. **Attach Top Panel:** Secure the top panel to the assembled frame using cam locks.
5. **Assemble Flip Drawers:** Attach the internal shoe shelves to the flip-down drawer fronts. The 2 middle shelves are 3-position adjustable. Refer to Image 4.1 for shelf adjustment options.
6. **Install Flip Drawers:** Insert the assembled flip drawers into the cabinet frame. Ensure they open and close smoothly.
7. **Attach Handles:** Secure the metal handles to the front of the flip drawers.
8. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of the cabinet. Adjust them to ensure the cabinet is level and stable on your floor.
9. **Secure Anti-Tip Device:** Attach the anti-tip device to the back of the cabinet and then to a wall stud using appropriate hardware. This step is critical for safety.

2 Adjustable & Removable Shelves

Add 1 Shelf, Add More Shoes



Image 4.1: The adjustable and removable shelves offer three positions for varied shoe sizes.

Your browser does not support the video tag.

Video 4.2: This video provides a detailed overview of the SICOTAS Accent Rattan Shoe Cabinet, including its features and potential assembly insights.

5. Operating Instructions

Your SICOTAS Rattan Shoe Storage Cabinet is designed for efficient shoe organization.

- **Opening and Closing Drawers:** Gently pull the metal handle to flip down the drawer. Push the drawer back up until it clicks into place to close.
- **Storing Shoes:** Each flip drawer features a 3-tier layout. Place shoes on the shelves. For optimal stability and to prevent shoes from falling when the drawer is opened, ensure shoes are properly seated and the drawer is not under-filled or over-filled.
- **Adjusting Shelves:** The two middle shelves within each flip drawer can be adjusted to three different height positions or removed entirely to accommodate various shoe types, such as sneakers, heels, or ankle boots. To adjust, carefully unclip the shelf from its current position and re-clip it into the desired slot.

- **Top Surface Use:** The top surface with its fence provides a convenient area for keys, mail, small decorative items, or an umbrella stand. Do not exceed the 55-pound weight limit.

Spacious Storage Space

Hold All Shoes, Show Nothing



Image 5.1: The cabinet's interior, demonstrating spacious storage for various shoe types.

6. Maintenance

Proper care will extend the life and appearance of your shoe cabinet.

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Rattan Care:** The rattan mesh is durable but can be sensitive to excessive moisture. Wipe gently with a dry or slightly damp cloth. Avoid direct sunlight for prolonged periods to prevent fading.
- **Hardware:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Odor Prevention:** The cabinet is equipped with a back panel to help prevent odors from spreading. For best results, ensure shoes are clean and dry before storing.

7. Troubleshooting

If you encounter issues with your shoe cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Cabinet feels unstable or wobbly.	Uneven floor; loose connections; anti-tip device not installed.	Adjust the leveling feet at the bottom of the cabinet. Ensure all assembly screws are tightened. Install the anti-tip device securely to the wall.
Flip drawers do not open or close smoothly.	Obstruction; incorrect assembly of drawer mechanism; shoes interfering.	Check for any objects blocking the drawer's path. Verify that the drawer mechanism was assembled correctly. Ensure shoes are not too large or improperly placed, obstructing movement.
Shoes fall out when drawer is opened.	Shoes not properly seated; drawer under-filled or over-filled.	Ensure shoes are placed firmly on the shelves. Adjust the number of shoes to fill the space adequately without overcrowding. Consider adjusting shelf height for taller shoes.
Missing parts or damaged components.	Shipping damage; packaging error.	Contact SICOTAS customer support immediately for assistance.

8. Specifications

Detailed product specifications for the SICOTAS Rattan Shoe Storage Cabinet (Model B0GFF469FC).

- **Brand:** SICOTAS
- **Model:** B0GFF469FC
- **Material:** Engineered Wood
- **Color:** Reclaimed Caramel Oak
- **Product Dimensions (D x W x H):** 11.6" x 32.4" x 41.5"
- **Number of Drawers:** 2 (Flip Drawers)
- **Number of Shelves:** 6 (3 per drawer, 2 middle shelves adjustable)
- **Storage Capacity:** Up to 20 pairs of adult shoes (size 12-13 depending on style) or 24 pairs of kids' shoes.
- **Weight Capacity (Top Surface):** 55 Pounds
- **Installation Type:** Freestanding, Floor Mount
- **Special Features:** Adjustable Shelf, Anti-Tipping Device, Removable Shelf, Rattan Decor, Adjustable Feet
- **Assembly Required:** Yes

Shoe Cabinet Dimensions



Image 8.1: Detailed dimensions of the shoe cabinet.

9. Warranty and Support

SICOTAS products are manufactured with quality and customer satisfaction in mind. For specific warranty details, please refer to the warranty card included with your purchase or contact SICOTAS customer support directly.

Customer Support:

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact SICOTAS customer service. Contact information can typically be found on the packaging, the official SICOTAS website, or through your retailer's customer support portal.

Online Support: Visit the [SICOTAS Store on Amazon](#) for product information and support resources.

