

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [OLIXIS](#) /

› [OLIXIS 10x10ft Pop Up Canopy Tent Instruction Manual](#)

## OLIXIS OCZYPWT

# OLIXIS 10x10ft Pop Up Canopy Tent Instruction Manual

Model: OCZYPWT | Brand: OLIXIS

## 1. INTRODUCTION AND SAFETY INFORMATION

---

Thank you for choosing the OLIXIS 10x10ft Pop Up Canopy Tent. This manual provides essential information for the safe and efficient use of your canopy. Please read all instructions carefully before assembly and operation.

### Important Safety Warnings:

- Always secure the canopy to the ground using stakes, guy ropes, or weights to prevent it from tipping over in windy conditions. Failure to do so can result in serious injury or damage to property.
- Do not use the canopy in severe weather conditions, including heavy rain, strong winds, or lightning. Disassemble and store the canopy immediately if such conditions arise.
- Keep all flame and heat sources away from the canopy fabric. The fabric is flame-retardant but not fireproof.
- Ensure all locking mechanisms are fully engaged before use.
- Keep children and pets away from the canopy during assembly and disassembly.

## 2. PACKAGE CONTENTS

---

Verify that all components listed below are present in your package:

- Steel Frame (x1)
- Canopy Top (x1)
- Rolling Storage Bag (x1)
- Ground Spikes (x8)
- Guy Ropes (x4)
- Empty Sandbags (x4)

# PACKAGE CONTENTS

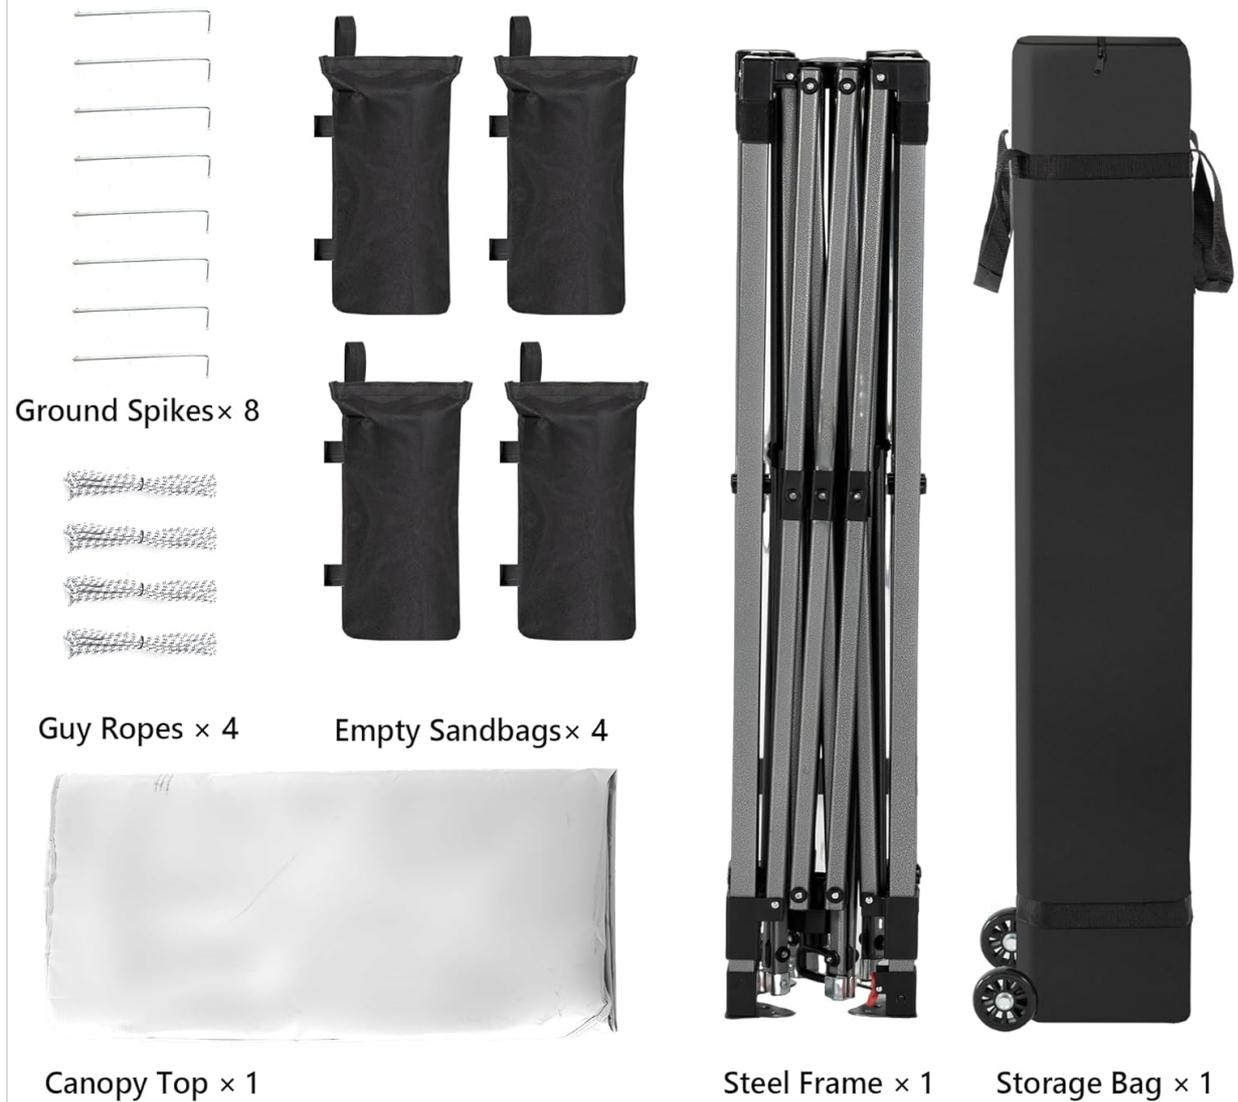


Figure 2.1: All components included in the OLIXIS 10x10ft Pop Up Canopy Tent package.

## 3. SETUP INSTRUCTIONS

The OLIXIS canopy is designed for quick and easy setup, even by one person. Follow these steps for proper assembly:

### 3.1. Unfolding the Frame

1. Place the folded steel frame in the desired location.
2. With a partner (recommended for ease) or by yourself, gently pull the outer legs of the frame outwards to begin expanding it.

### 3.2. Attaching the Canopy Top

3. Drape the canopy top over the partially expanded frame. Ensure the corners of the canopy align with the corners of the frame.
4. Secure the canopy top to the frame using the Velcro straps located on the underside of the canopy and around the frame bars.


### 3.3. Expanding and Locking the Frame

5. Stand inside the canopy and locate the central pop-up button mechanism. Push upwards on this button until it clicks and locks into place, fully extending the canopy roof.
6. Extend each leg individually by pressing the red no-pinch adjuster button and sliding the inner leg downwards until it locks at your desired height. There are three adjustable height settings.

# TENT EASY SETUP


## STEP 01

Lay out the canopy frame.

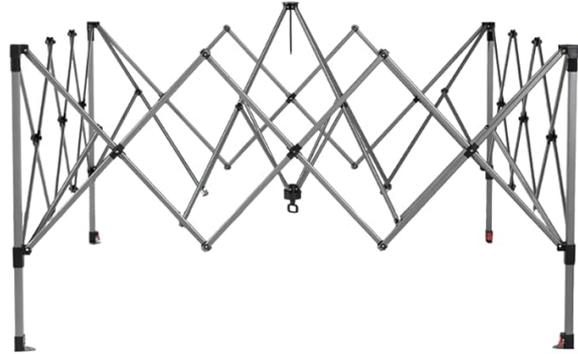

## STEP 02

Press the one-touch center lock system.

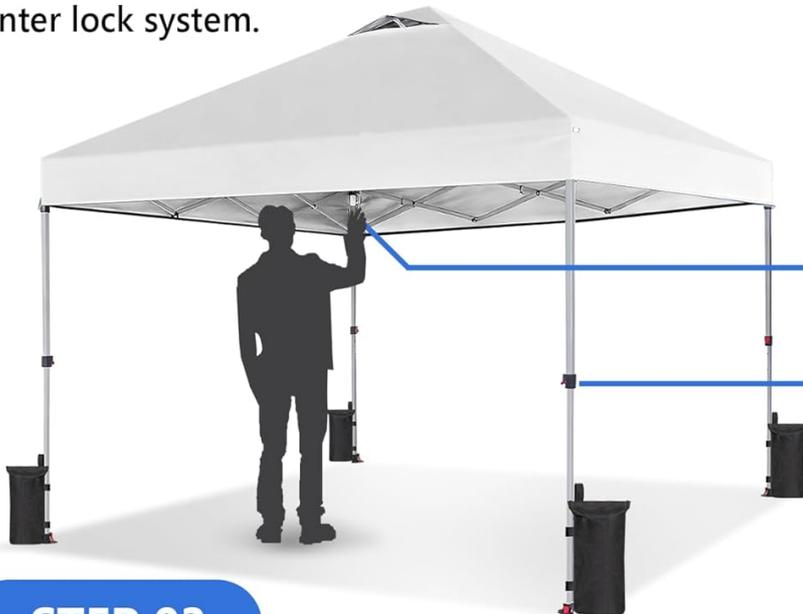

## STEP 03

Installation complete and adjust to ideal height.



Figure 3.1: Visual guide for the three main steps of canopy tent setup.



Figure 3.2: Details of the pop-up button and adjustable leg features for easy operation.

### 3.4. Securing the Canopy

7. Fill the provided sandbags with sand or other heavy material and attach them to the canopy legs for added stability.
8. Use the ground spikes and guy ropes to anchor the canopy firmly to the ground, especially in outdoor environments.

### 3.5. Setup Demonstration Video

Video 3.1: Official video demonstrating the step-by-step assembly and securing of the OLIXIS 10x10ft Pop Up Canopy Tent, including attaching the canopy, extending legs, and using stakes and sandbags.

## 4. OPERATING INSTRUCTIONS

Your OLIXIS canopy tent is designed for versatile use and provides ample shade for various outdoor activities.

### 4.1. Dual Vented Top

The canopy features a dual-vented top design. This design optimizes airflow, reducing wind stress on the canopy and preventing fabric tearing in moderate conditions. It also helps dissipate heat, keeping the area

underneath cooler.



Figure 4.1: Close-up view of the dual-vented top for improved airflow and stability.

#### **4.2. Adjustable Height**

The canopy offers three adjustable height settings, allowing you to customize the shade coverage and clearance based on your needs and environmental conditions.

#### **4.3. Versatile Applications**

This 10x10ft canopy provides 100 square feet of straight-leg shade, making it suitable for a wide range of uses:

- Beach outings
- Camping trips
- Outdoor events and parties
- Market stalls
- Backyard gatherings

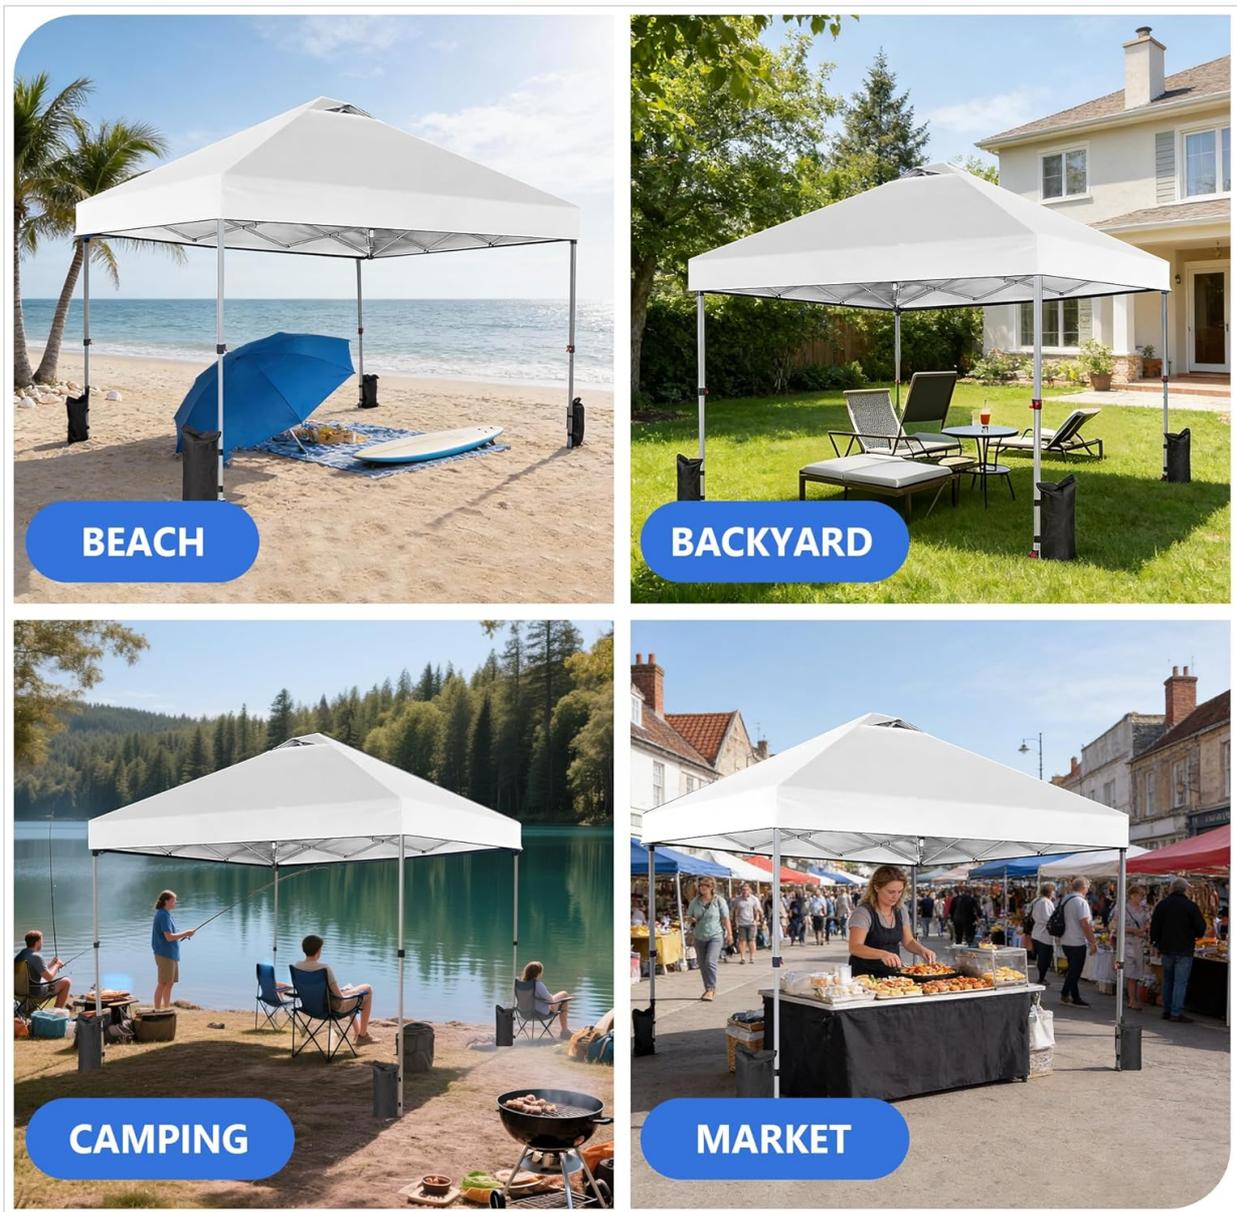


Figure 4.2: The canopy tent in various outdoor settings, demonstrating its versatility.

## 5. MAINTENANCE

---

Proper maintenance will extend the life of your OLIXIS canopy tent.

### 5.1. Cleaning

- Clean the canopy fabric with mild soap and water. Do not use harsh detergents or abrasive cleaners.
- Rinse thoroughly and allow the fabric to air dry completely before storage to prevent mildew.
- Wipe down the steel frame with a damp cloth to remove dirt and debris.

### 5.2. Storage

- Ensure the canopy is completely dry before folding and storing.
- Fold the canopy neatly and place it in the provided rolling carry bag.
- Store the canopy in a cool, dry place away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

---

Here are solutions to common issues you might encounter:

### 6.1. Difficulty Expanding the Frame

- Ensure the frame is placed on a flat, even surface.
- Gently pull the outer legs outwards. If resistance is met, check for any obstructions or tangled parts.
- Applying slight pressure to the center of the frame while pulling the legs can help.

### 6.2. Canopy Not Locking into Place

- Make sure the central pop-up button is pushed firmly upwards until it audibly clicks.
- For leg height adjustment, ensure the red adjuster button is fully depressed before sliding the leg and released to lock it into one of the three positions.

### 6.3. Canopy Instability in Wind

- Always use all provided ground spikes and guy ropes to anchor the canopy.
- Ensure sandbags are filled and securely attached to each leg.
- In strong winds, it is safest to disassemble the canopy to prevent damage or injury.

## 7. SPECIFICATIONS

Feature	Detail
Brand	OLIXIS
Model Number	OCZYPWT
Product Dimensions	120"L x 120"W x 105.6"H (10ft x 10ft)
Floor Area	100 Square Feet
Item Weight	33.2 Pounds
Material	Metal (Frame), Polyester (Canopy Top)
Frame Type	Steel, Powder-Coated
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	Yes
Assembly Required	Yes
Recommended Uses	Camping, Commercial Event, Social Gathering, Sport Event

# PRODUCT SIZE

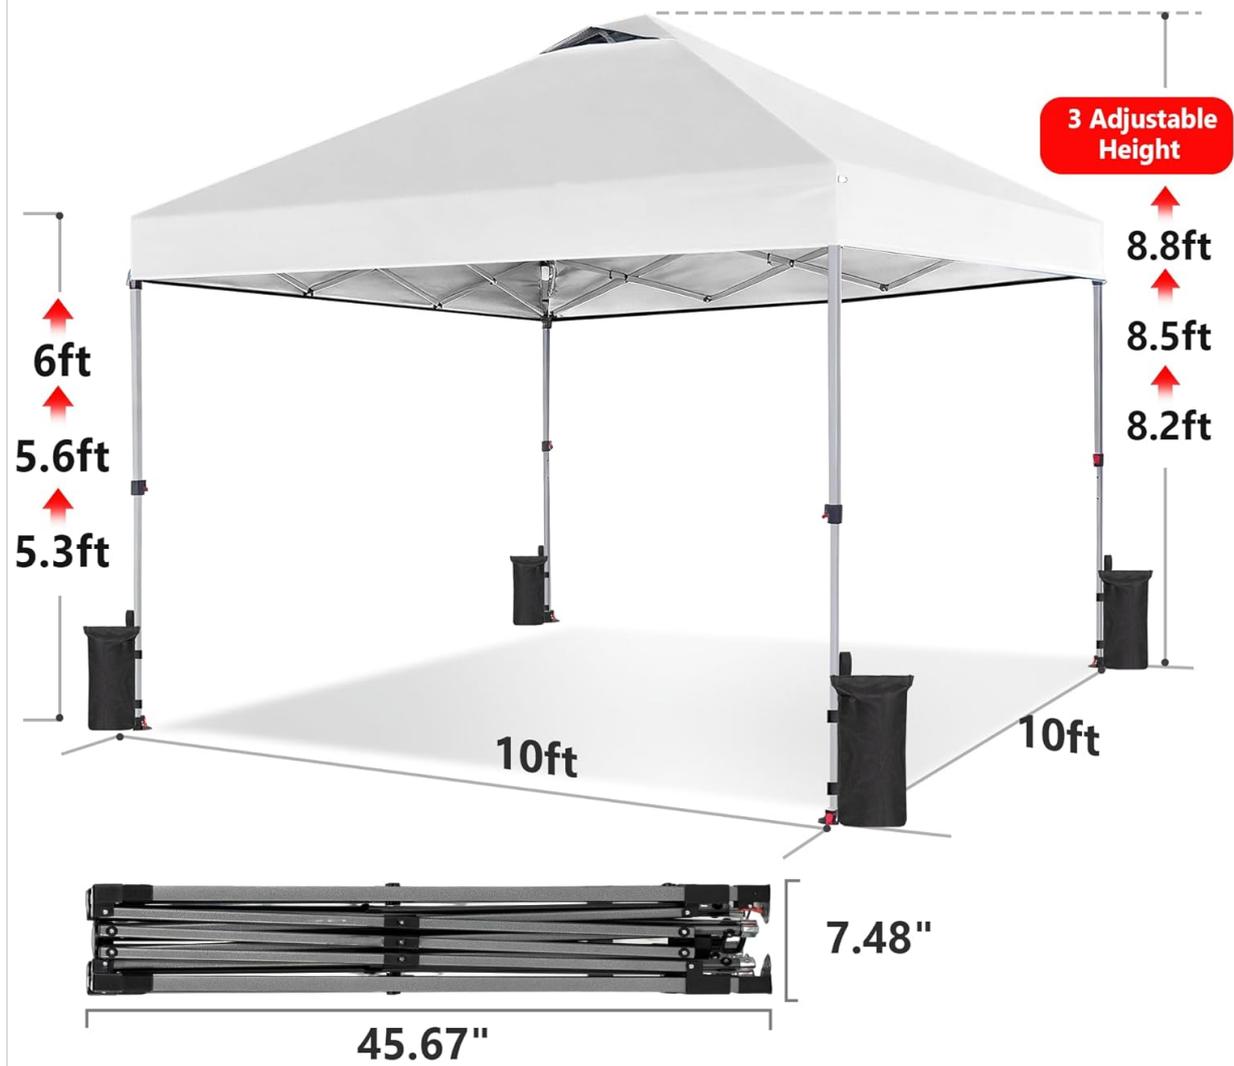


Figure 7.1: Detailed dimensions of the OLIXIS 10x10ft Pop Up Canopy Tent.

## 8. WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your purchase or contact OLIXIS directly through their official channels. Amazon's standard return policy typically allows for returns within 30 days of receipt for most items.

Always retain your proof of purchase for warranty claims.