

[Manuals.plus](#) /

› [Gueray](#) /

› Gueray G-906 Portable Bluetooth CD Player User Manual

Gueray G-906

Gueray G-906 Portable Bluetooth CD Player User Manual

INTRODUCTION

The Gueray G-906 is a versatile portable CD player designed for home use, featuring Bluetooth 5.0 connectivity, built-in HiFi speakers, FM radio, and multiple playback options including TF card, USB flash drive, and 3.5mm audio input. This manual provides detailed instructions for setting up and operating your device.

WHAT'S IN THE BOX

- CD Player (1 Pack)
- Type C Cable (1 Pack)
- Remote control (1 Pack)
- User Manual (1 Pack)
- 5V-1.5A USB adapter (1 Pack)

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Gueray G-906 CD Player.

Multifunctional CD Player Portable



Support u-disk
Playing



Type-c Port



Bluetooth 5.0 Receiver
& Transmitter



HiFi
Stereo Music



AUX
Input/Output



Full-band
FM Radio



With Dust
Cover



Wireless Remote
Control



A-B
Repeater



LED
Display



Figure 1: Multifunctional CD Player highlighting various features.



Figure 2: Detailed view of the CD player's controls and ports, including Mode, Volume, Skip, Play/Pause buttons, Loudspeaker, USB Port, AUX Port, DC-5V IN, and Power switch.



Figure 3: The CD player features a transparent dust cover to protect the CD mechanism.

SETUP

1. **Power Connection:** Connect the provided Type-C cable to the DC-5V IN port on the side of the CD player. Plug the USB-A end of the cable into the 5V-1.5A USB adapter, then plug the adapter into a power outlet.
2. **Placement:** Place the CD player on a stable, flat surface. The desktop design with rubber feet ensures stability and prevents surface damage.
3. **Power On:** Slide the ON/OFF Power switch on the side of the unit to the 'ON' position. The LED display will illuminate.
4. **Insert CD:** Press the small button at the bottom of the CD cover to open it. Carefully place a CD (CD, CD-G, MP3, WMA compatible) onto the spindle, ensuring it clicks into place. Close the CD cover by pressing the button again.

OPERATING INSTRUCTIONS

1. CD Playback

1. Ensure a CD is properly inserted as described in the Setup section.
2. The player will automatically detect the CD and begin playback. The LED display will show the track number and elapsed time.
3. Use the **Play/Pause** button (▶ ||) on the top panel or remote to pause/resume playback.
4. Use the **Previous** (◀◀) and **Next** (▶▶) buttons to skip tracks.
5. Press the **Repeat** button on the remote to cycle through repeat modes (e.g., repeat one, repeat all).

2. Bluetooth Mode

The Gueray G-906 functions as both a Bluetooth receiver and transmitter.



Figure 4: Bluetooth functionality, allowing connection to smartphones/tablets (receiver) or Bluetooth headphones/speakers (transmitter).

1. Press the **MODE** button on the unit or remote until 'BLUE' appears on the LED display.
2. **Bluetooth Receiver:** On your smartphone or tablet, search for 'Gueray CD Player' in your Bluetooth settings and pair. The CD player will now act as a speaker for your device.
3. **Bluetooth Transmitter:** To transmit audio from the CD player to Bluetooth headphones or speakers, ensure your headphones/speakers are in pairing mode. The CD player will automatically search and connect.

3. FM Radio



Figure 5: FM Radio function with a wide frequency range of 76MHz-108MHz.

1. Press the **MODE** button until 'FM' appears on the LED display.
2. Use the **Previous** (◀◀) and **Next** (▶▶) buttons to manually tune to a station.
3. Press and hold the **Previous** (◀◀) or **Next** (▶▶) buttons to auto-scan for the next available station.

4. USB Flash Drive / TF Card Playback

Support USB Flash Playback & AUX Mode

Support Type C Power Cable



Figure 6: USB Flash Playback and AUX Mode connections.

1. Insert a USB flash drive into the USB port or a TF card into the designated slot (if available).
2. Press the **MODE** button until 'USB' or 'TF' appears. The player will automatically detect and play MP3 files.
3. Use the playback controls (Play/Pause, Previous, Next) as you would for CD playback.

5. AUX Mode

1. Connect an external audio device (e.g., smartphone, laptop) to the AUX port using a 3.5mm audio cable.
2. Press the **MODE** button until 'LINE' appears on the LED display.
3. Audio from the connected device will now play through the CD player's speakers.

6. Remote Control

Great Gift Idea for Everyone

Cute CD Player with Ambient Background Lights



Figure 7: The remote control allows full functionality from a distance, including power, mode selection, volume, and playback controls.

The included remote control provides full functionality for the CD player. It allows you to power on/off, switch modes (USB, FM, CD, Bluetooth), adjust volume, skip tracks, repeat songs, and set a sleep timer.

7. Sleep Timer

Use the sleep timer function on the remote control to set the player to automatically turn off after a specified duration.

MAINTENANCE

- Keep the CD player clean by wiping it with a soft, dry cloth.
- Ensure the dust cover is closed when not in use to prevent dust and debris from entering the CD mechanism.
- Handle CDs by their edges to avoid fingerprints and scratches, which can affect playback quality.

TROUBLESHOOTING

- **No Power:** Ensure the power cable is securely connected to both the player and the power adapter, and the adapter is plugged into a working outlet. Check the ON/OFF switch.
- **CD Not Playing:** Verify the CD is inserted correctly and is clean. Ensure the player is in CD mode.
- **No Sound:** Check the volume level on the player and any connected external devices. Ensure the correct mode (CD, Bluetooth, FM, USB, AUX) is selected.
- **Bluetooth Connection Issues:** Ensure the player is in Bluetooth mode and your external device's Bluetooth is enabled and in pairing mode. Try restarting both devices.
- **Poor Radio Reception:** Adjust the player's position to improve signal reception.

SPECIFICATIONS

Brand	Gueray
Model Number	G-906
Color	Blue
Connectivity Technology	Bluetooth
Special Features	Anti-Skip Protection, Built-In Radio, CD-R/RW Compatible, Dustproof, Programmable Memory
Supported Audio Format	WAV
Connector Type	3.5mm Jack
Number Of Discs	1
MP3 Player	Yes

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Official demonstration of the Gueray CD Player's features and operation by LOUYUA.

WARRANTY & SUPPORT

This Gueray CD Player comes with a 6-month warranty.

For further support, please visit the official Gueray Store:[Gueray Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GFFGM6KY>

More documents and user manuals: <https://manuals.plus/>