

[Manuals.plus](#) /

› [Dioche](#) /

› Dioche WiFi SD Card Adapter User Manual

## Dioche DiocheI4qjvapdc8

# Dioche WiFi SD Card Adapter User Manual

Model: DiocheI4qjvapdc8

## INTRODUCTION

The Dioche WiFi SD Card Adapter enables seamless wireless transmission of photos and videos from your camera to mobile devices such as smartphones and tablets. This adapter supports a wide range of media formats and allows connectivity for up to three devices simultaneously, offering a convenient plug-and-play solution for sharing your media.



Image: The Dioche WiFi SD Card Adapter shown with a camera in the background, illustrating its primary use for wireless data transfer from cameras.

## SETUP

1. **Insert Memory Card:** Carefully insert your SDHC or other compatible memory card into the Dioche WiFi SD Card Adapter. Ensure it is fully seated.
2. **Insert Adapter:** Insert the Dioche WiFi SD Card Adapter (with your memory card inside) into your camera's SD card slot.
3. **Power On:** Power on your camera. The adapter will typically activate its WiFi signal.
4. **Connect Device:** On your smartphone, tablet, or laptop, search for available WiFi networks. Connect to the network broadcast by the Dioche WiFi SD Card Adapter. The default WiFi password is **88888888**.
5. **Access Media:** Once connected, use a compatible application or web browser on your device to access the files stored on the SD card via the adapter's interface.



## SD CARD ADAPTER

At the same time share the resources in the camera to the mobile phone, tablet, computer

Wireless transmission

Wirelessly transfer photos with null traffic

Support shooting and viewing function

ABS material, wear resistant and durable

Support JPG, PNG, BMP photo format, support MP4, AVI, MOV video format

To connect up to 3 devices at the same time, support for Android, for IOS devices



Image: A visual representation of the setup process, showing a camera, smartphone, and computer wirelessly interacting with the SD card adapter for data sharing.

## OPERATING INSTRUCTIONS

The Dioche WiFi SD Card Adapter is designed for straightforward operation, allowing you to wirelessly transfer and share media files.

### Wireless File Transfer

- Ensure your device (smartphone, tablet, laptop) is connected to the adapter's WiFi network.
- Open the designated application or web interface to browse the contents of the SD card.
- Select the photos or videos you wish to transfer and initiate the download to your device.
- Supported photo formats include JPG, PNG, and BMP.
- Supported video formats include MP4, AVI, and MOV.
- Supported music formats include MP3 and WAV.

### WiFi Configuration

The adapter supports comprehensive WiFi settings, including password changes and switching between AP (Access Point) and Station modes. Refer to the adapter's specific web interface or companion app for detailed instructions on modifying these settings.

### Multi-Device Connectivity

The adapter allows up to 3 devices to connect simultaneously to its WiFi network, enabling multiple users to access and download content from the SD card at the same time.



Image: The Dioche WiFi SD Card Adapter positioned between a camera and a smartphone, with a wireless signal icon indicating active data transfer.

## MAINTENANCE

To ensure the longevity and optimal performance of your Dioche WiFi SD Card Adapter, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe the adapter. Avoid using liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the adapter with care. Avoid dropping it or subjecting it to strong impacts.
- **Moisture:** Keep the adapter away from water and high humidity to prevent damage to electronic components.

## TROUBLESHOOTING

If you encounter issues with your Dioche WiFi SD Card Adapter, please refer to the following common troubleshooting steps:

- **Cannot Connect to WiFi:**

- Ensure the adapter is properly inserted into the camera and the camera is powered on.
- Verify that you are entering the correct WiFi password (default is **88888888**).
- Try restarting your camera and the connecting device.

- **Files Not Transferring:**

- Check if your files are in a supported format (JPG, PNG, BMP for photos; MP4, AVI, MOV for videos; MP3, WAV for music).
- Ensure a stable WiFi connection between the adapter and your device.
- Verify that the SD card itself is functioning correctly when used directly with a computer.

- **Slow Transfer Speeds:**

- Reduce the distance between the adapter and your connecting device.
- Minimize interference from other wireless devices.
- If multiple devices are connected, try disconnecting some to improve speed for a single transfer.

- **Adapter Not Recognized:**

- Ensure the adapter is fully inserted into the SD card slot.
- Test with a different SD card slot or camera if possible to rule out camera issues.

## SPECIFICATIONS

Feature	Detail
Model Number	Diochel4qjvapdc8
Dimensions	12 x 9 x 1 cm
Weight	28 g
Manufacturer	Dioche
Country of Origin	China
Hardware Interface	802.11 ac/b/g/n
Data Link Protocol	IEEE 802.11n
Compatible Devices	Laptop, Smartphone, Tablet
Minimum OS Version	Mac OS 12 Monterey, Windows 10
Supported Photo Formats	JPG, PNG, BMP
Supported Video Formats	MP4, AVI, MOV
Supported Music Formats	MP3, WAV
Default WiFi Password	88888888



Image: The reverse side of the Dioche WiFi SD Card Adapter, displaying various regulatory compliance markings and model identifiers.

## WARRANTY AND SUPPORT

### Warranty Information

This Dioche WiFi SD Card Adapter comes with a **90-day manufacturer's warranty** from the date of sale. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

### Customer Support

For any technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please

contact your retailer or visit the official Dioche brand store on Amazon for further support options. You can find the brand store at: [Dioche Brand Store](#).

---

© 2024 Dioche. All rights reserved.