

[Manuals.plus](#) /

› [GROWNSY](#) /

› Growsy Baby Food Maker WS00 Instruction Manual

GROWNSY WS00

Growsy Baby Food Maker WS00 Instruction Manual

Model: WS00

INTRODUCTION

The Growsy Baby Food Maker WS00 is designed to simplify the preparation of healthy homemade baby food for infants 6 months and older during the weaning stage. This versatile appliance combines steaming and blending functions in a single unit, reducing the need for multiple kitchen tools. It features a compact design suitable for most kitchens and includes a built-in sterilizer mode for added convenience.

The dual-layer steaming basket allows for cooking more food at once, utilizing true steam cooking to better retain water-soluble vitamins such as B and C, compared to direct boiling. The device offers both automatic and manual mixing modes, providing control over food consistency to suit your baby's developmental needs, from smooth purees to thicker textures. The processor bowl is constructed from high-grade, heat-resistant Tritan material, ensuring it is free from BPA, lead, phthalates, odors, and latex for your baby's safety.

1. SETUP

1.1 Unpacking and Initial Cleaning

Carefully remove all components from the packaging. Before first use, wash all detachable parts that come into contact with food (blending jar, lid, steam basket, blade) with warm soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth.

1.2 Assembly

1. Place the main unit on a stable, flat surface.
2. Insert the blending blade into the blending jar.
3. Place the steam basket into the blending jar.
4. Add food to the steam basket.
5. Secure the lid onto the blending jar, ensuring it is properly aligned and locked into place. The safety lock design requires the lid to be correctly installed for operation.
6. Fill the water reservoir located on the main unit with distilled or purified water. Do not exceed the maximum fill line.



Safety Lock Design

If the latch or cover is not properly installed, an E1 error will appear



Water Shortage Reminder

If the water tank is low, an E2 error will appear

The safety lock design ensures the lid is securely closed before operation. If the latch or cover is not properly installed, an E1 error will appear.

2. OPERATING INSTRUCTIONS

2.1 Steaming Food

1. Prepare ingredients by washing, peeling, and chopping them into small, uniform pieces.
2. Place the chopped ingredients into the dual-layer steam basket.
3. Ensure the water reservoir is filled with water.
4. Press the **Steam** button on the control panel. Use the '+' and '-' buttons to adjust the steaming time according to the food type and desired tenderness. Recommended steaming times are often indicated on the device or in the recipe book.
5. The device will automatically begin steaming. A timer will count down on the display.
6. Once steaming is complete, the device will beep. Carefully remove the lid and steam basket, being mindful of hot steam.

Steam and Blend in One

Quick, Healthy, and Convenient



The Grownsy Baby Food Maker steaming and blending in one device.

2.2 Blending Food

After steaming, you can blend the food to the desired consistency.

1. Transfer the steamed food from the steam basket into the blending jar, ensuring the blade is in place.
2. Secure the lid firmly.
3. Choose your blending mode:
 - **Auto Blend:** Press the **Auto Blend** button for automatic blending cycles. This mode is suitable for achieving smooth purees.
 - **Manual Blend:** Press and hold the **Manual Blend** button for precise control over texture. Release the button when the desired consistency is reached. This allows for creating fine, medium, or coarse textures suitable for different stages of baby-led weaning (e.g., 6-7 months for fine, 7-9 months for medium, 9-12 months for coarse).
4. Once blending is complete, carefully remove the lid and pour the baby food into a serving bowl or storage container.

Manual Stirring for Precise Texture Control

The Smarter Way to Start **Baby-Led Weaning** (Starting Solids & Confident Self-Feeding (6+ Months))



Manual stirring allows for precise texture control, adapting to different stages of baby-led weaning.

2.3 Sterilization Mode

The built-in sterilizer mode helps maintain hygiene for your baby's meals.

1. Ensure the blending jar, steam basket, and lid are clean and assembled on the unit.
2. Fill the water reservoir.
3. Press the **Sterilize** button. The device will initiate a high-temperature steam sterilization cycle.
4. The cycle duration is preset. Once complete, the device will beep. Allow components to cool before handling.

Sterilize on Your Terms, Anytime

For ultimate peace of mind before or after



Before Use
Fresh-Start Sterilization

After Use
Instant Post-Use Sanitizing

After Cleaning
Post-Clean Sanitization

The sterilization mode provides ultimate peace of mind before or after use.

3. MAINTENANCE AND CLEANING

3.1 Daily Cleaning

For thorough cleaning, all detachable parts (blending jar, lid, steam basket, and blade) can be easily removed. Rinse these components under running water immediately after use to prevent food residue from drying. Wash with warm soapy water and rinse thoroughly. The product is **not dishwasher safe**; hand washing is required.



Detachable parts allow for easy and thorough cleaning, leaving no residue.

3.2 Main Unit Cleaning

Wipe the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid. Ensure the unit is unplugged before cleaning.

3.3 Descaling (Recommended Monthly)

Over time, mineral deposits may accumulate in the water reservoir, especially with hard water. To descale, mix 1 part white vinegar with 2 parts water. Pour the solution into the water reservoir and run a steam cycle without food. After the cycle, discard the solution, rinse the reservoir with clean water, and run another steam cycle with clean water to remove any vinegar odor.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on or operate.	Not plugged in; safety lock not engaged.	Ensure the power cord is securely plugged into an outlet. Check that the blending jar lid is properly installed and locked.

Problem	Possible Cause	Solution
Display shows "E1".	Lid or cover not properly installed.	Ensure the blending jar lid is correctly aligned and securely locked into place.
Display shows "E2".	Water shortage in the reservoir.	Refill the water reservoir with distilled or purified water.
Food is not blending smoothly.	Insufficient steaming; too little liquid; too much food.	Ensure food is steamed until very tender. Add a small amount of breast milk, formula, or water. Reduce the amount of food in the blending jar. Use manual blend for more control.
Steam production is low or absent.	Water reservoir empty; mineral buildup.	Refill the water reservoir. Perform descaling as described in the Maintenance section.



Error codes E1 (Safety Lock Design) and E2 (Water Shortage Reminder) are displayed for user awareness.

5. SPECIFICATIONS

- Brand:** GROWNSY
- Model Name:** WS00
- Product Dimensions:** 7.4"D x 10.7"W x 6.4"H
- Color:** Cream
- Wattage:** 300 Watts
- Voltage:** 120 Volts
- Power Source:** Corded Electric
- Material:** Stainless Steel (Blade), Tritan (Bowl)
- Blade Material:** Stainless Steel
- Item Weight:** 4.6 Pounds
- Special Feature:** Safety Lock

Care Instructions: Hand Wash (Not Dishwasher Safe)

6. WARRANTY AND SUPPORT

The Growsy Baby Food Maker WS00 comes with a **1-year warranty**. For any inquiries or assistance, 24/7 customer service and lifetime technical support are available. Please refer to the contact information provided in your product packaging or visit the official Growsy website for support details.

© 2026 GROWNSY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question