

[Manuals.plus](#) /

› [PetJoy](#) /

› PetJoy Dog Bark Collar System (3-Pack) Instruction Manual

PetJoy B0GFL2MGN1

PetJoy Dog Bark Collar System (3-Pack) Instruction Manual

Model: B0GFL2MGN1

1. PRODUCT OVERVIEW

The PetJoy Dog Bark Collar System is designed to assist in dog training and bark control. This system includes a remote control and three receiver collars, offering multiple training modes and an automatic bark detection feature.

The system allows for individual or simultaneous control of up to three dogs, providing flexibility for various training needs. It features adjustable levels for vibration and static stimulation, along with a sound (beep) mode and an automatic bark mode with adjustable sensitivity.

2. PACKAGE CONTENTS

Before beginning, please verify that all components are present in your package:

- 1 x Remote Transmitter
- 3 x Receiver Collars (Pink, Blue, Yellow)
- 3 x Adjustable Collar Straps
- 1 x USB Charging Cable (for remote)
- 3 x USB Charging Cables (for receivers)
- 1 x Test Light Tool
- Contact Points (short and long sets)
- User Manual

Package Included



Image: The complete package contents of the PetJoy Dog Bark Collar System. This includes the pink remote, three colored receiver units (pink, blue, yellow), three matching collar straps, charging cables, a test light, and various contact points for different dog coat lengths.



Video: This video demonstrates the unboxing and shows all items included in the PetJoy Dog Bark Collar System package, ensuring you have everything needed for setup.

Your browser does not support the video tag. This video shows the contents of the PetJoy Dog Bark Collar System package.

3. SETUP

3.1 Charging the Devices

Ensure both the remote transmitter and all receiver collars are fully charged before first use. Use the provided USB cables. The remote has a Micro-USB port, and the receivers have Type-C ports.

- **Remote:** Connect the Micro-USB cable to the remote and a power source. A full charge provides approximately 90 days of work time.
- **Receivers:** Connect the Type-C cable to each receiver and a power source. A full charge provides approximately 30 days of work time.

Long Lasting Battery Life



USB Power Strip



Computer



Power Bank



Power Adapter

Charge Remote and Receiver at the same time



Image: This diagram illustrates how to charge both the remote control and the receiver collars simultaneously using their respective USB ports. It also highlights the expected battery life for each device.

3.2 Attaching the Collar Strap and Contact Points

1. Select the appropriate length of contact points (short for short-haired dogs, long for long-haired dogs) and screw them securely into the receiver collar.
2. Thread the adjustable collar strap through the slots on the receiver unit.
3. Fit the collar snugly around your dog's neck. Ensure the contact points touch the dog's skin. You should be able to fit two fingers comfortably between the collar and your dog's neck. Avoid overtightening.

3.3 Pairing the Remote and Receivers

The system allows for controlling multiple dogs either simultaneously or separately. Follow these steps to pair your collars:

1. Turn on the receiver collar by pressing its power button.
2. On the remote, select the desired channel (1, 2, or 3) for the receiver you are pairing.

3. Press and hold the power button on the receiver collar until its indicator light flashes.
4. While the receiver's light is flashing, press any function key (e.g., Beep, Vibration, or Shock) on the remote. The receiver will beep, indicating successful pairing.
5. Repeat for additional receiver collars, assigning each to a different channel if you wish to control them separately, or to the same channel for simultaneous control.



Image: This image shows three dogs wearing the PetJoy collars, demonstrating the capability to control them either individually or all at once using the remote control, depending on the pairing settings.



Video: This video provides a clear demonstration of how to set up and use the PetJoy system to control multiple dogs, either individually or simultaneously, based on your training requirements.

Your browser does not support the video tag. This video explains how to control multiple dogs using the PetJoy training collars.



Video: This video specifically details the process of setting up and controlling three dogs separately using the PetJoy shock collar system, highlighting the individual channel selection.

Your browser does not support the video tag. This video demonstrates how to control three dogs separately with the PetJoy system.

4. OPERATING THE COLLAR SYSTEM

4.1 Remote Control Functions

The remote control features a display and several buttons for different functions:

- **Power Button:** Turns the remote on/off.
- **Channel (CH) Button:** Switches between dog channels (1, 2, 3) or selects all channels for simultaneous control.
- **Beep Button:** Activates an audible tone on the receiver.
- **Vibration Button:** Activates vibration on the receiver. Intensity is adjustable from 1-100.
- **Shock Button:** Activates static stimulation on the receiver. Intensity is adjustable from 1-100.
- **+/- Buttons:** Adjusts the intensity levels for Vibration and Shock modes.
- **Light Button:** Activates a light on the receiver for visibility in low light conditions.

4.2 Training Stimulation Modes

The PetJoy collar offers four training modes:

- **Beep:** A default audible tone.
- **Vibration:** Adjustable intensity from 1 to 100 levels.
- **Shock:** Adjustable intensity from 1 to 100 levels.
- **Auto Mode:** Automatic bark detection with 5 sensitivity levels.

5 Levels of Auto Mode

Press 3 times in a row to
adjust the Sensitivity Level



Auto Mode
(1~5 Levels)



Beep
Default



Vibration
(1-100 Levels)



Shock
(1-100 Levels)

Image: This graphic illustrates the five sensitivity levels available for the automatic bark mode, alongside the three primary training stimulations: Beep (default), Vibration (1-100 levels), and Static Stimulation (1-100 levels).

7 Activation Sequences for Auto Mode

1: 

2:  +  Level 10

3:  +  Level 40

4:  +  Level 80

5:  +  Level 80 +  Level 10

6:  +  Level 80 +  Level 40

7:  +  Level 80 +  Level 80



Beep
Default



Vibration
(1-100 Levels)



Shock
(1-100 Levels)



Image: This chart outlines seven distinct activation sequences for the automatic bark mode, showing how combinations of Beep, Vibration, and Static Stimulation levels are applied based on the dog's barking behavior.

4.3 Activating and Adjusting Automatic Bark Mode

The automatic bark mode allows the collar to detect and respond to barking without remote intervention. It can be turned on or off via the remote.

1. **To Turn On/Off Auto Mode:** With the collar paired, press and hold the remote's power button for 3 seconds. The receiver will beep once for 'on' or twice for 'off'.
2. **To Adjust Sensitivity (5 Levels):** Press the receiver's power button 3 times in quick succession. Each press will cycle through the 5 sensitivity levels, allowing you to choose the most suitable setting for your dog's barking habits.

Used As Auto Bark Collars

Hear Beep Once: Auto Mode On

Press and Hold the Power Button 3 Seconds to Turn On Auto Mode

Image: A dog wearing the PetJoy collar, illustrating the process of activating the automatic bark mode by pressing and holding the remote's power button for 3 seconds until a single beep is heard.

Work Alone without Remote



Auto Mode
(1~5 Levels)



Beep
Default



Vibration
(1-100 Levels)



Shock
(1-100 Levels)

Turn Auto Mode On
or Off at Any Time



Auto Mode Sensor Hole

Image: This image features a dog wearing the PetJoy collar, highlighting the auto mode sensor hole. It explains that the collar can operate independently in automatic bark mode, utilizing beep, vibration, and static stimulation, without requiring the remote.



Video: This video demonstrates the steps to activate the automatic bark mode and how to adjust its sensitivity levels on the PetJoy collar, ensuring optimal performance for bark control.

Your browser does not support the video tag. This video shows how to turn on the Auto Mode and adjust the Sensitivity Level.

5. MAINTENANCE

5.1 Cleaning

Regularly clean the receiver collar and contact points to ensure proper function and hygiene. Use a damp cloth to wipe down the surfaces. Avoid harsh chemicals.

5.2 Battery Care

To prolong battery life:

- Charge the devices fully before long periods of inactivity.
- Avoid extreme temperatures.
- Do not attempt to replace the internal Lithium Polymer batteries.

5.3 Waterproof Rating

The receiver collars have an IPX7 waterproof rating, meaning they can withstand immersion in water up to 1 meter for 30 minutes. This makes them suitable for use in various weather conditions and allows dogs to play in water without damage to the device. However, it is recommended to dry the collar and your dog's neck after water exposure to prevent skin irritation.

6. TROUBLESHOOTING

If you encounter issues with your PetJoy Dog Bark Collar System, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Collar not responding to remote.	Not paired, low battery, out of range.	Re-pair the collar. Charge both devices. Ensure within 3300 ft range.
Automatic bark mode not working.	Auto mode off, sensitivity too low, improper fit.	Activate auto mode. Increase sensitivity. Adjust collar fit so contact points touch skin.
No static stimulation.	Low battery, contact points not touching skin, shock level too low.	Charge receiver. Adjust collar fit. Increase shock level. Use the test light tool to verify function.
Collar causes skin irritation.	Collar too tight, worn for too long, dirty contact points.	Loosen collar slightly. Do not leave on for more than 12 hours. Clean contact points regularly. Consult a veterinarian if irritation persists.

7. SPECIFICATIONS

- **Model:** B0GFL2MGN1
- **Brand:** PetJoy
- **Control Range:** Up to 3300 feet
- **Receiver Battery:** 1 Lithium Polymer battery (included), 30 days work time per charge
- **Remote Battery:** 1 Lithium Polymer battery (included), 90 days work time per charge
- **Waterproof Rating:** IPX7 (receiver collars)
- **Collar Adjustment:** Fits dog necks 8-27 inches
- **Training Modes:** Beep, Vibration (1-100 levels), Shock (1-100 levels), Auto Bark Mode (5 sensitivity levels)
- **Material:** Plastic, Rubber
- **Package Dimensions:** 7.56 x 6.1 x 2.2 inches
- **Weight:** 1.21 pounds

Product Size



Image: This diagram provides detailed dimensions for both the PetJoy remote control and the receiver collar, including the adjustable range of the collar strap (8-27 inches).

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact PetJoy directly through their official website or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GFL2MGN1>

More documents and user manuals: <https://manuals.plus/>