

Manuals.plus /

- › Festisoul /
- › Festisoul Motorcycle Scissor Jack Lift User Manual - Model B0GFMYTWPD

Festisoul B0GFMYTWPD

Festisoul Motorcycle Scissor Jack Lift User Manual

Model: B0GFMYTWPD - Wide Deck with Wheel Red

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your Festisoul Motorcycle Scissor Jack Lift. This heavy-duty lift is designed to support motorcycles, dirt bikes, cruisers, and ATVs up to 1100 lbs (500 kg) for maintenance and cleaning tasks. It features a wide deck, a 3mm thick reinforced tray, and a center crank stand for stable lifting.



Image 1.1: Festisoul Motorcycle Scissor Jack Lift in use, supporting a motorcycle for maintenance.

2. SAFETY INFORMATION

WARNING: Read and understand all instructions before operating this lift. Failure to follow these instructions may result in serious injury or property damage.

- Always ensure the lift is on a flat, stable, and level surface before use.
- Do not exceed the maximum load capacity of **1100 lbs (500 kg)**.
- Ensure the motorcycle or ATV is centered and stable on the lift platform before raising.
- Never work under a lifted vehicle without additional safety stands or blocks.
- Keep hands and feet clear of moving parts during operation.
- Do not use the lift if any parts are damaged or missing.
- Wear appropriate safety gear, including eye protection.
- Keep children and bystanders away from the work area.

3. PRODUCT COMPONENTS

The Festisoul Motorcycle Scissor Jack Lift includes the following main components:

- Scissor Lift Jack Assembly (Main Unit)
- Removable Metal Crank Handle
- Dolly Tray with Four 360-degree Swivel Casters (pre-attached to the main unit)

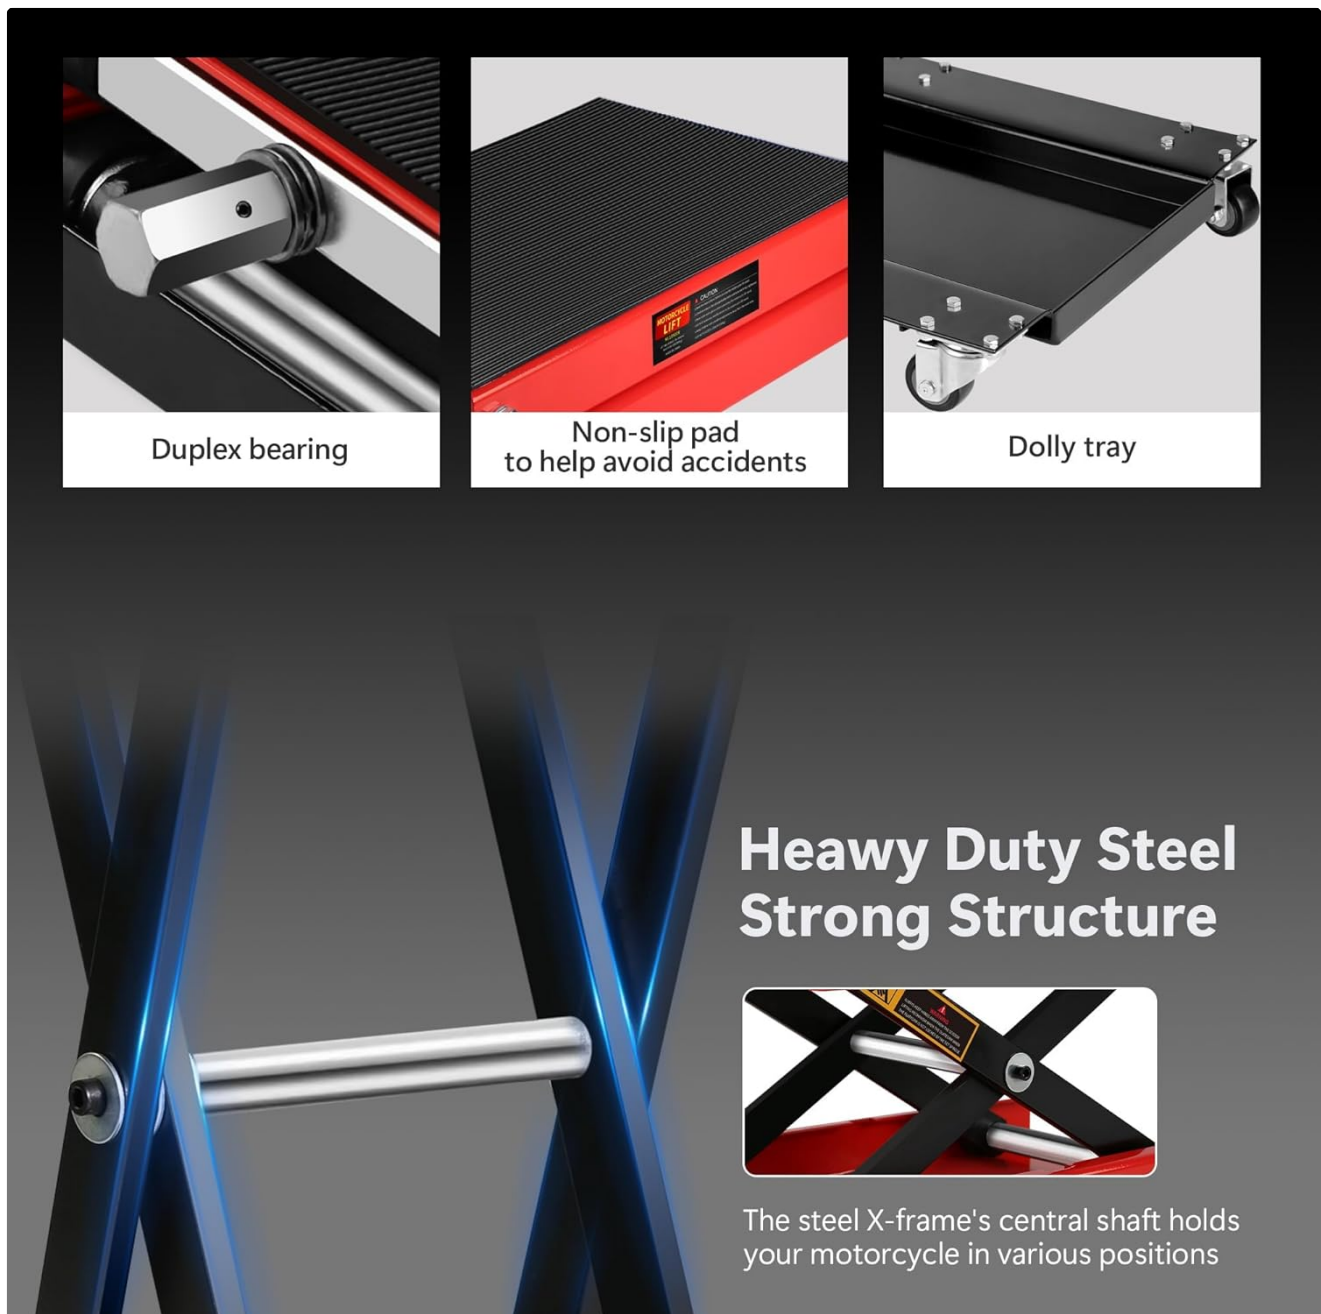


Image 3.1: Detailed view of key components including the duplex bearing, non-slip pad, and dolly tray.

4. SETUP

The Festisoul Motorcycle Scissor Jack Lift comes largely pre-assembled. Follow these steps for initial setup:

1. **Unpack the Lift:** Carefully remove all packaging materials and inspect the lift for any shipping damage.
2. **Attach the Crank Handle:** Locate the removable metal crank handle. Insert the handle into the designated opening on the side of the lift mechanism. Ensure it is securely seated.

PRODUCT INFORMATION



4 x 360° wheel

5.5" Minimum
Lifting Height

15.4" Maximum
Lifting Height



Image 4.1: Illustration of inserting the removable metal crank handle into the lift mechanism.

5. OPERATING INSTRUCTIONS

Follow these steps to safely lift and lower your motorcycle or ATV:

- 1. Position the Lift:** Place the scissor jack lift on a firm, level surface. Roll the lift (using the 360-degree swivel casters) to the desired position directly under the motorcycle's center of gravity. Ensure the non-slip rubber grip pad on the lift platform is clean and free of debris.
- 2. Secure the Vehicle:** Carefully roll or maneuver your motorcycle onto the lift platform. Ensure the vehicle is balanced and stable on the platform. For added security, consider using tie-down straps (not included) to secure the vehicle to the lift.
- 3. Raise the Vehicle:** Insert the crank handle into the lifting mechanism. Rotate the handle clockwise to raise the lift. Continue rotating until the desired height is reached. The lift offers dual-height lifting modes: a higher lift with the dolly for tire work, or a lower profile without the dolly for underbody access.
- 4. Lower the Vehicle:** To lower the vehicle, rotate the crank handle counter-clockwise slowly and steadily. Ensure the area around the lift is clear before lowering.
- 5. Repositioning (with Dolly):** If the dolly tray is attached, the four 360-degree swivel casters allow for effortless

mobility. Once the vehicle is lifted, you can smoothly move and adjust its position in your garage or workspace.



Image 5.1: Step-by-step guide for positioning the jack under the motorcycle's center of gravity and using the T-handle to lift.

Premium Material and Heavy Duty

Powder-coated Finish & Carbon Steel
Anti-corrosion, Rust-proof and Easy to Clean

1100LBS

Max Capacity



ADJUSTABLE HEIGHT



Minimum Lifting Height: **5.5"**



Maximum Lifting Height: **15.4"**

Image 5.2: Comparison of minimum (5.5 inches) and maximum (15.4 inches) lifting heights.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your lift:

- **Cleaning:** Keep the lift clean and free of dirt, grease, and debris. Wipe down the non-slip pad regularly.
- **Lubrication:** Periodically apply a light lubricant to the moving parts of the scissor mechanism and the crank handle shaft to ensure smooth operation.
- **Inspection:** Before each use, inspect the lift for any signs of wear, damage, or loose fasteners. Pay close attention to the steel X-frame, welds, and casters. Do not use if damaged.
- **Storage:** When not in use, store the lift in a dry, clean area. The lift folds flat to a slim 5.5-inch profile for compact storage under a workbench or on a wall.

7. TROUBLESHOOTING

If you encounter issues with your Festisoul Motorcycle Scissor Jack Lift, refer to the following common problems

and solutions:

- **Difficulty Lifting/Lowering:**

Possible Cause: Lack of lubrication on moving parts.

Solution: Apply a light lubricant to the scissor mechanism and crank shaft. Ensure no obstructions are present.

- **Lift Feels Unstable:**

Possible Cause: Uneven surface or improperly centered load.

Solution: Move the lift to a flat, level surface. Re-center the motorcycle on the platform. Ensure all casters are making full contact with the ground.

- **Crank Handle Sticks:**

Possible Cause: Dirt or rust in the mechanism.

Solution: Clean the crank handle and its receiving port. Apply lubricant.

For issues not listed here, please contact customer support.

8. SPECIFICATIONS

Brand	Festisoul
Model	BOGFMYTWPD
Vehicle Service Type	Motorcycle, Dirt Bike, ATV, Cruiser
Load Capacity	1100 Pounds (500 kg)
Minimum Lifting Height	5.5 inches
Maximum Lifting Height	15.4 inches
Item Dimensions (L x W x H)	16.5 x 15 x 15.8 inches
Item Weight	43.06 Pounds
Material	Steel (Powder-coated finish, Carbon Steel)
Included Components	Motorcycle Scissor Lift Jack, Removable Crank Handle

LARGE WEIGHT-BEARING CAPACITY

Removable metal crank handle



Image 8.1: Key dimensions of the Festisoul Motorcycle Scissor Jack Lift.

9. WARRANTY AND SUPPORT

This Festisoul Motorcycle Scissor Jack Lift is covered by a **30-day manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Festisoul customer service through your original point of purchase or visit the official Festisoul website for contact information.