

CUORY CUOMOLED

CUORY 24-inch Full HD 100Hz LED Monitor User Manual

Model: CUOMOLED

1. INTRODUCTION

Thank you for choosing the CUORY 24-inch Full HD 100Hz LED Monitor. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new monitor. Designed for both work and entertainment, this monitor offers a Full HD (1920x1080p) resolution and a 100Hz refresh rate for smooth visuals. Its ultra-slim design and versatile connectivity options (HDMI, VGA) make it a suitable choice for various setups.

2. SAFETY INFORMATION

- Read all instructions carefully before using the monitor.
- Do not expose the monitor to rain or moisture to prevent fire or electric shock.
- Do not open the monitor casing. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.
- Place the monitor on a stable, flat surface to prevent it from falling.
- Ensure proper ventilation around the monitor. Do not block ventilation openings.
- Use only the power adapter supplied with the monitor.
- Unplug the monitor from the power outlet during lightning storms or when unused for long periods.

3. PACKAGE CONTENTS

Please check the box for the following items:

- CUORY 24-inch Full HD 100Hz LED Monitor
- Monitor Stand (Base and Neck)
- Power Adapter
- HDMI Cable
- User Manual (this document)

4. ASSEMBLY AND SETUP

4.1 Attaching the Stand

1. Carefully remove the monitor from its packaging, placing it face down on a soft, clean surface to prevent scratches.
2. Attach the stand neck to the back of the monitor. Ensure it clicks securely into place or is fastened with screws if provided.
3. Attach the stand base to the neck, securing it with the thumb screw or screws provided.



Image: Rear view of the monitor, illustrating the stand attachment area.

4.2 Connecting Cables

Connect the necessary cables to the corresponding ports on the back of the monitor and your computer.

- **Power Cable:** Connect the power adapter to the monitor's power input, then plug the adapter into a power outlet.
- **HDMI Cable:** Connect one end of the HDMI cable to the monitor's HDMI port and the other end to the HDMI port on your computer.

- **VGA Cable:** Alternatively, connect one end of the VGA cable to the monitor's VGA port and the other end to the VGA port on your computer.



Image: Detailed view of the monitor's connectivity ports (HDMI, VGA, Power).

4.3 Initial Power-On

After connecting all cables, press the power button on the monitor to turn it on. The monitor should automatically detect the input signal. If not, you may need to manually select the input source using the OSD menu.



Image: The CUORY 24-inch monitor fully assembled and powered on.

5. OPERATING THE MONITOR

5.1 Power On/Off

The power button is typically located on the back or bottom edge of the monitor. Press it to turn the monitor on or off.

5.2 OSD (On-Screen Display) Menu Navigation

The monitor features control buttons, usually on the back, to access and navigate the OSD menu. These buttons allow you to adjust various display settings.

DISEÑO ULTRALIGERO Y COMPACTO

CUOMO24CUR



CUOMO



Image: Location of the OSD control buttons on the back of the monitor.

5.3 Input Source Selection

Use the OSD menu to select the desired input source (HDMI or VGA) if the monitor does not automatically detect it.

5.4 Adjusting Display Settings

Within the OSD menu, you can adjust settings such as:

- **Brightness/Contrast:** Adjust the overall luminance and difference between light and dark areas.
- **Color Settings:** Modify color temperature, hue, and saturation.
- **Picture Mode:** Select preset modes for different content types (e.g., Standard, Game, Movie).
- **Aspect Ratio:** Choose between 16:9 or other available aspect ratios.

6. MAINTENANCE

6.1 Cleaning the Screen

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

6.2 Cleaning the Body

Wipe the monitor's casing with a soft, dry cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

6.3 General Care

- Avoid placing heavy objects on the monitor or its cables.
- Keep the monitor away from direct sunlight, heat sources, and excessive dust.
- Ensure adequate airflow around the monitor to prevent overheating.

7. TROUBLESHOOTING

If you encounter issues with your monitor, please refer to the following common problems and solutions:

Problem	Possible Solution
No image on screen / Power LED off	Ensure the power cable is securely connected to the monitor and the power outlet. Verify the power outlet is functioning. Press the monitor's power button.
No signal / 'No Input' message	Check if the video cable (HDMI/VGA) is securely connected to both the monitor and your computer. Ensure your computer is powered on and not in sleep mode. Use the OSD menu to manually select the correct input source (HDMI or VGA). Try a different video cable if available.
Image is blurry or distorted	Ensure your computer's display resolution is set to 1920x1080p. Check the video cable for damage or loose connections. Adjust the monitor's OSD settings (e.g., sharpness, phase, clock for VGA).
Refresh rate is not 100Hz (e.g., 75Hz)	Verify your computer's graphics card supports 100Hz at 1920x1080p resolution. Ensure you are using the provided HDMI cable or a high-quality HDMI cable that supports 100Hz. In your operating system's display settings, check and set the refresh rate to 100Hz. (e.g., Windows: Display Settings > Advanced display settings > Display adapter properties > Monitor tab). Update your graphics card drivers.
Monitor stand feels unstable	Ensure all screws for the stand assembly are tightened properly. Place the monitor on a completely flat and stable surface.

8. SPECIFICATIONS

Feature	Specification
Brand	CUORY

Feature	Specification
Model Name	CUOMOLED
Screen Size	24 Inches
Resolution	Full HD (1920 x 1080p)
Refresh Rate	100 Hz
Panel Type	LED
Aspect Ratio	16:9
Response Time	5 Milliseconds
Connectivity	1x HDMI, 1x VGA
Color	Black
Dimensions (D x W x H)	1 x 60.5 x 37 centimeters (approximate, without stand)

Note: While the product is listed as 24 inches, some specifications in the source data indicate 27 inches. This manual refers to the 24-inch model (B0GFP31C93).

9. WARRANTY AND SUPPORT

9.1 Product Warranty

This CUORY monitor comes with a 30-day product warranty from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

9.2 Returns Policy

You may be eligible for a return or replacement within 30 days of purchase, subject to the retailer's return policy.

9.3 Customer Support

For further assistance, technical support, or warranty inquiries, please contact CUORY customer service through the retailer's platform or the official CUORY website. Specific contact details may vary by region.