



[Manuals.plus](#) /

> [Fanbulous](#) /

> Fanbulous 52 Inch Ceiling Fan with Light and Remote (Model XJ52) Instruction Manual

Fanbulous XJ52

Fanbulous 52 Inch Ceiling Fan with Light and Remote (Model XJ52)

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Fanbulous 52-inch ceiling fan, Model XJ52. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Fanbulous XJ52 ceiling fan features a quiet DC motor, reversible airflow for year-round use, integrated lighting, and convenient remote control operation. It is designed for indoor use and compatible with downrod and sloped ceiling mounting.

IMPORTANT SAFETY INFORMATION

- Always disconnect power at the main circuit breaker before installation or servicing.
- All electrical wiring must be performed by a qualified electrician and conform to local codes and regulations.
- Ensure the mounting structure can support the weight of the fan (approximately 18 lbs).
- Do not bend the blade holders during installation or cleaning.
- Maintain a minimum clearance of 7 feet from the floor to the bottom of the fan blades.
- Do not operate the fan if any part is damaged.
- This fan is for indoor use only. It is not suitable for uncovered outdoor areas.

PACKAGE CONTENTS

Verify that all components listed below are present before beginning installation:

- Fan Motor Assembly
- Fan Blades (5)

- Blade Holders
- Light Kit Assembly
- Glass Shade
- Remote Control with Wall Cradle
- Receiver
- Downrods (4-inch and 8-inch)
- Mounting Bracket
- Hardware Pack (screws, washers, wire nuts)
- Canopy and Canopy Cover

SETUP AND INSTALLATION

Follow these steps for proper installation. It is recommended to have two people for installation.

1. Prepare for Installation

1. Turn off power at the circuit breaker and wall switch.
2. Clear the work area and gather necessary tools (screwdriver, wire strippers, ladder).

2. Install Mounting Bracket

1. Secure the mounting bracket to the ceiling junction box using the provided screws and washers. Ensure the bracket is firmly attached and can support the fan's weight.

3. Assemble Downrod and Fan Motor

1. Select the appropriate downrod (4-inch for 8-foot ceilings, 8-inch for 9-foot ceilings).
2. Feed the fan wires through the downrod.
3. Insert the downrod into the fan motor assembly and secure it with the provided pin and screw.



Image: Downrod options for various ceiling heights. The 4-inch downrod results in a 13.7-inch fan height, suitable for 8-foot ceilings. The 8-inch downrod results in a 17.7-inch fan height, suitable for 9-foot ceilings.



Image: Dual-mount options. The fan supports standard downrod mounting and angled mounting for sloped ceilings up to 15 degrees.

4. Wiring Connections

1. Carefully lift the fan assembly and hang it on the mounting bracket hook.
2. Connect the fan wires to the household electrical wires according to the wiring diagram provided in the full instruction manual. Ensure all connections are secure with wire nuts.
3. Install the receiver into the mounting bracket.

5. Install Canopy and Blades

1. Slide the canopy up to the ceiling and secure it to the mounting bracket.
2. Attach each fan blade to its blade holder, then secure the blade holders to the fan motor.

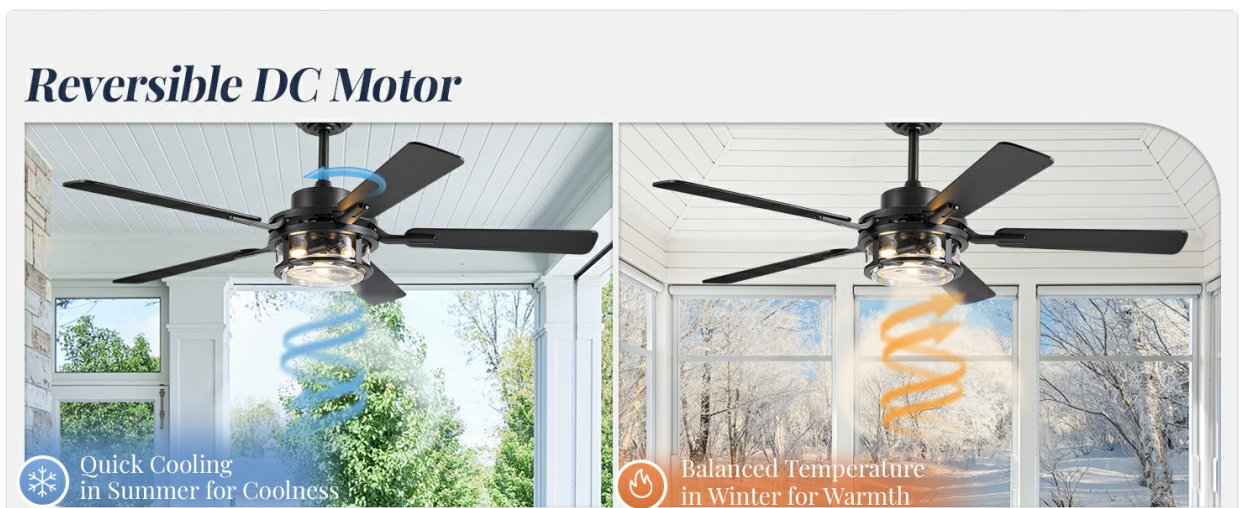


Image: Exploded view of fan components, illustrating the assembly process for quick installation.

6. Install Light Kit and Glass Shade

1. Connect the light kit wires to the fan motor wires.
2. Secure the light kit to the fan motor housing.
3. Install E12 base bulbs (not included) into the sockets.
4. Attach the glass shade to the light kit.

OPERATING INSTRUCTIONS

Your Fanbulous ceiling fan is operated using the included remote control.

Remote Control Functions

Fanbulous

Glass Shade Ceiling Fan with Soft Ambient Lighting



Quiet DC Motor



Hand-Blown Seeded Glass - Elegant Lighting



High Quality Fan Blade



E12 Socket:
Compatible with Various Bulbs
(Bulb Length Within 10 cm)



Image: Remote control layout with functions including All Off, Fan On/Off, Light On/Off, 6 Wind Speeds, Forward/Reversible, and Timer Setting (1/2/4 Hours).

- **All Off:** Turns off both the fan and the light.
- **Fan On/Off:** Toggles the fan motor on or off.
- **Light On/Off:** Toggles the light on or off.

- **Speed Control (1-6):** Adjusts the fan speed from 1 (lowest) to 6 (highest).
- **Forward/Reverse (F/R):** Changes the direction of blade rotation.
- **Timer (1H/2H/4H):** Sets the fan to turn off automatically after 1, 2, or 4 hours.

Reversible Airflow Function

The fan features a reversible DC motor for year-round comfort:

- **Summer Mode (Downward Airflow):** Press the "F" button on the remote. Blades rotate counter-clockwise, creating a downward breeze for cooling.
- **Winter Mode (Upward Airflow):** Press the "R" button on the remote. Blades rotate clockwise, circulating warm air trapped near the ceiling downwards.

Fanbulous

Reversible DC Motor

 Summer-Forward Rotation



Image: Reversible DC Motor function. Summer mode pushes air down for cooling, while winter mode circulates warm air upwards.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents. For the glass shade, remove it carefully and wash with mild soap and water, then dry thoroughly before reattaching.

- **Blade Screws:** Periodically check all blade screws for tightness. Loose screws can cause wobbling or noise.
- **Light Bulbs:** The fan uses E12 base bulbs (not included). Ensure power is off before replacing bulbs. Do not exceed the maximum wattage specified in the specifications.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wire connections; remote control not paired or battery dead.	Check circuit breaker and wall switch. Ensure all wire connections are secure. Replace remote battery or re-pair remote (refer to full manual for pairing instructions).
Light does not work	Bulb faulty or loose; loose wire connection; remote control issue.	Replace bulb. Check light kit wiring. Ensure remote battery is functional.
Fan wobbles	Loose blade screws; unbalanced blades; loose mounting bracket.	Tighten all blade screws. Check for bent blade holders. Ensure mounting bracket is securely fastened. Use a balancing kit if necessary.
Noisy operation	Loose screws; motor issue; blades hitting an obstruction.	Check and tighten all screws. Ensure no wires are rubbing against the canopy. Verify blades are not hitting anything.

SPECIFICATIONS

Brand	Fanbulous
Model Name	XJ52
Product Dimensions (D x W x H)	52"D x 52"W x 10"H
Electric Fan Design	Ceiling Fan
Power Source	DC
Motor Type	Brushless DC
Number of Speeds	6
Noise Level	35 Decibels
Wattage	75 watts
Voltage	120 Volts
Number of Blades	5
Mounting Type	Downrod Mount
Downrod Lengths Included	4 Inches, 8 Inches
Room Type	Bedroom, Indoor, Living Room

Special Features	6 Speed Adjustable, DC Motor, Remote Controlled, Reversible Airflow
Controller Type	Remote Control
Indoor/Outdoor Usage	Indoor
Material	Metal

WARRANTY AND SUPPORT

Your Fanbulous XJ52 ceiling fan is covered by a **2-Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions regarding your product, please contact Fanbulous customer service. Our dedicated team is available 24/7 to provide professional support and ensure your satisfaction.

Please refer to your purchase documentation for specific contact details or visit the official Fanbulous website.