

[Manuals.plus](#) /

> [Zasidler](#) /

> Zasidler Handheld Sewing Machine with 109-Piece Sewing Kit - Instruction Manual

## Zasidler Handheld Sewing Machine

# Zasidler Handheld Sewing Machine with 109-Piece Sewing Kit

Model: Handheld Sewing Machine

Brand: Zasidler

### INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Zasidler Handheld Sewing Machine. Please read this manual thoroughly before first use and keep it for future reference. This mini portable handheld sewing machine is designed for sewing enthusiasts of all skill levels, offering convenience for quick repairs and DIY projects on various fabrics.



Image: User operating the handheld sewing machine with the complete sewing kit.

### PACKAGE CONTENTS

Your Zsidler Handheld Sewing Machine comes with a comprehensive 109-piece sewing kit, ensuring you have all the necessary tools for your projects. The package includes:

- 1 exquisite storage case
- 1 handheld sewing machine
- 1 fabric scissors
- 1 yarn thread cutter
- 1 sewing seam ripper
- 22 rolls of polyester sewing threads
- 12 metal bobbins with sewing threads
- 30 assorted hand sewing needles
- 26 buttons
- 10 safety pins
- 2 sewing thimbles
- 1 needle threader
- 1 soft tape measure

## HANDHELD SEWING MACHINE WITH BLACK STORAGE CASE AND 109 - PIECE SEWING KIT



Image: All components of the 109-piece sewing kit laid out, featuring the handheld sewing machine and storage case.

## PRODUCT FEATURES AND ADVANTAGES

The Zasidler Handheld Sewing Machine offers several advantages for convenient and efficient sewing:

- **Upgraded Technology:** Provides greater power, quieter operation, and tighter stitching compared to traditional desktop machines.
- **Versatile and Space-Saving:** Its compact design makes it ideal for small spaces and travel.
- **Ease of Use:** Simple handling suitable for adults, kids, beginners, and professionals.
- **Wide Fabric Compatibility:** Works on a variety of fabrics for mending clothes, jeans, shopping bags, pet clothing, and DIY crafts.

## EASY TO USE

This handheld sewing machine features upgraded technology for greater power, quieter operation, tighter stitching, and simple handling. It is versatile and space-saving, making it more convenient, economical, and time-efficient compared to traditional desktop sewing machines.



Image: The handheld sewing machine positioned on a table with sewing patterns, highlighting its compact and user-friendly design.

## SETUP

### Power Supply Methods

Your handheld sewing machine supports two power supply methods:

1. **4 AA Batteries:** Insert four AA batteries (not included) into the battery compartment located at the rear of the machine. Ensure correct polarity.
2. **6V Power Adapter:** Connect a 6V power adapter (not included) to the DC input jack on the machine.



Image: Detailed diagram illustrating the components of the handheld sewing machine, including the battery bay and USB power socket.

## Threading the Machine

Proper threading is crucial for smooth operation. Follow these steps:

1. Ensure the needle is in the highest position by rotating the hand wheel.
2. Place the thread spool onto the spool pin.
3. Guide the thread through the first thread guide (tension control).
4. Continue guiding the thread through the wire hole and then through the second thread guide.
5. Use the needle threader to pass the thread through the eye of the needle from back to front.
6. Pull about 15 cm (6 inches) of thread through the needle.

Your browser does not support the video tag.

Video: Tutorial demonstrating the correct method to thread the handheld sewing machine for optimal performance.

## OPERATING INSTRUCTIONS

### Preparing to Sew

1. Lift the presser foot using the lever.
2. Place the fabric to be sewn underneath the presser foot, ensuring it is positioned between the upper and bobbin threads.
3. Lower the presser foot lever to hold the fabric in place.

### Starting to Sew

1. Press the power switch to turn on the machine.
2. Select your desired sewing speed (Fast or Slow) using the speed control buttons.
3. Gently guide the fabric with your left hand, controlling its direction. The machine will automatically feed the fabric.



Image: Step-by-step demonstration of repairing a torn pants pocket with the handheld sewing machine.

Your browser does not support the video tag.

Video: Demonstration of the handheld sewing machine in action, sewing fabric for a quick repair.

## Finishing a Stitch

To secure your stitch and prevent unraveling:

1. After completing your sewing, lift the presser foot and gently pull the fabric away from the machine.
2. Use the built-in thread cutter or the provided fabric scissors to cut the thread, leaving a tail of about 5 inches.
3. Tie a knot at the end of the stitch to secure it.



Image: Visual tutorial demonstrating the proper method for tying a secure knot after completing a stitch.

## MAINTENANCE

- Keep the machine clean by wiping it with a soft, dry cloth after each use.
- Store the machine and accessories in the provided storage case to protect them from dust and damage.
- Regularly check the needle for bends or dullness and replace if necessary using the assorted needles provided.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine not turning on	Low batteries or power adapter issue	Replace batteries or check power adapter connection. Ensure power switch is in the correct position.
Skipped stitches	Incorrect threading or bent needle	Re-thread the machine carefully following instructions. Replace the needle if bent.

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Thread breaks easily	Thread tension too tight or poor quality thread	Adjust the tension control dial to a looser setting. Use good quality polyester thread.
Fabric not feeding smoothly	Presser foot not lowered or fabric too thick	Ensure the presser foot is down. Avoid sewing excessively thick fabrics.

## **SPECIFICATIONS**

---

- **Product Dimensions:** 5.9 x 9.8 x 4.3 inches
- **Item Weight:** 2 pounds
- **Material:** EVA
- **Power Supply:** 4 AA batteries (not included) or 6V power adapter (not included)
- **Model Number:** Handheld Sewing Machine
- **UPC:** 790807214150

## **SAFETY INFORMATION**

---

- Keep fingers away from the needle area during operation.
- Do not allow children to operate the machine unsupervised.
- Unplug the power adapter or remove batteries when not in use or during maintenance.
- Do not use the machine if any parts are damaged.

## **WARRANTY AND SUPPORT**

---

For warranty information or technical support, please refer to the product packaging or contact Zaidler customer service directly. Keep your purchase receipt for any warranty claims.