

[Manuals.plus](#) /

› [Skagen](#) /

› Skagen Mellem SKW6949 Digital Watch User Manual

Skagen SKW6949

Skagen Mellem Digital Watch User Manual

MODEL: SKW6949

INTRODUCTION

Thank you for choosing the Skagen Mellem Digital Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. This digital watch combines modern functionality with a distinctive design, featuring a sleek cushion-shaped case and a refined finish. Its clear digital display offers a minimalist aesthetic, making it a versatile accessory for various occasions.

Please read this manual thoroughly to ensure optimal performance and longevity of your watch.





Front view of the Skagen Mellem Digital Watch, displaying the time on its digital screen and the gold-tone stainless steel bracelet.

SETUP

1. Unpacking and Initial Inspection

Carefully remove your watch from its packaging. Inspect the watch for any visible damage. Remove any protective films from the watch face and case back.

2. Adjusting the Watch Band

The stainless steel bracelet is designed to be adjustable by removing links to achieve a customized fit. It is recommended to have this procedure performed by a professional jeweler or watch repair service to prevent damage to the band or clasp mechanism.



Angled front view of the watch with its deployment clasp open, illustrating the band's structure for adjustment.

3. Setting the Time and Date

Your Skagen Mellem Digital Watch features two control buttons on the side of the case for setting the time and accessing various functions. While specific button functions may vary slightly, the general procedure is as follows:

1. **Mode Button:** Typically, one button (often the lower one) cycles through different display modes (e.g., Time, Date, Alarm, Stopwatch). Press this button repeatedly until the desired setting mode (e.g., time setting) is active.
2. **Set/Adjust Button:** The other button (often the upper one) is used to adjust the flashing digits or values within a selected mode. Press this button to increment the hour, minute, day, or month.
3. Once the desired time/date is set, press the Mode button again to exit the setting mode and return to the normal time display.





Side view of the watch, highlighting the two control buttons used for setting and mode selection.

OPERATING INSTRUCTIONS

Basic Display

The watch's digital display shows the current time. Depending on the model, it may also show the date, day of the week, or other information. Press the Mode button (refer to Setup section) to cycle through available display options.

Water Resistance

Your Skagen Mellem Digital Watch is water resistant up to 30 meters (3 ATM). This means it will withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid pressing buttons while the watch is wet or submerged to prevent water ingress.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and band regularly with a soft, dry cloth. For stainless steel bands, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the finish.

Battery Replacement

The watch is powered by a battery. When the display becomes dim or stops functioning, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure the watch's water resistance is maintained and to prevent damage to the internal components.

Water Resistance Care

To preserve the water resistance of your watch, ensure the crown (if applicable) is pushed in completely. Avoid exposing the watch to extreme temperature changes, as this can affect the seals. If the watch is exposed to saltwater, rinse it gently with fresh water and dry it thoroughly.





Rear view of the watch, displaying the case back and its engravings, including water resistance information.

TROUBLESHOOTING

Display is Blank or Dim

- **Low Battery:** The battery may be depleted. Refer to the 'Battery Replacement' section under Maintenance.
- **Extreme Temperatures:** Digital displays can be affected by very cold or very hot temperatures. Allow the watch to return to a normal operating temperature.

Incorrect Time Display

- **Time Not Set:** Re-set the time according to the 'Setting the Time and Date' instructions in the Setup section.
- **Accidental Button Press:** Ensure buttons are not being pressed inadvertently, which could change settings.

Watch Not Functioning

- If the watch is not functioning after checking the battery and attempting to reset the time, it may require professional inspection. Do not attempt to open the watch case yourself.

SPECIFICATIONS

Feature	Specification
Model Name	SKW6949
Case Diameter	38 Millimeters
Case Thickness	9 Millimeters
Band Width	20 Millimeters
Band Length	200 Millimeters
Band Material Type	Stainless Steel
Case Material Type	Stainless Steel
Crystal	Mineral
Display Type	Digital
Watch Movement Type	Digital
Water Resistance Depth	30 Meters (3 ATM)
Clasp Type	Deployment Clasp
Power Source	Battery Powered
Additional Features	Arabic Numerals, Scratch-Resistant

WARRANTY INFORMATION

Your Skagen Mellem Digital Watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Skagen website for detailed information regarding warranty terms, conditions, and duration. The warranty typically covers manufacturing defects but does not cover damage resulting from improper use, accidents, or unauthorized repairs.

SUPPORT

For further assistance, technical support, or service inquiries regarding your Skagen Mellem Digital Watch, please contact Skagen customer service. You can find contact information on the official Skagen website or through the documentation provided with your watch.

Online Support: Visit the official Skagen website for FAQs, product registration, and service center locations.

Contact: Refer to your product packaging or the Skagen website for customer service phone numbers and email addresses.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question