

Havells Glo TC22

Havells 2200 Watt Infrared Induction Cooktop

Model: Glo TC22

INTRODUCTION

This instruction manual provides comprehensive guidance for the safe and efficient operation, maintenance, and troubleshooting of your Havells 2200 Watt Infrared Induction Cooktop, Model Glo TC22. Please read this manual thoroughly before using the appliance and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To prevent injury or damage, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This cooktop features built-in 6KV surge protection. While this protects against voltage spikes, it is still advisable to use a stable power source.

6 kV Surge Protection

Built-in protection against voltage spikes for safer performance



Figure 1: Illustration of the 6KV Surge Protection feature, indicating enhanced safety against voltage fluctuations.

PRODUCT FEATURES

The Havells Glo TC22 Infrared Induction Cooktop is designed with advanced features for efficient and convenient cooking:

- **High-Efficiency 2200W Heating:** Equipped with a powerful copper coil for rapid and uniform heating, ensuring faster cooking and energy efficiency.
- **Built-In 6KV Surge Protection:** An intelligent module protects the appliance from sudden voltage spikes, enhancing durability and stable performance.
- **SS304 Food-Grade Grill Accessory:** Includes a premium stainless steel grill, ideal for toasting, roasting, and grilling, ensuring hygiene and flavor retention.
- **Touch Control Panel with Digital Display:** Features a sleek, touch-sensitive interface and a bright LED display for real-time temperature, timer, and power level visibility.
- **Variable Power & Temperature Control:** Allows precise adjustment of heat output for various cooking needs, from gentle simmering to high-intensity frying.

- **Universal Utensil Compatibility:** Unlike traditional induction cooktops, this infrared model is compatible with a wide range of cookware materials, including stainless steel, ceramic, aluminum, copper, and cast iron.

2200W Infrared Cooktop With Digital Display

Fast heating with clear digital
controls for precise cooking



Figure 2: The Havells Infrared Cooktop in operation, showcasing its 2200W heating capability and digital display for precise control.

Sleek & Modern Design

Compatible with a wide range of cookware materials



Figure 3: Demonstrating the cooktop's compatibility with diverse cookware materials and the included grill accessory.

Grill Indoors, Anytime

Perfect for barbecues with included SS304 food-grade grill rack



SS304



Figure 4: The SS304 food-grade grill accessory positioned on the cooktop, highlighting its use for indoor grilling.

SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the cooktop and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the cooktop on a flat, stable, heat-resistant surface. Ensure there is adequate ventilation around the appliance (at least 10-15 cm clearance from walls or other objects). Do not place it near water sources or flammable materials.
3. **Power Connection:** Ensure the voltage of your power supply matches the rating label on the cooktop (220 Volts). Plug the power cord into a grounded electrical outlet. Avoid using extension cords if possible; if necessary, use a heavy-duty extension cord rated for the appliance's wattage.
4. **Initial Cleaning:** Before first use, wipe the glass surface and the grill accessory with a damp cloth. Ensure all parts are dry before plugging in.

OPERATING INSTRUCTIONS

-
1. **Power On:** Place appropriate cookware on the center of the cooktop. Plug the appliance into a power outlet. The digital display will illuminate, indicating standby mode.
 2. **Select Cooking Mode:** Press the "On/Off" button (usually a touch control) to activate the cooktop. Use the touch controls to select your desired cooking mode or function (e.g., Fry, Boil, Keep Warm).
 3. **Adjust Power/Temperature:** Use the rotary knob or dedicated touch buttons to adjust the power level (wattage) or temperature setting. The digital display will show the current setting.
 4. **Set Timer (if available):** If your selected mode allows, use the timer function to set a cooking duration. The cooktop will automatically switch off once the timer expires.
 5. **Cooking:** Monitor your food as it cooks. The infrared heating element provides consistent heat.
 6. **Power Off:** After cooking, press the "On/Off" button to turn off the cooktop. Unplug the appliance from the wall outlet once cooking is complete and the surface has cooled.

Using the SS304 Food-Grade Grill Accessory

- Place the grill accessory directly on the cooktop surface.
- Ensure the grill is stable and centered over the heating area.
- Place food directly on the grill or in appropriate grill-safe cookware.
- Adjust power/temperature as needed for grilling. Always use caution as the grill and cooktop surface will become very hot.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

1. **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
2. **Cooktop Surface:** Wipe the glass surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cooktops. Do not use abrasive pads, scouring powders, or harsh chemicals.
3. **Control Panel:** Gently wipe the touch control panel with a soft, damp cloth. Ensure no liquid enters the control area.
4. **Grill Accessory:** The SS304 grill accessory can be washed with warm soapy water. For baked-on food, soak it before cleaning. Ensure it is thoroughly dry before storage.
5. **Exterior:** Wipe the exterior body with a damp cloth. Do not immerse the cooktop in water or any other liquid.
6. **Storage:** When not in use for extended periods, clean the cooktop and store it in a dry, safe place, away from direct sunlight and moisture.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Cooktop does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power supply; try a different outlet.
"E3" error displayed.	Internal circuit board issue or voltage fluctuation.	Unplug the cooktop for a few minutes, then plug it back in. If the error persists, contact customer support.
Heating is inconsistent or weak.	Incorrect power setting; cookware not centered; ventilation blocked.	Adjust power level; ensure cookware is centered; check for proper ventilation.

Problem	Possible Cause	Solution
Cooktop makes unusual noises.	Normal fan operation; loose internal component.	A low humming sound from the cooling fan is normal. If the noise is loud or unusual, discontinue use and contact support.

SPECIFICATIONS

Model Number	Glo TC22
Brand	Havells
Wattage	2200 Watts
Voltage	220 Volts
Heating Element	Coil (Infrared)
Controls Type	Sensor Touch with Rotary Knob
Material	Glass
Color	Black-Steal
Dimensions (D x W x H)	6D x 30W x 37H Centimeters
Item Weight	2900 Grams
Special Features	Universal Utensil Compatibility, 6KV Surge Protection, Digital Display, SS304 Food-Grade Grill
Included Components	1 Induction Cooktop

WARRANTY INFORMATION

This Havells Glo TC22 Infrared Induction Cooktop comes with a **1-year warranty on the product** from the date of purchase. Please retain your purchase receipt as proof of warranty. The warranty covers manufacturing defects under normal use conditions. It does not cover damage caused by misuse, accident, unauthorized repair, or normal wear and tear. For warranty claims or service, please contact Havells customer care.

CUSTOMER SUPPORT

For any queries, assistance, or service requests regarding your Havells Infrared Induction Cooktop, please contact our customer care team:

Phone: 08045771313

Manufacturer: Havells India Limited

For more information, visit the official [Havells Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question