



[Manuals.plus](#) /

> [Outsunny](#) /

> Outsunny 10' x 12' Outdoor Patio Gazebo (Model 84C-792V01KK) Instruction Manual

Outsunny 84C-792V01KK

Outsunny 10' x 12' Outdoor Patio Gazebo Instruction Manual

Model: 84C-792V01KK

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions and warnings before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- **Assembly:** This gazebo requires at least two adults for safe assembly. Do not attempt to assemble alone.
- **Anchoring:** Always secure the gazebo to the ground using the provided ground stakes or expansion screws. Ensure it is firmly anchored to prevent wind damage.
- **Weather Conditions:** This gazebo is designed for sun protection and light weather conditions. It is **not water resistant** and should not be used during heavy rain, strong winds, or snow. Disassemble or secure the canopy during adverse weather to prevent damage.
- **Fire Safety:** Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- **Maintenance:** Regularly inspect all components for wear and tear. Replace damaged parts immediately.
- **Location:** Choose a level surface for installation, clear of overhead obstructions and power lines.

PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Steel Frame Components (legs, beams, connectors)
- Double-tier Polyester Roof Canopy (UPF30+)
- Curtains (Khaki color)
- Mesh Netting
- Ground Stakes
- Expansion Screws
- Assembly Hardware (bolts, nuts, washers, tools if included)



Image: The Outsunny 10' x 12' Gazebo fully assembled in a backyard setting, providing shade for a group of people.

SETUP INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have at least two people for assembly.

1. **Unpack and Identify Parts:** Lay out all components and compare them with the parts list in your package. Ensure all pieces are present and undamaged.
2. **Assemble the Base Frame:** Connect the horizontal base beams to the vertical support columns. Ensure all connections are secure.
3. **Attach Upper Frame Components:** Assemble the upper frame structure that will support the roof canopy.
4. **Install the Roof Canopy:** Carefully place the double-tier polyester roof canopy over the upper frame. Secure it according to the instructions provided in your package. Ensure the drainage holes are positioned correctly.
5. **Attach Curtains and Netting:** Hang the curtains and mesh netting onto the designated tracks or hooks on the

frame.

6. Anchor the Gazebo:

- For soft surfaces (e.g., grass, soil): Use the provided ground stakes to firmly secure each leg to the ground.
- For hard surfaces (e.g., concrete, deck): Use the provided expansion screws to secure each leg to the surface.

7. Final Inspection: Double-check all connections, ensuring they are tight and secure. Verify the gazebo is stable and level.



Image: Detail showing the steel frame with triangle supports, and options for securing the gazebo to the ground using ground stakes for soft surfaces or expansion screws for hard surfaces.



Image: A diagram illustrating the overall dimensions of the gazebo: 149.6" L x 118.1" W x 106.3" H, with column spacing of 131.1" L x 99.6" W and an eave height of 75.6".

OPERATING INSTRUCTIONS

This section details how to utilize the features of your Outsunny gazebo.

Double-Roof Design

The double-tier roof design promotes airflow, which helps reduce heat buildup underneath the canopy. The integrated netting within the roof helps prevent insects from entering while maintaining ventilation.

TWO-TIER ROOF DESIGN



For better airflow



Reduce heat



Mesh to keep
unwanted guests out



Image: A graphic highlighting the two-tier roof design, emphasizing its benefits for better airflow, heat reduction, and mesh to keep unwanted guests out.

Curtains and Mesh Netting

The gazebo includes both curtains and mesh netting. The mesh netting can be used to keep insects out while allowing fresh air to circulate. The curtains provide additional privacy and shade. They can be tied back to the posts or fully closed to create an enclosed space.

MESH NETTINGS

Keep unwanted guests out, let fresh air in



Image: A close-up view of the mesh netting, with an inset graphic of a mosquito, illustrating its function to keep insects out while allowing air circulation.



REMOVABLE CURTAINS

Full shade, complete privacy

Image: A person enjoying a private moment inside the gazebo with the removable curtains fully closed, providing shade and privacy.

Ceiling Hooks

Two ceiling hooks are provided for hanging lightweight items such as decorative lights, small fans, or other decorations. Do not exceed the weight limit specified in your package for these hooks.



TOP HOOKS

Can hang lights, fans,
or heaters for various scenarios

Image: The interior of the gazebo at night, showing decorative lights hanging from the practical ceiling hooks, creating an illuminated outdoor space.

MAINTENANCE

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Wipe the steel frame with a damp cloth. Inspect for rust or damage, especially at connection points.
- **Seasonal Storage:** For prolonged lifespan, disassemble and store the gazebo in a dry, protected area during off-seasons or when not in use for extended periods.
- **Drainage Holes:** The roof canopy features drainage holes to prevent water pooling. Ensure these remain clear of debris.



DRAINAGE HOLES

Prevent rainwater pooling for less maintenance

Image: A close-up of the gazebo roof during rainfall, highlighting a drainage hole designed to prevent water pooling and reduce maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Not properly anchored; loose connections.	Ensure all ground stakes or expansion screws are firmly in place. Tighten all bolts and connections. Verify installation on a level surface.
Water pooling on the roof.	Drainage holes blocked; improper canopy installation.	Clear any debris from the drainage holes. Re-adjust the canopy to ensure it is taut and correctly positioned to allow water runoff.

Problem	Possible Cause	Solution
Curtains/Netting do not close properly.	Obstruction in tracks; fabric snagged.	Check tracks for debris or damage. Ensure fabric is not snagged or twisted.

SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	84C-792V01KK
Overall Dimensions (L x W x H)	149.6" x 118.1" x 106.3"
Column Spacing (L x W)	131.1" x 99.6"
Eave Height	75.6"
Frame Material	Alloy Steel (Powder-coated)
Canopy Material	Polyester
UV Protection	UPF 30
Water Resistance Level	Not Water Resistant
Item Weight	101 Pounds
Assembly Required	Yes

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video from Aosom Direct showcasing the Outsunny 84C-792V01KK Gazebo, demonstrating its features and use in an outdoor setting.

WARRANTY AND SUPPORT

This Outsunny gazebo comes with a **1 Year Warranty Against Manufacturer Defects**. For warranty claims, missing parts, or technical support, please contact Aosom LLC customer service. Refer to your purchase documentation for specific contact details.

Manufacturer: Aosom LLC



