

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 10' x 12' Outdoor Patio Gazebo (Model 84C-792V01CG) User Manual

Outsunny 84C-792V01CG

Outsunny 10' x 12' Outdoor Patio Gazebo User Manual

Model: 84C-792V01CG

1. INTRODUCTION

Thank you for choosing the Outsunny 10' x 12' Outdoor Patio Gazebo. This manual provides essential information for the safe assembly, operation, and maintenance of your new gazebo. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1.1: The Outsunny 10' x 12' Outdoor Patio Gazebo, Dark Gray, providing a comfortable outdoor living space.

Your browser does not support the video tag.

Video 1.1: An overview of the Outsunny 84C-792V01CG Gazebo, showcasing its features and use in an outdoor setting.

2. SAFETY GUIDELINES

Always follow these safety precautions to prevent injury or damage to the product:

- Ensure all parts are present and undamaged before assembly. Do not attempt to assemble with missing or damaged parts.
- Assembly typically requires two or more adults.
- Secure the gazebo to the ground using the provided stakes for soft surfaces or expansion screws for hard surfaces to prevent wind damage.
- Do not use open flames or heating appliances directly under the gazebo canopy.
- In case of strong winds, heavy rain, or snow, remove the canopy and curtains to prevent damage to the structure.

- Regularly check all connections and fasteners to ensure they remain tight and secure.

3. PACKAGE CONTENTS

Verify that all components are included in your package. Refer to the separate assembly diagram for a detailed list of parts and hardware.

- Steel Frame Components (legs, beams, roof supports)
- Double-tier Polyester Roof Canopy (UPF30+)
- Removable Curtains
- Breathable Mesh Netting
- Ground Stakes
- Expansion Screws
- Assembly Hardware (bolts, nuts, washers, clips)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Detailed step-by-step assembly instructions with diagrams are included in your product packaging. Please follow them carefully. Below are general tips:

1. **Preparation:** Clear a flat, level area for assembly. Ensure you have enough space to maneuver the components. It is recommended to have at least two people for assembly.
2. **Frame Assembly:** Begin by assembling the main steel frame according to the provided diagrams. Ensure all connections are finger-tight before fully tightening.
3. **Roof Installation:** Carefully install the double-tier roof canopy. Pay attention to the orientation of the upper and lower tiers for proper ventilation and drainage.
4. **Curtains and Netting:** Attach the removable curtains and mesh netting to the frame. Ensure zippers and attachment points are correctly aligned.
5. **Securing the Gazebo:** Once fully assembled, secure the gazebo to the ground. Use ground stakes for grass or soft soil, and expansion screws for concrete or hard surfaces. This is crucial for stability, especially in windy conditions.



Image 4.1: Illustration of the stable steel frame with triangle supports, demonstrating the use of ground stakes for soft surfaces and expansion screws for hard surfaces to ensure stability.

5. USAGE AND FEATURES

Your Outsunny gazebo is designed for comfort and versatility:

- **Double-Roof Design:** The two-tier roof promotes airflow, reducing heat buildup and providing superior ventilation. The built-in netting helps keep unwanted guests out.
- **Curtains and Mesh Netting:** The gazebo features both curtains and breathable mesh netting. Use the mesh to allow fresh air while keeping insects out. Fully close the curtains for privacy or additional shade.
- **Ceiling Hooks:** Two integrated ceiling hooks allow you to hang lights, fans, or decorative items, enhancing your outdoor experience.
- **Drainage Holes:** The roof is equipped with drainage holes to prevent water pooling, which helps maintain the canopy's integrity and reduces maintenance.

TWO-TIER ROOF DESIGN



For better airflow



Reduce heat



**Mesh to keep
unwanted guests out**



Image 5.1: Close-up of the gazebo's two-tier roof design, highlighting its function for improved airflow, heat reduction, and insect protection.

MESH NETTINGS

Keep unwanted guests out, let fresh air in



Image 5.2: A person relaxing inside the gazebo, demonstrating how the mesh nettings effectively keep insects out while allowing fresh air to circulate.



TOP HOOKS

Can hang lights, fans,
or heaters for various scenarios

Image 5.3: The gazebo interior at night, showing lights hung from the top hooks, illustrating their use for various scenarios.



Image 5.4: A close-up of the gazebo roof during rain, highlighting the drainage holes designed to prevent water accumulation.

6. CARE AND MAINTENANCE

Proper care will extend the life of your gazebo:

- **Cleaning:** Clean the fabric canopy, curtains, and mesh netting with mild soap and water. Rinse thoroughly and allow to air dry completely before storage or re-use. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** Wipe the steel frame with a damp cloth. Inspect the powder coating regularly for any chips or scratches and touch up as needed to prevent rust.
- **Seasonal Storage:** While the gazebo is designed for outdoor use, it is recommended to remove the canopy, curtains, and netting during severe weather conditions (heavy snow, strong winds, prolonged heavy rain) or for long-term storage to prevent damage.
- **Fastener Check:** Periodically check all bolts, screws, and connections to ensure they are tight. Loose fasteners can compromise the gazebo's stability.

7. TROUBLESHOOTING

Here are solutions to common issues:

- **Water Pooling on Roof:** Ensure the canopy is installed correctly and taut. The drainage holes are designed to prevent pooling, but excessive slack can still cause water to collect. Clear any debris from the roof that might obstruct drainage.
- **Gazebo Instability:** Verify that the gazebo is properly anchored to the ground using all provided stakes or expansion screws. Ensure all frame connections are securely tightened. Consider additional anchoring in very windy areas.
- **Curtains/Netting Not Closing Properly:** Check for any obstructions in the tracks or zippers. Ensure the fabric is not twisted or caught. Lubricate zippers if they are stiff.
- **Missing or Damaged Parts:** If you discover missing or damaged parts during assembly, do not proceed. Contact customer support immediately for assistance.

8. PRODUCT SPECIFICATIONS

Brand	Outsunny
Model Number	84C-792V01CG
Product Dimensions	149.6" L x 118.1" W x 106.3" H
Floor Area	123 square feet
Material	Alloy Steel, Polyester
Frame Material	Alloy Steel
Item Weight	101 pounds
Color	Dark Gray
Ultraviolet Light Protection	UPF 30
Water Resistance Level	Not Water Resistant



Image 8.1: Detailed dimensions of the Outsunny gazebo, including overall length, width, height, eave height, and column spacing.

9. WARRANTY AND CUSTOMER SUPPORT

Warranty Information: This Outsunny gazebo comes with a 1-Year Warranty Against Manufacturer Defects. Please retain your proof of purchase for warranty claims.

Customer Support: For any questions, missing parts, or warranty inquiries, please contact the seller, Aosom Direct. Their contact information can typically be found on your purchase receipt or the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question