



Manuals.plus /

› GRUSIGN /

› GRUSIGN 71-inch Pantry Cabinet with Charging Station (Model BG-CF-GREY) - Instruction Manual

GRUSIGN BG-CF-GREY

GRUSIGN 71-inch Pantry Cabinet with Charging Station

Model: BG-CF-GREY

Brand: GRUSIGN

[Introduction](#) [Safety Information](#) [Package Contents](#) [Assembly](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the assembly, operation, maintenance, and troubleshooting of your GRUSIGN 71-inch Pantry Cabinet with Charging Station. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation. This cabinet is designed to enhance kitchen organization with its large storage capacity, integrated charging hub, and adjustable shelving.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Always ensure the cabinet is stable and properly assembled before use.
- Do not overload shelves or the countertop. The countertop supports up to 90 lbs, and adjustable shelves handle 11 lbs each.
- Keep the charging station dry and free from debris.
- Unplug the charging station when not in use or during cleaning.
- Keep the cabinet away from heat sources and flammable materials.
- Always follow the manufacturer's instructions for assembly, use, and maintenance.
- Utilize the included anti-tipping device to secure the cabinet to a wall, preventing accidental tipping.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the included parts list in your assembly guide. If any parts are missing or damaged, contact customer service immediately.



Image: Overview of the GRUSIGN 71-inch Pantry Cabinet, showing its full structure and design.

4. ASSEMBLY INSTRUCTIONS

Assembly of the GRUSIGN Pantry Cabinet requires time and careful attention to detail. All necessary tools and a comprehensive instruction manual are included. For visual guidance, a detailed assembly video is available on the product page.

- 1. Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Group similar parts together.
- 2. Follow Step-by-Step Guide:** Adhere strictly to the numbered steps in the provided instruction manual. Do not skip steps.
- 3. Secure Connections:** Ensure all screws, cam locks, and dowels are securely fastened. Avoid over-tightening.
- 4. Door Alignment Adjustment:** If you encounter large gaps or misalignment issues with the doors, these can be resolved by adjusting the tension of the four screws on each hinge. Refer to the detailed instructions in the assembly manual or product page videos for guidance. This adjustment does not require re-assembly of the entire unit.

5. **Anti-Tipping Device:** For safety, always install the anti-tipping device to secure the cabinet to a wall.

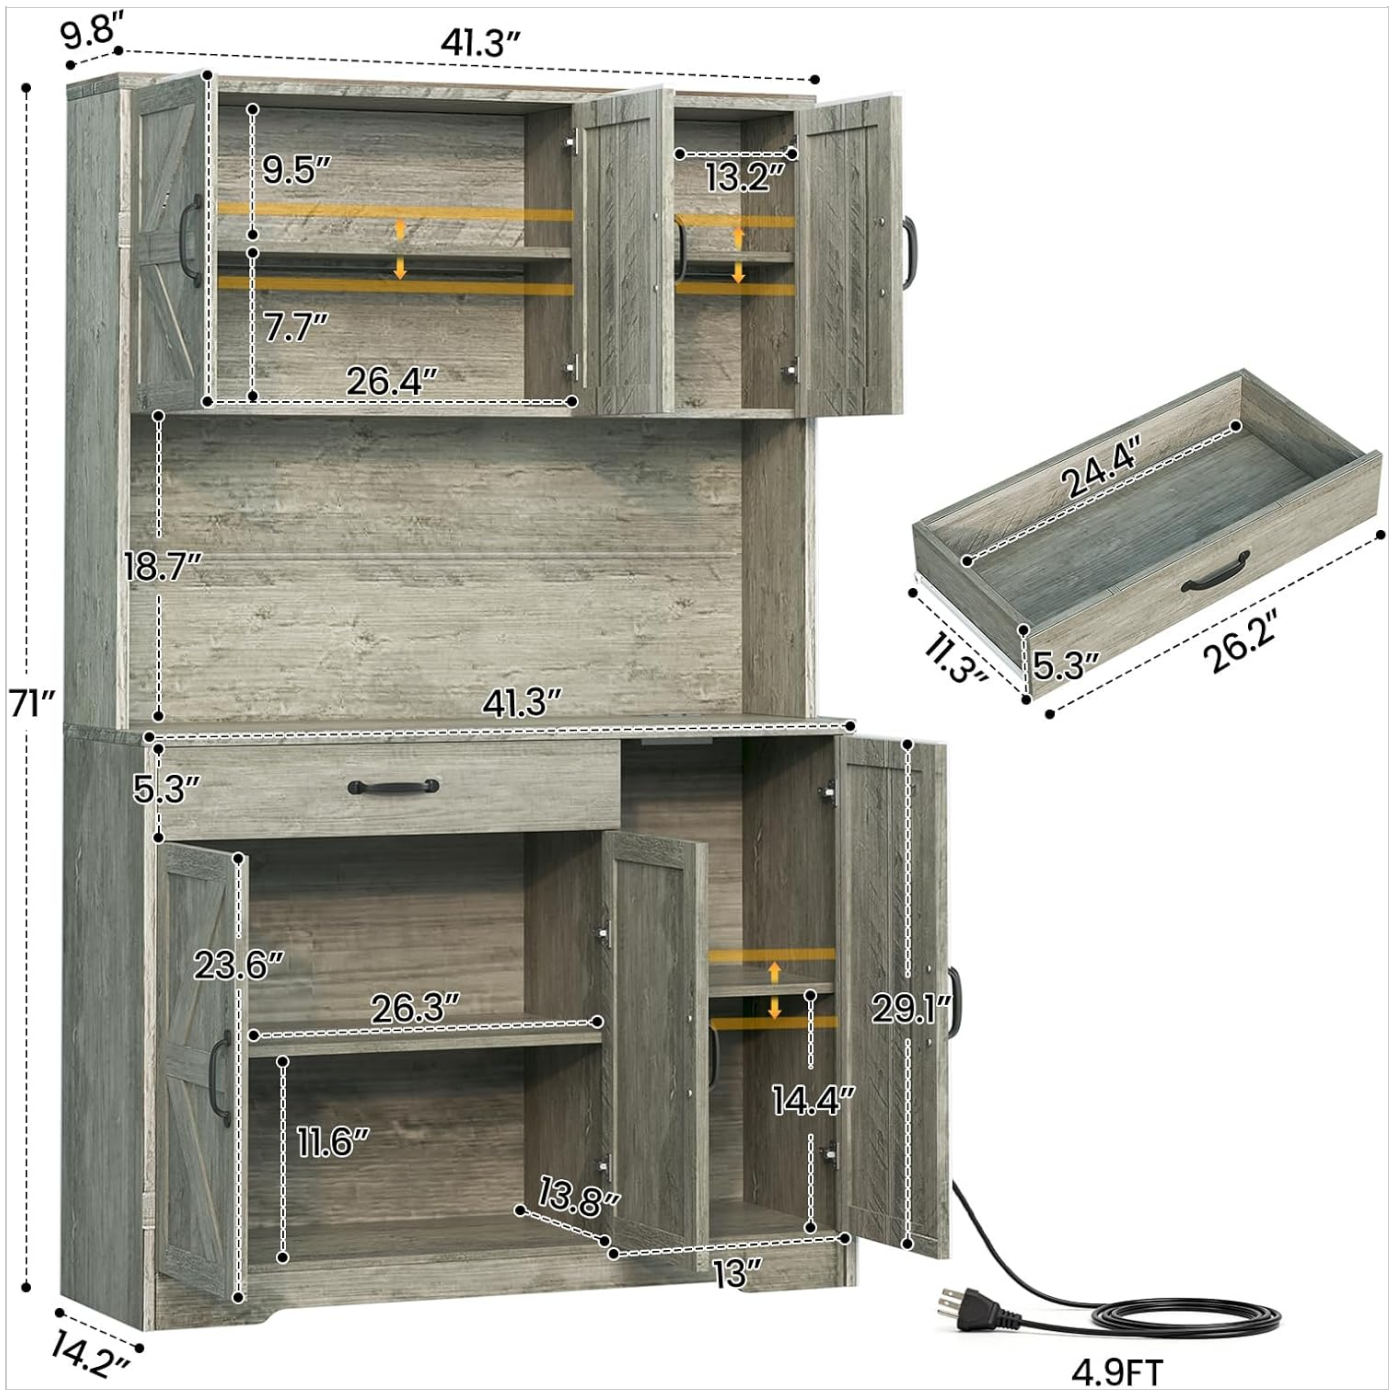


Image: Detailed dimensions and internal layout of the pantry cabinet, including drawer and shelf measurements.



Image: Reinforced wood panels, highlighting the sturdy construction of the cabinet.

5. OPERATING INSTRUCTIONS

5.1. Adjustable Shelving

The cabinet features customizable 3-level shelving in both upper and lower sections. To adjust a shelf, carefully remove it from its current position and reinsert it into the desired peg holes. Ensure the shelf is level and securely seated before placing items on it.



Image: Pantry cabinet with doors open, illustrating the adjustable shelves for customized storage.

5.2. Integrated Charging Station

The built-in charging station is located in the open middle section of the cabinet. It includes 2 AC outlets, 1 USB port, and 1 Type-C port. Use these ports to conveniently power small kitchen appliances or charge electronic devices. Always ensure appliances are compatible with the provided power specifications (120V/12A for AC outlets, 5V/2A for USB). Unplug devices when not in use.



Image: Close-up view of the integrated charging station, detailing the AC, USB, and Type-C ports.

5.3. Storage Drawers

The cabinet features smooth-gliding drawers for organized storage of utensils, small gadgets, or other items. Pull the handle gently to open and push to close. Avoid forcing the drawers.



Image: An open drawer showcasing its capacity for organizing kitchen utensils and small items.

6. MAINTENANCE

6.1. Cleaning

To clean the cabinet, wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish. For spills, wipe immediately to prevent staining. The cabinet surfaces are designed to be oil-resistant, stain-resistant, and scratch-proof.



High load-bearing



Waterproof and anti-corrosion



Oil-resistant and stain-resistant



Scratch-proof

Image: Visual demonstration of the cabinet's waterproof, oil-resistant, stain-resistant, and scratch-proof properties.

6.2. General Care

Regularly check all fasteners to ensure they remain tight. If the cabinet is moved, re-check the stability and door alignment. Avoid exposing the cabinet to excessive moisture or direct sunlight for prolonged periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Doors are misaligned or have gaps.	Hinge screws are not properly adjusted.	Adjust the tension of the four screws on each hinge. Refer to the detailed instructions in the assembly manual or product page videos for guidance.
Cabinet feels wobbly or unstable.	Fasteners are loose or anti-tipping device not installed.	Ensure all assembly fasteners are tightened. Install the anti-tipping device securely to a wall. Ensure the cabinet is on a level surface.
Charging station not working.	Power cord not plugged in, or device incompatibility.	Check if the cabinet's main power cord is securely plugged into a working wall outlet. Ensure your device is compatible with the charging station's specifications.
Drawers do not slide smoothly.	Obstruction in the drawer slides or misaligned slides.	Remove the drawer and check for any obstructions in the slides. Ensure the drawer slides are properly aligned and free of debris.

8. SPECIFICATIONS

Feature	Detail
Brand	GRUSIGN
Model Name	BG-CF-GREY
Color	Grey
Product Dimensions	15"D x 41.3"W x 71"H
Item Weight	111 Pounds
Material	Engineered Wood, Metal
Special Features	Adjustable Shelf, Anti-Tipping, Built-In Charging Station, Heavy Duty, Scratch Resistant
Charging Station	2 AC outlets (120V/12A), 1 USB port (5V/2A), 1 Type-C port
Countertop Weight Limit	90 lbs
Adjustable Shelf Weight Limit	11 lbs per shelf
Assembly Required	Yes

9. WARRANTY AND SUPPORT

GRUSIGN stands behind the quality of its products. For specific warranty details, please refer to the documentation included with your purchase or contact GRUSIGN customer service. If you have any questions regarding assembly, operation, or require technical assistance, our customer service team guarantees a reply within 24 hours. Please have your model number (BG-CF-GREY) and purchase information ready when contacting support.

You can also find additional video tutorials and support resources on the product page where you made your purchase.

