

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [WLIVE](#) /

> [WLIVE Handle-Operated Height Adjustable TV Stand with Hidden Casters, Wall-Mounted, for 32-75 Inch TVs, Model ADSJ619](#)

## WLIVE ADSJ619

# WLIVE Handle-Operated Height Adjustable TV Stand (Model: ADSJ619)

Instruction Manual

## INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your WLIVE Handle-Operated Height Adjustable TV Stand, Model ADSJ619. Please read this manual carefully before use to ensure safe and efficient operation. Keep this manual for future reference.

## SAFETY INFORMATION

- **Caution:** When assembling, be careful with small parts and sharp edges.
- When mounting the TV, ensure the total weight does not exceed the specified load capacity (Max 50KG for TV, Max 5KG for upper shelf, Max 30KG for base shelf).
- Ensure all screws are tightened securely before use.
- Do not allow children to climb on the TV stand.
- Place the stand on a stable, level surface to prevent tipping.
- Regularly check all connections and fasteners for tightness.

## PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. Refer to the assembly diagram for part identification.



ハンドル式・無段階昇降テレビスタンド  
シンプルでモダンなデザインと木目調が、  
お部屋の雰囲気ですっきりとなじみます♪

Image: Detailed view of all components included in the package.

## SETUP INSTRUCTIONS

Follow these steps to assemble your WLIVE TV Stand. It is recommended to have two people for assembly, especially when mounting the TV.

### Assembly Video Guide

For a visual guide on the assembly process, please watch the video below. It demonstrates each step in detail.

Your browser does not support the video tag.

Video: Step-by-step assembly instructions for the WLIVE TV Stand.

### Step-by-Step Assembly

- Step 1: Attach Base Feet.** Secure the five feet (Part 8) to the bottom of the base plate (Part 2) using the provided screws. Ensure they are tightly fastened for stability.
- Step 2: Assemble Main Support Pole.** Connect the main support pole (Part 1) to the base plate (Part 2) using the specified hardware (Parts B, J, G, L). Refer to the assembly diagram for correct orientation and screw placement.
- Step 3: Attach Brackets to Support Pole.** Attach the TV mounting brackets (Parts 6 and 7) to the main support pole using the provided screws (Parts N, C, D). Ensure the brackets are facing the correct direction as indicated in the diagram.
- Step 4: Install Shelves.** Attach the shelves (Part 3) to the main support pole using screws (Parts A, M). The height of the shelves can be adjusted later. Ensure they are securely fastened.
- Step 5: Attach Handle.** Attach the handle (Part K) to the designated slot on the main support pole using the provided screws (Parts L, E, K, F). This handle is used for height adjustment.
- Step 6: Prepare TV Mounting Plate.** Attach the TV mounting plate (Part 4) to the back of your TV using the appropriate VESA screws and washers (refer to the VESA compatibility table in the assembly video for correct screw selection). Ensure the arrow mark on the bracket is pointing upwards.
- Step 7: Mount TV to Stand.** Carefully lift your TV (with the mounting plate attached) and hook it onto the brackets (Parts 6 and 7) on the main support pole. Ensure the TV is centered and securely seated.
- Step 8-9: Secure TV.** Once the TV is hooked onto the brackets, use the safety screws (Part H) to secure the TV to the stand, preventing accidental dislodgement.
- Step 10: Cable Management.** Utilize the provided cable clips (Part I) to organize and secure cables along the back of the stand. Attach them to parts that do not move during height adjustment.
- Step 11: Store Handle.** After adjusting the height, the handle (Part K) can be stored in the dedicated slot at the top rear of the stand to prevent loss and maintain a clean look.

## OPERATING INSTRUCTIONS

---

### Height Adjustment

The TV stand features a handle-operated stepless height adjustment mechanism. To adjust the TV height:

1. Locate the adjustment handle on the side of the main support pole.
2. Rotate the handle to raise or lower the TV to your desired viewing height. The adjustment range is approximately 95.5cm to 165.5cm.
3. Once the desired height is reached, ensure the handle is securely in place.

# 手ぶらで調節！ハンドル式・無段階昇降テレビスタンド

テレビを外さずに、ハンドルを回すだけで、女性一人でもらくらく高さ調節可能です♪



Image: Demonstrating the handle-operated stepless height adjustment.

## Angle Rotation

The TV mount allows for angle adjustments to optimize your viewing experience:

- **Horizontal Rotation:** The TV can be rotated left and right by  $\pm 28$  degrees. Gently push the TV to the desired angle.
- **Vertical Tilt:** The TV can be tilted up and down by  $\pm 4$  degrees. Adjust the tilt by loosening the tilt mechanism, setting the angle, and re-tightening.

# ライルスタイルに合わせて快適な角度に

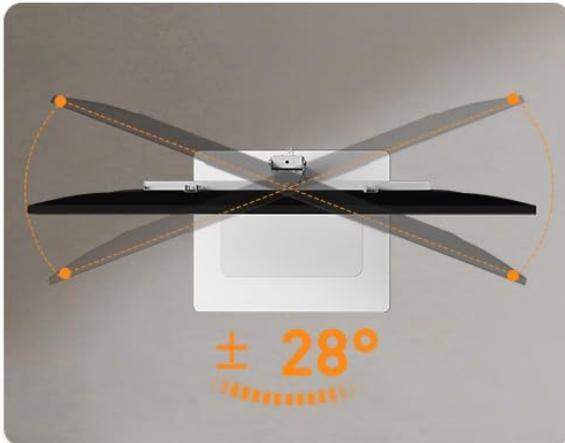


Image: Visual guide for adjusting TV viewing angles.

## Shelf Height Adjustment

The accessory shelf can be adjusted to 6 different height levels:

1. Remove any items from the shelf.
2. Loosen the screws securing the shelf to the main support pole.
3. Move the shelf to one of the six available positions.

4. Re-tighten the screws to secure the shelf at the new height.

## 棚板6段階高さ調節

置き棚の高さが6段階自由に調整可能。ゲーム機、ブルーレイレコーダー、スピーカーなど、様々な機器の高さに合わせて設置できます。



Image: Demonstrating the 6-level adjustable shelf.

### Mobility with Hidden Casters

The stand is equipped with hidden casters for easy movement. To move the stand:

1. Ensure the TV is securely mounted and all cables are managed to prevent snagging.
2. Gently push or pull the stand to its desired location.

3. The hidden casters allow for smooth movement across various floor types.

# 隠しキャスターで移動便利

キャスター付きで、お掃除もらくらくスイスイ移動。



Image: The TV stand with hidden casters for easy mobility.

## MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with mild soap, then dry thoroughly. Avoid harsh chemicals or abrasive cleaners.

- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Load Capacity:** Do not exceed the specified weight limits for the TV or shelves.
- **Storage:** If storing the handle, ensure it is placed in its designated slot to prevent loss.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
TV stand is wobbly.	Screws are loose; uneven floor.	Check and tighten all assembly screws. Ensure the stand is on a flat, stable surface.
Difficulty adjusting TV height.	Mechanism might be stiff; handle not properly engaged.	Ensure the handle is fully engaged. Apply gentle, consistent force. Do not force the mechanism.
Casters not rolling smoothly.	Debris in casters; casters damaged.	Clean any debris from the casters. If damaged, contact customer support for replacements.
TV not level after mounting.	Mounting brackets uneven; TV not centered.	Re-check TV mounting bracket installation. Adjust TV position on the brackets to ensure it is level.

## SPECIFICATIONS

- **Model:** ADSJ619
- **Brand:** WLIVE
- **Color:** White
- **Compatible TV Sizes:** 32-75 inches
- **Product Dimensions (L x W x H):** 40 x 60 x 111 cm (initial height)
- **Product Weight:** 12.78 kg
- **TV Load Capacity:** Max 50 kg
- **Upper Shelf Load Capacity:** Max 5 kg
- **Base Shelf Load Capacity:** Max 30 kg
- **Height Adjustment Range:** 95.5 cm to 165.5 cm (stepless, handle-operated)
- **Horizontal Rotation:**  $\pm 28$  degrees
- **Vertical Tilt:**  $\pm 4$  degrees
- **VESA Compatibility:** Horizontal 10-60cm, Vertical 10-40cm (mounting screws included)
- **Materials:** Synthetic resin laminated fiberboard (front panel, base, shelf), Steel (support pole)
- **Features:** Hidden casters, 6-level adjustable shelf, cable management.

# 32-75V取付け可能なテレビ

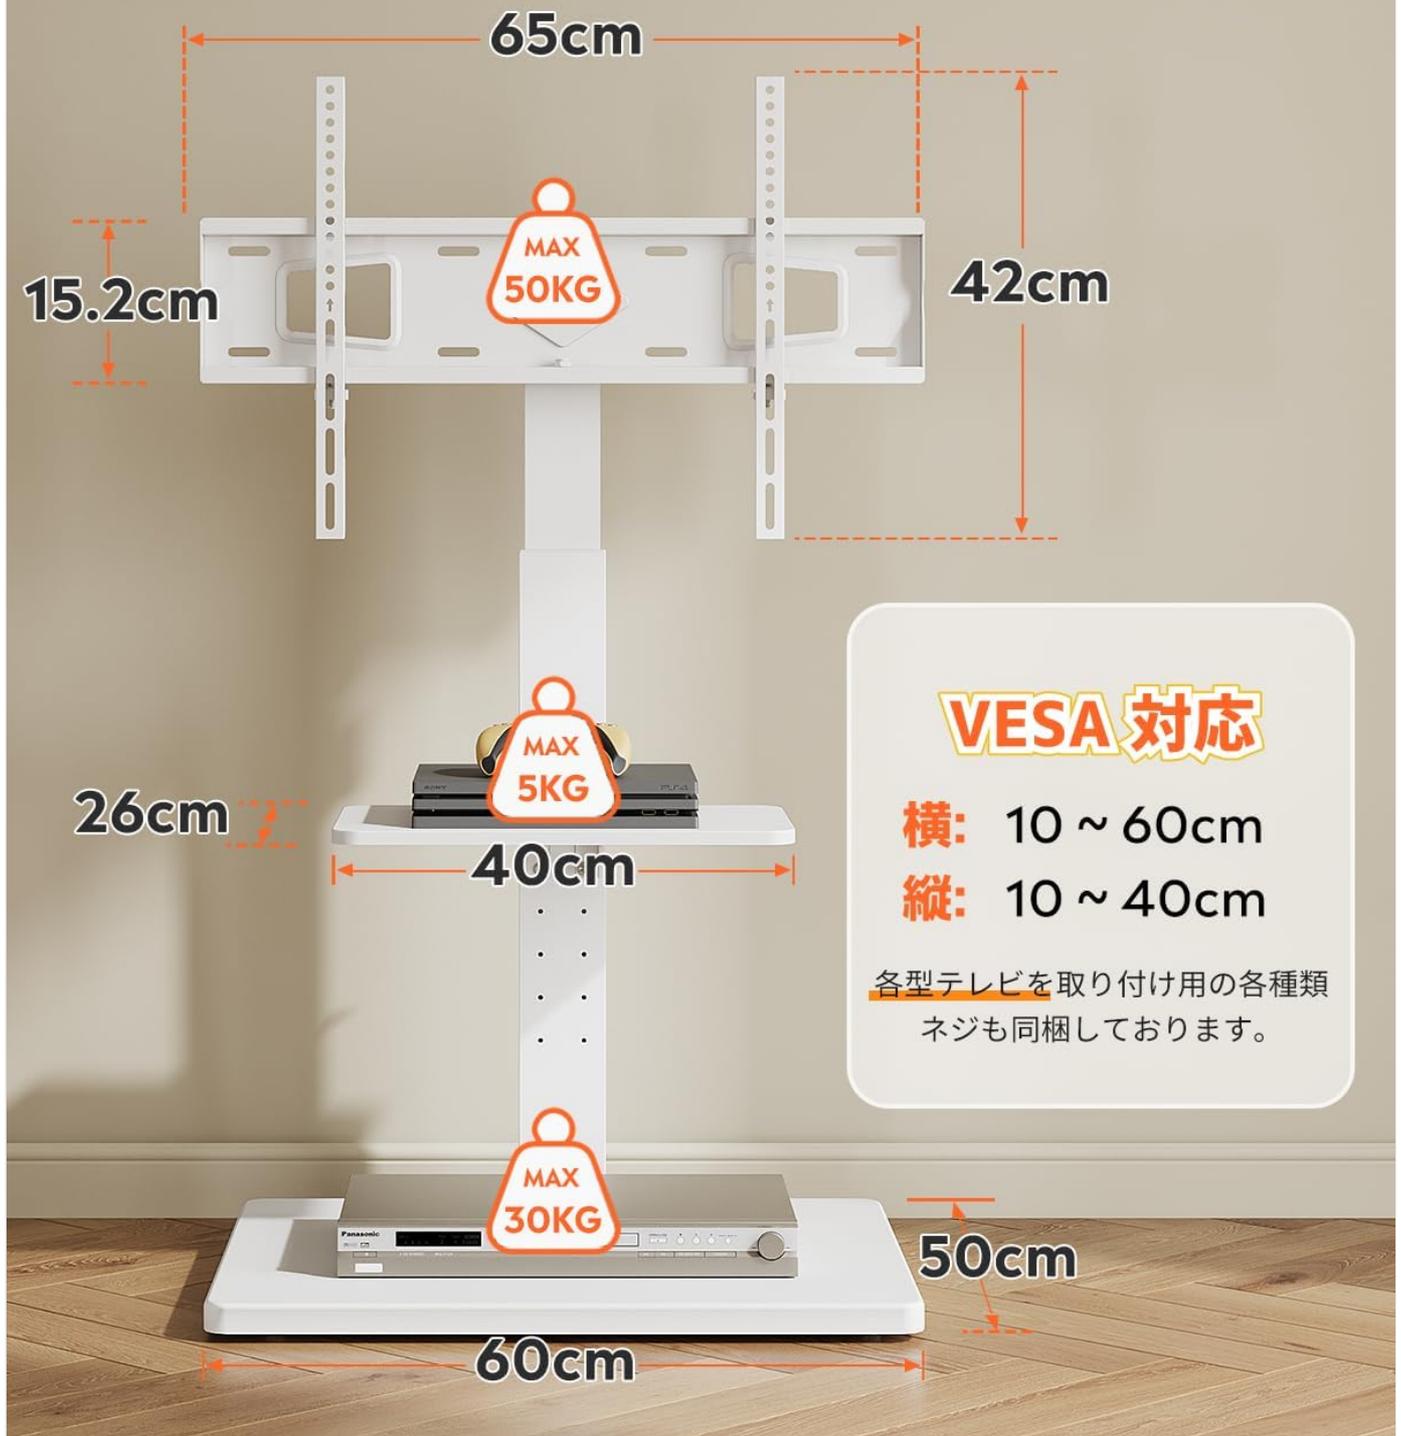


Image: Technical drawing with dimensions and load capacities.

## WARRANTY AND SUPPORT

WLIVE provides a one-year warranty for this product. For any questions, concerns, or warranty claims, please contact WLIVE customer support through your purchase platform or visit the official WLIVE store.

**WLIVE Official Store:** Visit [WLIVE Store on Amazon](#)



© 2026 WLIVE. All rights reserved.